



Features:

- Wirelessly connects your Wii U Pro controllers to your PC/PS3 or Amazon Fire TV.
- Bluetooth v2.1 with EDR (enhanced data rate) for superior wireless performance.
- Supports Turbo/Auto Fire function (see "Operation Notes")
- Supports the built-in Vibration Feedback with no delays.
- Supports "Games for Windows" proprietary input protocol.
- Functioning distance of up to 33 feet away from adapter.
- Plug and Play on PS3. No Turbo function and no Vibration Feedback when used on PS3.
- Input Switch with 2 input protocol modes for extra versatility.
- Direct Input (standard HID protocol) supports 4 controllers at the same time.
- Xinput (Xbox 360 controller protocol) supports one controller per individual adapter.
- Supports Amazon Fire TV under the Xinput mode (Info: The Dinput mode does not support Fire TV).
- All buttons (except for "Power" button), shoulder triggers, analog sticks and their "click-in" tops are fully functional.
- Compatible with Windows 98, XP, Vista and Windows 7 and Windows 8(32 bit and 64 bit versions).

HOW TO SET UP (For PC):

Step 1: Install the driver software from the included CD.
 Step 2: Plug the adapter into an empty USB slot on your PC.
 Step 3: For the initial syncing, press the "SYNC" button on the adapter itself and on the bottom of your controller, you'll find that the blue LEDs on your controller and the red LED on the adapter will flash quickly. Once the syncing process is complete, the LED on the adapter and your controller will stay lit. If set to DINPUT mode, the "Player Number" LEDs on your controllers will light up in the order in which your controllers have been synced to the adapter.

Step 4: Switch to "DINPUT" or "XINPUT" mode by using the switch located on the side.
 Step 5: To disconnect all controllers and turn off the adapter, press the Power button on your controller for 2 seconds.

HOW TO SET UP (For PS3):

Step 1: Switch to "Dinput" mode by using the switch located on the side.
 Step 2: Plug our adapter to your PS3 USB port.
 Step 3: For the initial syncing, press the "SYNC" button on the adapter itself and on the bottom of your controller, you'll find that the blue LEDs on your controller and the red LED on the adapter will flash quickly. Once the syncing process is complete, the LED on the adapter and your controller will stay lit.
 Step 4: To disconnect all controllers and turn off the adapter, press the Power button on your controller for 2 seconds.



TRADEMARKS ARE PROPERTY OF THEIR RESPECTIVE OWNERS