

Panoramic IP Camera Users Manual

 
1. Product Appearance :



Power adapter



Cable



chassis

2. Start using

2.1 APP usage (Android & ios)



AndroidAPP



AppleAPP

Download Panoramic IP camera APP "YL Pano IPC" by scanning QR code , or download "YL Pano IPC" and install it in Android App Store/ ios App Store .

2.2. Panoramic IP camera Power On

Plug cable into USB port of device . After power on, the indicator light is steady red. After a few seconds, device enters into waiting status and the indicator light flashes red.

Note: Be sure to use standard 5V/1A adapter. Other irregular adapter may cause failure.

2.3. Adding Panoramic IP Camera

Open "YL Pano IPC" app, select "Connect", enter login interface, click on the registered account, you can use mobile phone number or email to register the account. After registration completed, please return to the login interface, enter the account and Password, click Login. Then follow app's instructions to connect the process. After the connection is successful, the indicator will turn green.

Note: 1. If you have other questions, click "Mine" option, click "Help" and then click "Panoramic IP camera"

A. Device connection problem

B. Function setting problem.

C. TF card usage problem,

D. Panoramic IP Camera sharing problem ,

E. Social platform sharing questions

2. Please remember to register your account number and password.

3. To replace the network, please press "reset "button or login APP to switch the network.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.