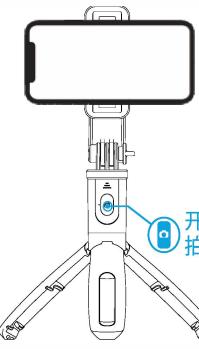
 
 
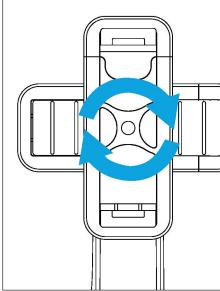
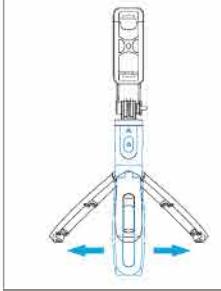
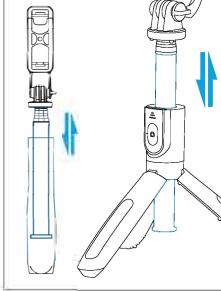
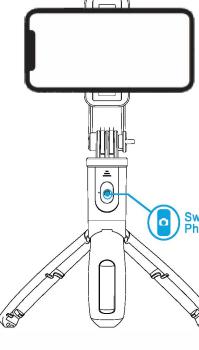
 
 
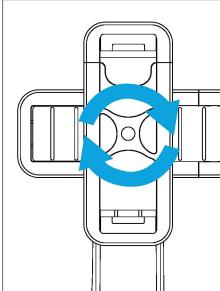
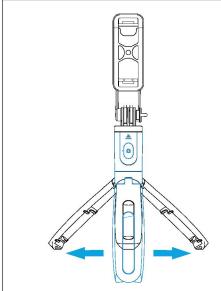
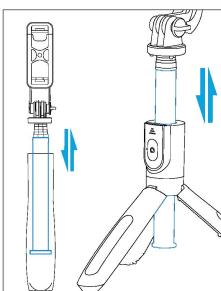


<p>Selfie Stick 自拍杆</p>  <p>使用说明</p>	 <p>兼容 <input checked="" type="checkbox"/> iOS <input checked="" type="checkbox"/> Android</p>	<p>怎样使用</p> <ol style="list-style-type: none"> 1. 开关机:长按拍照键开关机; 2. 蓝牙配对:指示灯快闪进入配对状态,配对状态蓝色指示灯闪烁,使用手机搜索“Selfie”来匹配,配对成功后蓝色指示灯熄灭; 3. 拍照:自拍杆与手机处于连接状态时,短按拍照键,指示灯闪烁; 4. 无配对:开机后,在无配对连接状态下,无操作5分钟自动关机; 5. 自动连接:开机后如上一次已配对手机蓝牙是打开状态,直接自动连接 <p>取出自拍器 先拉出杆子再向上滑动即可取出自拍器。</p>  <p>怎样更换电池 从两侧中任何一侧的凹槽缝抠出来即可打开遥控器盖。</p> 	<p>夹子可360°旋转 自由翻转,横竖拍实现多角度拍照,拍照更随心。</p> 	<p>怎样打开三脚架 在手柄的位置向外打开,即可变成三脚架模式。</p> 	<p>三脚架模式 自拍杆变三脚架模式时候,注意将杆子最后一节拉出并调整至三脚架稳固。</p> 	<p>规格</p> <ul style="list-style-type: none"> · 自拍器型号:TOKQIG01 · 主要材料:ABS+不锈钢 · 收纳长度:190mm · 拉伸长度:1020mm · 产品尺寸:190x45x35mm · 产品重量:162g · 电池:CR1632(可更换) <p>(电池不得暴露在诸如日照、火烤或类似过热环境中)</p> <p>提醒 自拍杆兼容Android4.4以上和iOS5.1以上 (Android设备:如果你在相机选项下改变了你的“音量键功能”,一定要把它改成默认,或者“拍照”让自拍杆正常工作)</p> <p>感谢您的支持!</p> 
<p>Selfie Stick Selfie Stick</p>  <p>User Manual</p>	 <p>Compatible <input checked="" type="checkbox"/> iOS <input checked="" type="checkbox"/> Android</p>	<p>How to use</p> <ol style="list-style-type: none"> 1. Switch on and off: press and hold the camera button to switch on and off; 2. Wireless pairing: the indicator light flashes quickly to enter the pairing state, the blue indicator light flashes, search for “Selfie”, and the blue indicator light will turn off after the pairing is successful; 3. Take a photo: When the connection is successful, short press the camera button and the indicator light will flash. 4. No pairing: After powering on, in the state of no pairing connection, it will automatically shut down if there is no operation for 5 mins; 5. Automatic connection: After powering on, if it has been connected with the paired mobile phone, it will be connected directly and automatically! <p>Remove the remote control Pull out the lever and slide it up to take out the remote control.</p>  <p>How to replace the battery The remote control cover can be open from the grooves on both sides.</p> 	<p>360°rotary clip Free to flip take pictures from multiple angles,take photos more freely.</p> 	<p>How to open a tripod Open the handle outwards to turn it into tripod mode.</p> 	<p>Tripod mode When the selfie stick is changed to tripod mode, pay attention to pull out the last section of the stick and adjust it until the tripod is stable.</p> 	<p>Specifications</p> <ul style="list-style-type: none"> · Remote Model:TOKQIG01 · Main Material: ABS +Stainless Steel · Folded Length:190mm · Extended Length:1020mm · Product Size: 190x45x35mm · Product Weight: 162g · Battery: CR1632 (replaceable) <p>(Batteries must not be exposed to sunlight, fire or similar excessive heat)</p> <p>REMIND The selfie stick is compatible with Android4.4 and above & iOS 5.1 and above. (Android device: If you change your volumekey function on the camera, be sure to change it to the default value. Or take a picture and let the selfie stick to work normally)</p> <p>Thank you for your support!</p> 

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.