

**SYLVANIA**

## **USER MANUAL**

### **WIRELESS QI CHARGING BLUETOOTH ALARM CLOCK**



**ITEM NO.: SCR0932**

Please read and follow this instruction manual carefully before using the unit and retain it for future reference

## **WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

<b>CAUTION</b>	
<b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b>	
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions carefully.
2. Keep these instructions in a safe place.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this product during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement


This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.

For service assistance and product information, please call: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 [www.curtisint.com](http://www.curtisint.com)

## UNIT BUTTONS

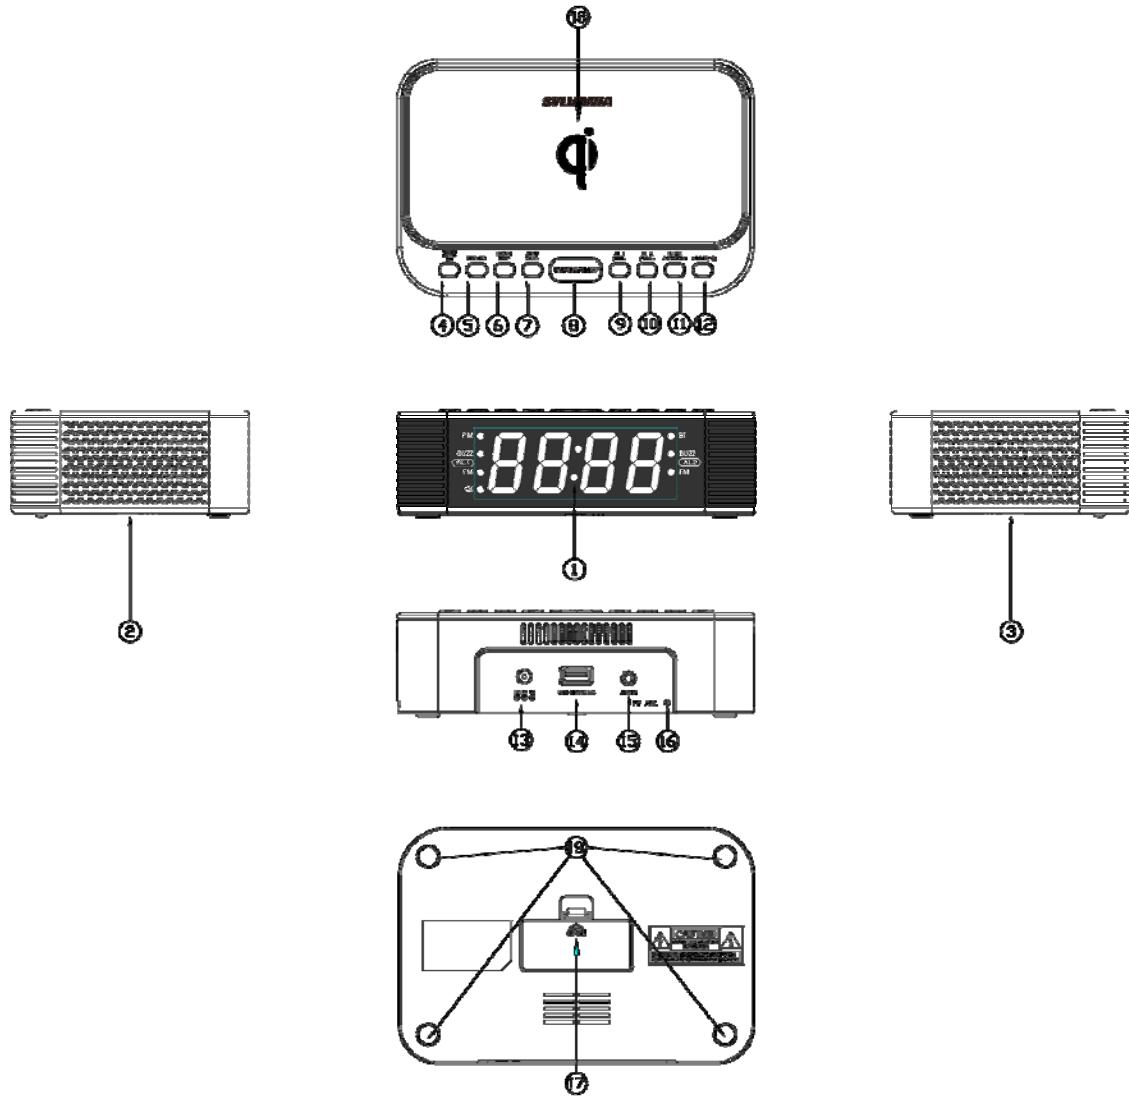

1. LED display
2. Left speaker
3. Right speaker
4. CLOCK/MEM./ PLAY/PAUSE Button
5. DIMMER Button
6. HOUR/SKIP- Button
7. MIN/SKIP+ Button
8. SNOOZE/SLEEP Button
9. AL 1/VOL- Button
10. AL 2/VOL+ Button
11. FUNC./Auto scan Button
12. POWER/AL OFF Button
13. DC IN 5V jack

- 14.USB CHARGING Port**
- 15.AUX IN Jack**
- 16.FM Antenna**
- 17.Battery door**
- 18.QI Charging position**
- 19.Rubber feet**

## **SET TIME/YEAR/MONTH/DAY**

1. Power on the unit, the display will be blinking. Now in the TIME SET mode, press [HOUR/SKIP-] button to set the hour, press [MIN/SKIP+] button to set the minutes, press and hold [CLOCK/MEM.] button for 2-3 seconds in the YEAR SET mode (year range: 2000-2099), press [HOUR/SKIP-] button to decrease the year, press [MIN/SKIP+] button to increase the year, press [CLOCK/MEM.] button to confirm the year set then in the MONTH/DAY SET mode, press [HOUR/SKIP-] button to increase the month and press [MIN/SKIP+] button to increase the day, press [CLOCK/MEM.] button to confirm the month/day set then exit the time set mode. The unit will auto-exit the set mode if you do not press any buttons for 5 seconds
2. Under standby mode, press and hold [CLOCK/MEM.] button for 2-3 seconds, the LED will start blinking, the unit enters time set mode. Setting method same as above

## **ALARM SET**

1. Under standby mode, press and hold [AL.1/VOL-] button, the “AL.1-BUZZ” indicator and time will start blinking, the default alarm time is 12:00AM, press [HOUR/SKIP-] button to adjust the hour, press [MIN/SKIP+] button to adjust the minute, press [AL.1/VOL-] button confirm the set then into the repeat date set, press [HOUR/SKIP-] button and [MIN/SKIP+] button can select “WEEK 1-7”, “WEEK 1-5”, “WEEK 6-7”, press [AL.1/VOL-] button to confirm the set then exit the set mode, the alarm will be activated.
2. Under standby mode, press [AL.1/VOL-] button, you can select BUZZER→RADIO→ALM OFF. If you not press the [AL.1/VOL-] button for 5 seconds, the unit will auto confirm the alarm and exit the set mode
3. When the alarm is activated, if you don't press any buttons, the alarm will auto-stop after continued for 1 hour, press [AL. OFF/POWER] button can turn off the alarm. The related indicator will be blinking when the alarm is activated
4. Alarm 2 set same as Alarm 1

## **SNOOZE FUNCTION**

When alarm is activated, press [SNOOZE/SLEEP] button into snooze mode, the alarm will be activated again after 9 minutes, continued for 60 minutes, press [AL. OFF/POWER] button to turn off the alarm

## **RADIO MODE**

1. Press [AL. OFF/POWER] button to turn on the unit, the “FM” is the default mode
2. Manual searching: short press [HOUR/SKIP-] button or [MIN/SKIP+] button to manually adjust the FM stations
3. Auto-searching: press and hold the [HOUR/SKIP-] button or [MIN/SKIP+] button to auto adjust the FM stations
4. Memory Set to obtain the stations: short press [CLOCK/MEM.] button to save the pre-set station, the display will show “P01”, press [CLOCK/MEM.] button again to save the next pre-set station, also you can press [HOUR/SKIP-] button or [MIN/SKIP+] button to select the pre-set stations. The display will show station frequency 5 seconds later, and will exit the time display if you don't press any buttons for 5 seconds
5. Store the stations: select the station which you need stored, press and hold [CLOCK/MEM.] button for 2-3 seconds, “P01” on LED display will blinking, press [HOUR/SKIP-] button or [MIN/SKIP+] button to select the stored position, press [CLOCK/MEM.] button to confirm
6. Auto storage the stations: press and hold [FUNC./Auto-scan] button, the unit can auto search the stations from 87.5MHz to 108MHz, and auto store the searched stations. Can storage total 10 stations

## **AUTO POWER OFF (SLEEP MODE)**

Under any mode, press [SNOOZE/SLEEP] button, LED will show “90”. Under standby mode, you can continue press [SNOOZE/SLEEP] button to select sleep time from “90→80→70→60→50→40→30→20→10→OFF”, 5 seconds after you set the sleep time, will auto confirm the set and activate the AUTO POWER OFF function. If you need to power off midway, press the [AL. OFF/POWER] button; check or change the auto power off time, after activating the auto power off function, press [SNOOZE/SLEEP] button again, the LED will show the rest auto power off time, press [SNOOZE/SLEEP] button again can select the next level auto power off time (Such as: if originally you set “30”, after 2 minutes, you check the LED will show the rest 28 minutes, if you press [SNOOZE/SLEEP] button again, at this time, the auto power off time will become “40”). If you need turn off the auto power off function, repeat press [SNOOZE/SLEEP] button, until the LED show “OFF”

## **VOLUME CONTROL**

Press [AL.1/VOL-] button or [AL2/VOL+] button to adjust to your desired volume, the volume has a total “0-16” levels, the default volume is 8 level

## **TIME BACKUP**

Install 2pcs AAA 1. 5V batteries (not included). In case of power failure the clock time will continue. If no backup batteries are inserted the time will recover to a blinking “12:00” or “0:00”after power failure.

## **DIMMER FUNCTION**

You can press the [DIM] button to select the dimmer level from “low to high” level, the default dimmer is low level

## **WIRELESS CHARGING FUNCTION**

When a wireless charging compatible device is put on top of the clock radio, the indicator “QI” of the clock display will be lit. the indicator will be off when no device is charged.

## **BLUETOOTH MODE**

Press [FUNC./Auto-scan] button to move into Bluetooth mode. The light next to BT icon will be lit. To connect the external audio device, search for Bluetooth device name **SYLVANIA SCR0932** on your phone to pair. Once paired, the unit will play music, you can press [AL.1/VOL-] button or [AL2/VOL+] button to adjust to your desired volume, press [HOUR/SKIP-] button or [MIN/SKIP+] button to select the tracks, press [PLAY/PAUSE/PAIR] button to play or pause, press and hold [PLAY/PAUSE/PAIR] button for 2-3 seconds can disconnect the Bluetooth

Bluetooth indicator: will blink slowly if no connected, and will light steadily if connected

Bluetooth device name: **SYLVANIA SCR0932**

## **USB CHARGING**

The USB port will support USB charging, output: 5V 1A. This port is useful for charging non wireless enabled devices.

## **AUX MODE**

Under FM mode, press [FUNC./Auto-scan] button into AUX mode, connect up the external sound, the unit will play music, you can press [VOL-] button or [VOL+] button to the desired volume

To make a warranty claim, do not return this product to the store. Please email [support@curtiscs.com](mailto:support@curtiscs.com) or call 1-800-968-9853.

#### 90 day Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does *not* cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.