





UOs Baby Monitor

User Manual







IMPORTANT: Read Before Using

Table of Content	
1. Safety Instructions	01
2. Overview	03
2.1 What's in the Box	03
2.2 Product Overview	04
2.3 Specifications	05
2.4 Menu Options	06
3. Getting Started	07
3.1 Charging and Powering in the Monitor	07
3.1.1 Turn on the Camera Unit	08
3.1.2 Turn on the Monitor Unit	08
3.2 Placement of the Baby Monitor	08
3.3 Registration (Pairing)	09
4. Using the Simyke UOs Baby Monitor	09
4.1 OSD Mode Operation	09
4.1.1 Power Save/Screen Off/Sleep Mode	09
4.1.2 Volume Adjustment	10
4.1.3 Brightness Adjustment	10
4.1.4 Digital Zoom & Pan/Tilt	10
4.1.5 Talk to Baby	10
4.1.6 Infrared Night Vision (Automatic)	10
4.2 Menu Operation	11
4.2.1 Lullaby Setting	11
4.2.2 Alarm Setting	11
4.2.3 VOX Setting	11
4.2.4 Camera Control	12
4.2.4.1 Add (Pair) a Camera	12
4.2.4.2 Delete a Camera	13
4.2.4.3 View a Camera	13
4.2.4.4 Scan Camera	14
4.2.5 Warning Volume Setting	14
4.2.6 Calendar Setting	15
4.2.7 Temperature Unit Setting	15
5. Customer Service	15

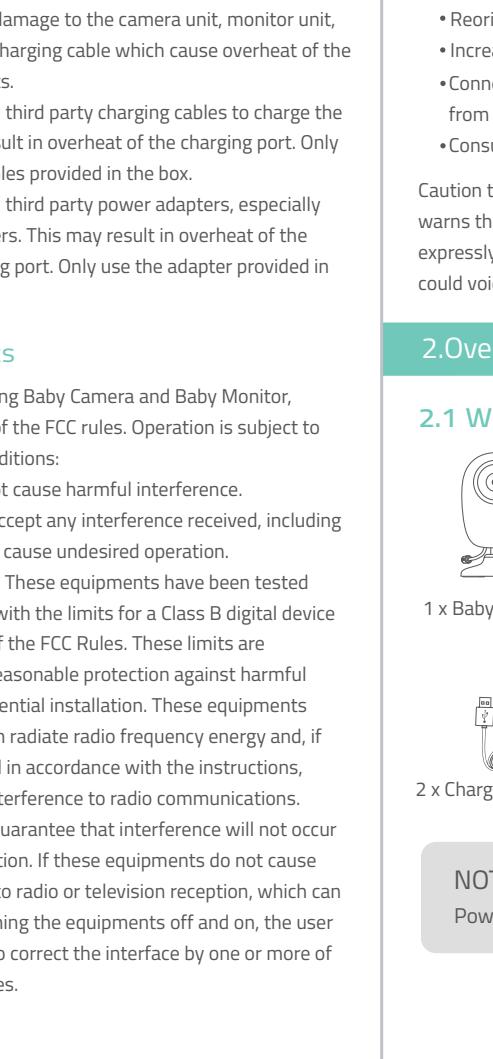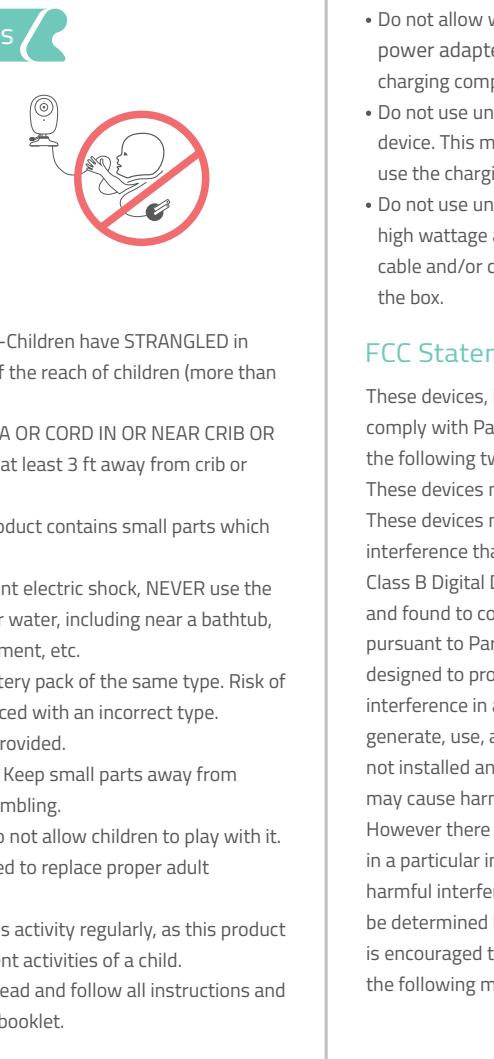

- Do not allow water damage to the camera unit, monitor unit, power adapter, or charging cable which cause overheating of the charging components.
- Do not use unofficial third party charging cables to charge the device. This may result in overheating of the charging port. Only use the charging cables provided in the box.
- Do not use unofficial third party power adapters, especially high wattage adapters. This may result in overheating of the cable and/or charging port. Only use the adapter provided in the box.

Caution to the user. The Federal Communications Commission warns the users that changes or modifications of the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

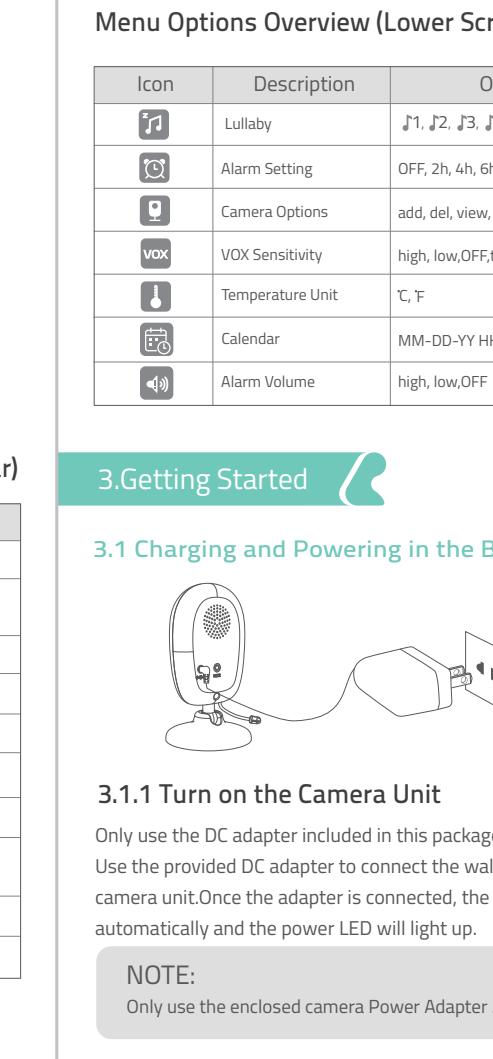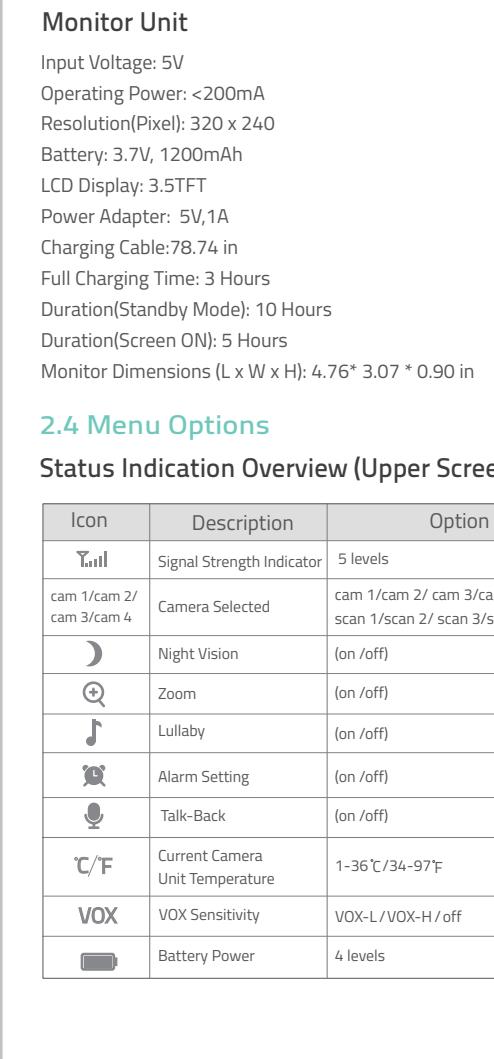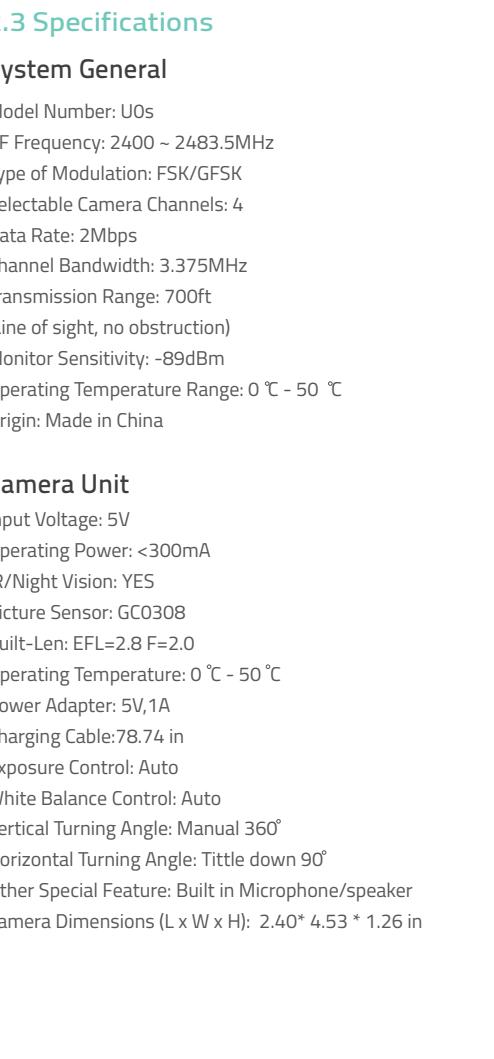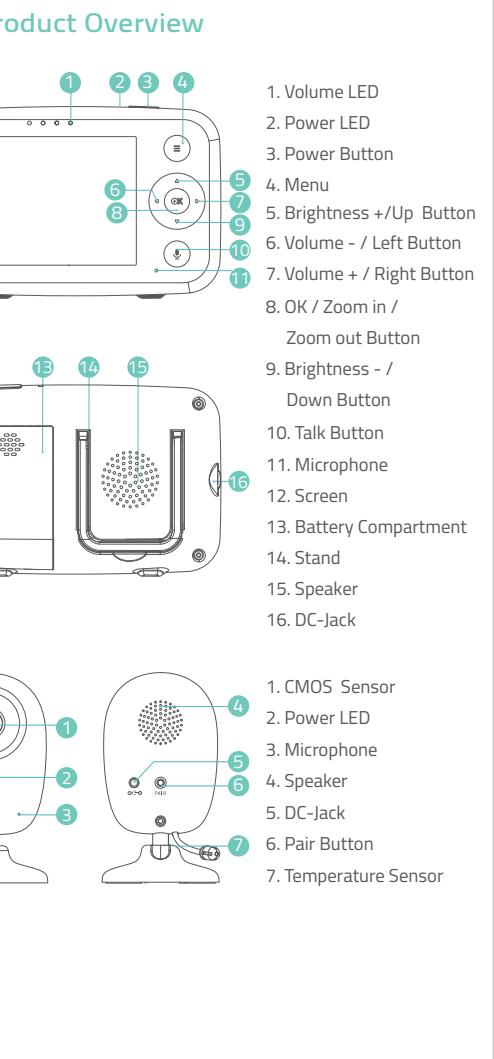

3.1.2 Turn on the Monitor Unit

*Only use the DC adapter included in this package.

*The monitor unit is supplied with a built-in rechargeable Li-ion battery.

We suggest to connect the monitor to the adapter plugged into the mains whenever possible, in order to keep the battery charged.

Press and hold the  POWER button on the right side of the monitor unit.

Once monitor unit turned on, the power LED will light up and the image will display on the LCD screen.

3.2 Placement of the Baby Monitor

This camera can be placed on a tabletop or hung on the wall. Place the baby monitor in a place where the air can circulate freely. Do not place on soft quilts or blankets or in the corners of cupboards, shelves, etc.

Place the baby monitor away from heat sources such as radiators, chimneys, cookers and direct sunlight.

Place the camera unit away from TV sets, microwave oven and radios. The intense radio signals generated by these elements could cause noise or even deteriorate sounds and images which appear on the monitor. If this occurs, move the camera to another location.

•Place the camera within 15 feet of the area being monitored for best picture result.

•Baby monitors and cameras with power cords should never be hung on or near the crib as it can cause strangulation hazard. Power cords should be kept no less than 3 ft away from the crib and the baby's reach at all times.

3.3 Registration (Pairing)

The camera unit is pre-registered to your monitor unit. You do not need to register it again unless the camera unit loses its pairing with the monitor unit. To re-register your camera unit, or register a new camera unit, follow the procedure below:

1. Press the  MENU button of the monitor unit and the menu bar will show. Press the  DOWN button to decrease the brightness.

2. Press the  LEFT button or  RIGHT button until cam icon is highlighted.

3. Press the  UP button or  DOWN button until ADD icon is highlighted and press the  OK button.

4. Press the  UP button or  DOWN button to select the desired cam and press the  OK button to start searching for a camera unit.

5. Press and hold the PAIR button in the back of the camera unit for at least 3 seconds. The power LED light should flash to indicate the camera unit is in pairing mode. If it does not flash press and hold the PAIR button until the LED light flashes.

NOTE:

If a particular camera unit was previously registered with another monitor unit, registering with the current monitor unit will overwrite the old registration on the camera unit.

4. Using the Simyke UOs Baby Monitor

4.1 OSD Mode Operation

4.1.1 Power Save/Screen Off/Sleep Mode

Press the  POWER button to get into the sleep mode. Long press the  POWER button to turn on/off the screen.

4.1.2 Volume Adjustment

Press the  RIGHT button to increase the volume. Press the  LEFT button to decrease the volume.

4.1.3 Brightness Adjustment

Press the  UP button to increase the brightness. Press the  DOWN button to decrease the brightness.

4.1.4 Digital Zoom & Pan/Tilt

Long press the  OK button to zoom in then press the  OK button to zoom out.

At the zoom mode, press the  LEFT button to pan left. Press the  UP button to tilt up. Press the  DOWN button to tilt down. During zoom mode (the zoom icon  will be displayed on the top of the screen).

NOTE:

If you want to adjust the volume/brightness, you have to exit the zoom mode before you operate it.

4.1.5 Talk to Baby

To talk, press and hold the  TALK button on the front of the monitor. Release the button when you have finished talking and listening to the sound from the baby's room again. Bear in mind that you will not be able to listen to your baby whilst talking to the monitor. You will have to stop pressing this button when listening to your baby. When you are using this function, the  talk icon will be displayed on the top of the screen.

4.1.6 Infrared Night Vision (Automatic)

The infrared night vision function allows the camera to pick up images of your baby or the monitored area in dark or low light conditions. When using the night vision mode, only black and white images will be displayed on the monitor. (When the camera is in night vision mode, the  night vision icon will be displayed on the top of the screen). Follow the instructions on the next page:

4.2 Menu Operation

If a particular camera unit was previously registered with another monitor unit, registering with the current monitor unit will overwrite the old registration on the camera unit.

4.2.1 Lullaby Setting

1. Press the  MENU button and the menu will show. Press the  LEFT button or  RIGHT button until the  vox icon is highlighted, then press the  UP button or  DOWN button to select desired level. Press the  OK button to confirm.

2. Press the  LEFT button or  RIGHT button until the  lullaby icon is highlighted.

3. Press the  UP button or  DOWN button to select one of the 6 available lullabies, single or sequential playing.

4. Press the  MENU button to Exit.

NOTE:

•Once the lullaby starts playing on, the lullaby icon will display on the top of the screen.
•Single playing will last 15 minutes each time.
•Lullaby sequential playing function will play all the lullabies each time.

4.2.2 Alarm Setting

1. Press the  MENU button and the menu bar will show. 2. Press the  LEFT button or  RIGHT button until the  alarm icon is highlighted.

3. Press the  UP button or  DOWN button to select the desired time from 2h, 4h, 6h and OFF. (The default setting is OFF). Press the  OK button to confirm.

4.2.3 VOX Setting

This mode allows you to control the sound activation of your baby monitor. If there is no sound around the camera within 30 seconds or 60 seconds, it will stop the transmission. The monitor screen will turn off when the camera is not transmitting. When the camera detects the sound exceeding the sensitivity level, it will start transmitting the signal to the monitor and alert the user. To change the VOX level, please follow the instructions on the next page:

4.2.4 Camera Control

1. Press the  MENU button and the menu bar will show. 2. Press the  LEFT button or  RIGHT button until the  cam icon is highlighted.

3. Press the  UP button or  DOWN button until the  add icon is highlighted and press the  OK button.

4. Press the  UP button or  DOWN button to select the desired cam and press the  OK button to start searching for a camera unit.

5. Press the  UP button or  DOWN button to select the desired camera unit to view.

4.2.4.1 Add (Pair) a Camera

1. Press the  MENU button and the menu bar will show. 2. Press the  LEFT button or  RIGHT button until the  cam icon is highlighted and the del/add/view/scan menu will show.

3. Back to previous menu and Press the  UP button or  DOWN button until the  time icon is highlighted, then press the  OK button to start changing the date.

4. Press the  LEFT button or  RIGHT button until the  date icon is highlighted and the del/add/view/scan menu will show.

5. Press the  UP button or  DOWN button to select the  scan icon, and press the  OK button to confirm.

6. Press the  UP button or  DOWN button to select the  cam icon is highlighted and the del/add/view/scan menu will show.

NOTE:

•VOX-L is low sensitivity level.
•VOX-H is high sensitivity level.

NOTE:

When in the scan mode, the monitor will stop scanning and alert you if the camera unit is out of range or is not powered on.

NOTE:

When in the scan mode, the monitor unit will stop scanning and alert you if the camera unit is out of range or is not powered on.

4.2.5 Warning/Volume Setting

This controls the volume of an audio beeps from the monitor unit to alert you when the unit is out of range or off range.

1. Press the  MENU button and the menu bar will show. 2. Press the  LEFT button or  RIGHT button until the  cam icon is highlighted.

3. Press the  UP button or  DOWN button until the  add icon is highlighted and press the  OK button.

4. Press the  UP button or  DOWN button to select the  volume icon is highlighted.

5. Press the  UP button or  DOWN button to select the  high/low icon.

6. Press and hold the PAIR button on the back of the camera unit for at least 3 seconds. The power LED light should flash to indicate the camera unit is in pairing mode. If it does not flash, press and hold the PAIR button until the LED light flashes.

4.2.6 Calendar Setting

1. Press the  MENU button and the menu bar will show. 2. Press the  LEFT button or  RIGHT button until the  vox icon is highlighted, then press the  UP button or  DOWN button to select desired level. Press the  OK button to confirm.

3. Press the  LEFT button or  RIGHT button until the  calendar icon is highlighted and the calendar will show.

4. Press the  LEFT button or  RIGHT button until the  date icon is highlighted and the date changing date.

5. Press the  LEFT button or  RIGHT button until the  time icon is highlighted, then press the  OK button to select the date and time.

6. Press the  LEFT button or  RIGHT button until the <img alt="date icon" data-bbox="784 279 794 2