

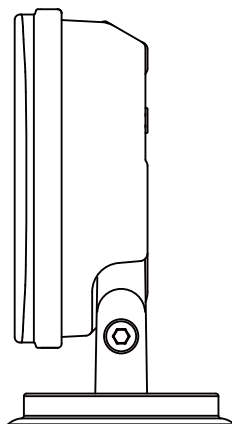


Instruction For LED Wireless Trailer Light

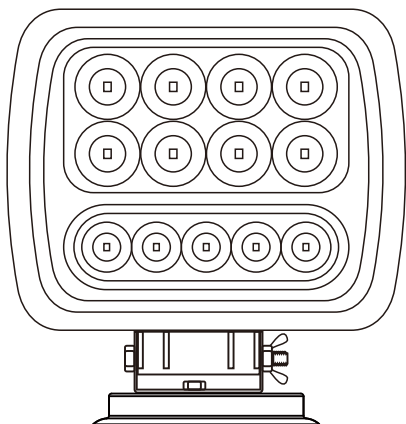

WARNING

Do not look directly into LEDs while in operation; may cause momentary blindness and/or eye damage
Do not touch lights until they cool down after working

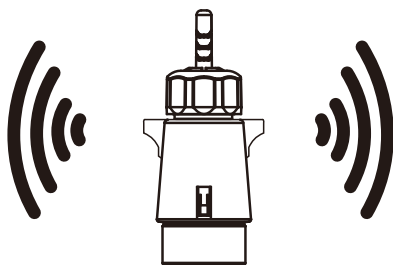

1.Specification

Charging voltage	DC5V	
Working Frequency	2.4G	
Radio communication range	20Meters	
Battery capacity	3.7V/2200mA	
Charging time	2~3 hours	
Waterproof level	IP65	
Operation temperature	-10°C ~ 50°C	
Working time	100%	10h
	50%	5h
	25%	2h

Cautions



Please check the battery status,ensure the lights are full charging before using


Please check each function work normally before using

If the lights are not in use, please check the battery every 6month


The code matching process must be imposed on the replacement light or additional light

Regular checking the lights after long-time using

2.Kits Including

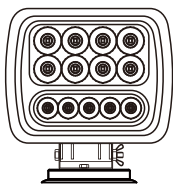

LH Light X1

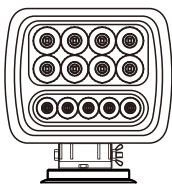

RH Light X1



Transmitter X1




Charging cable X1



Car Charger X1

3.Instruction of Light

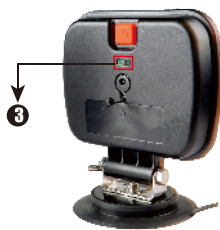

1 On/Off Switch

2 Charging Port

3 Battery Indicator

4.Battery Checking



100%

80%

50%

25%



When the red light of the indicator is flashing , for your safety ,please charge the light





5. Installation Guidance


① Plug the transmitter into the Socket on the vehicles




② Turn on the RH & LH light

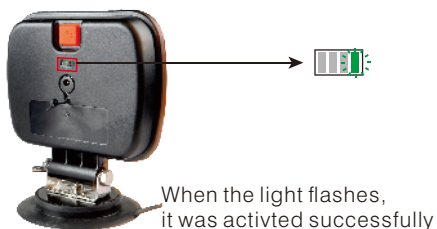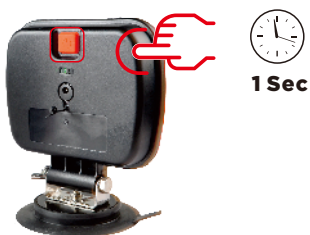

③ Start the engine

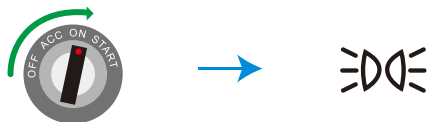

④ Testing

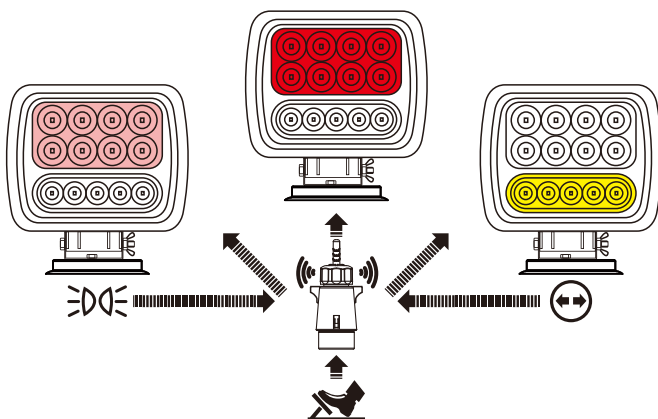

⑤ Mount the RH & LH light on the metal surface of vehicles

Notice


If you want to replace one single light of the original set by a new light, the code matching process is necessary, please refer to the "code matching process" in the appendix in this brochure





Appendix

Code Matching Process

1. Make sure the transmitter already been installed successfully and work normally .
2. Start the engine, Then turn on the tail light(turn light, tail light, brake light , any light is suitable for code matching)

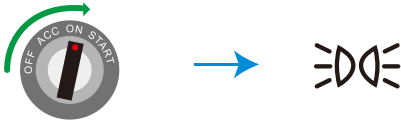


3. Activate the replacing light

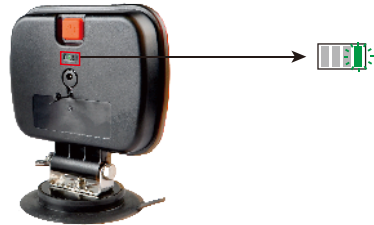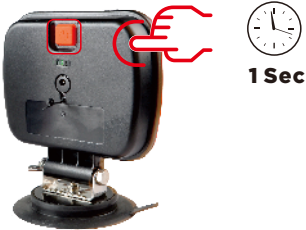


When the light flashes, it was activated successfully

4. Code Matching

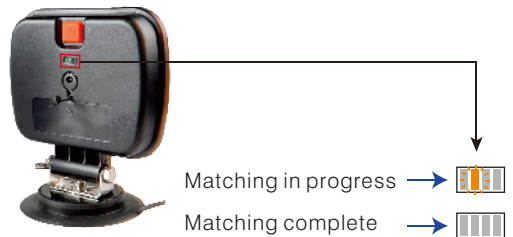

5. Testing

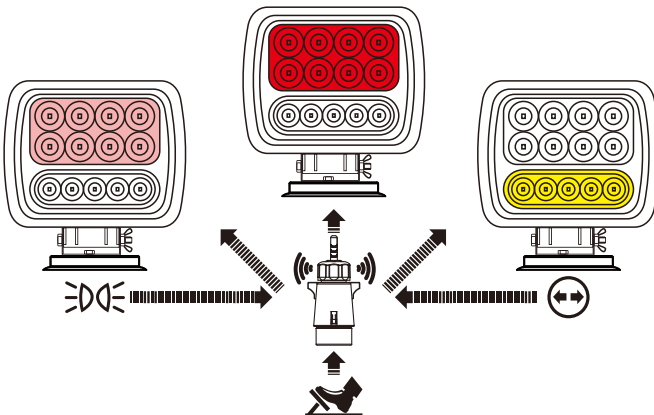

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

Equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a Particular installation.If thise quipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

