

TB-10LED-WL-US
Wireless Trailer Parameter Table

Main parameters:

Transmitter input voltage: DC9-30V

Host Input Voltage (Charging Voltage): DC5V

Battery capacity: 18650, 3.7V, 2000MA power battery

Charging time: 3-4 hours

Dust and waterproof grade: IP65

Working temperature: - 20 - 50 degrees

Functions:

Turn on:

Shortly press the switch once, the power indicator shows the current power, and then it goes out after 5S. Open the system at the same time. The system working indicator flashes.

Shut down:

When the system is turned on and off by pressing the switch at one time, the working indicator lights of the system are off and enter the mode of dormancy and power saving.

Electricity Indicator:

Four indicator lights are green, green, yellow and red, full of electricity, and red lights will slow flashing alarm at low power.

Coding:

Open any function at the transmitter first. In the startup state of the host terminal, press the switch 5S to enter the alignment mode. The yellow indicator flashes. After receiving the signal, the yellow indicator flashes slowly under 1 to successfully align the code and exits the alignment. If no transmission signal 30S is received, the code will automatically exit.

Charge:

When the red light flashes and alarms, it is recommended to charge the battery. The main engine will not work when charging.

Note 1:

One host can only pair one launch, and the next pair will automatically clear the previous data. When leaving the factory, it has been paired well. Only when the transmitter or host is replaced, can it enter the code operation.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired

operation.

This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator&your body.