

GIG **MASTER**

User's Manual



Pro I

It is recommended that you read this user's manual before using the product to understand maintenance and warranty related instructions from this unit. By properly connecting and understanding the functions of this unit, users can enjoy all the benefits from this Professional Audio Equipment.

FEATURES:

Supports BT audio playback

With Mp3 Display Screen

FM Radio Function

USB & SD Card slot for Mp3 playback

Remote Control

Microphone Function

Phase 5 EQ

Output Power: 150WX2

Impedance: 8 Ohm

Separation:48dB

Signal to Noise ratio: $\geq 72\text{dB}$

Frequency Response: $\geq 40\text{Hz}-18\text{kHz}$


Inputs:

- 1/4" and XLR Microphone inputs
- RCA and XLR Lines inputs
- XLR Line output
- Speakon output and input

NOTICE

To extend this product's life, the user must wait at least 30 seconds when switching ON before playing any music on this device. Always turn the product OFF after use to prevent it from heating up. Use the specified power cables only.

Functional description of the amplifier and music inputs

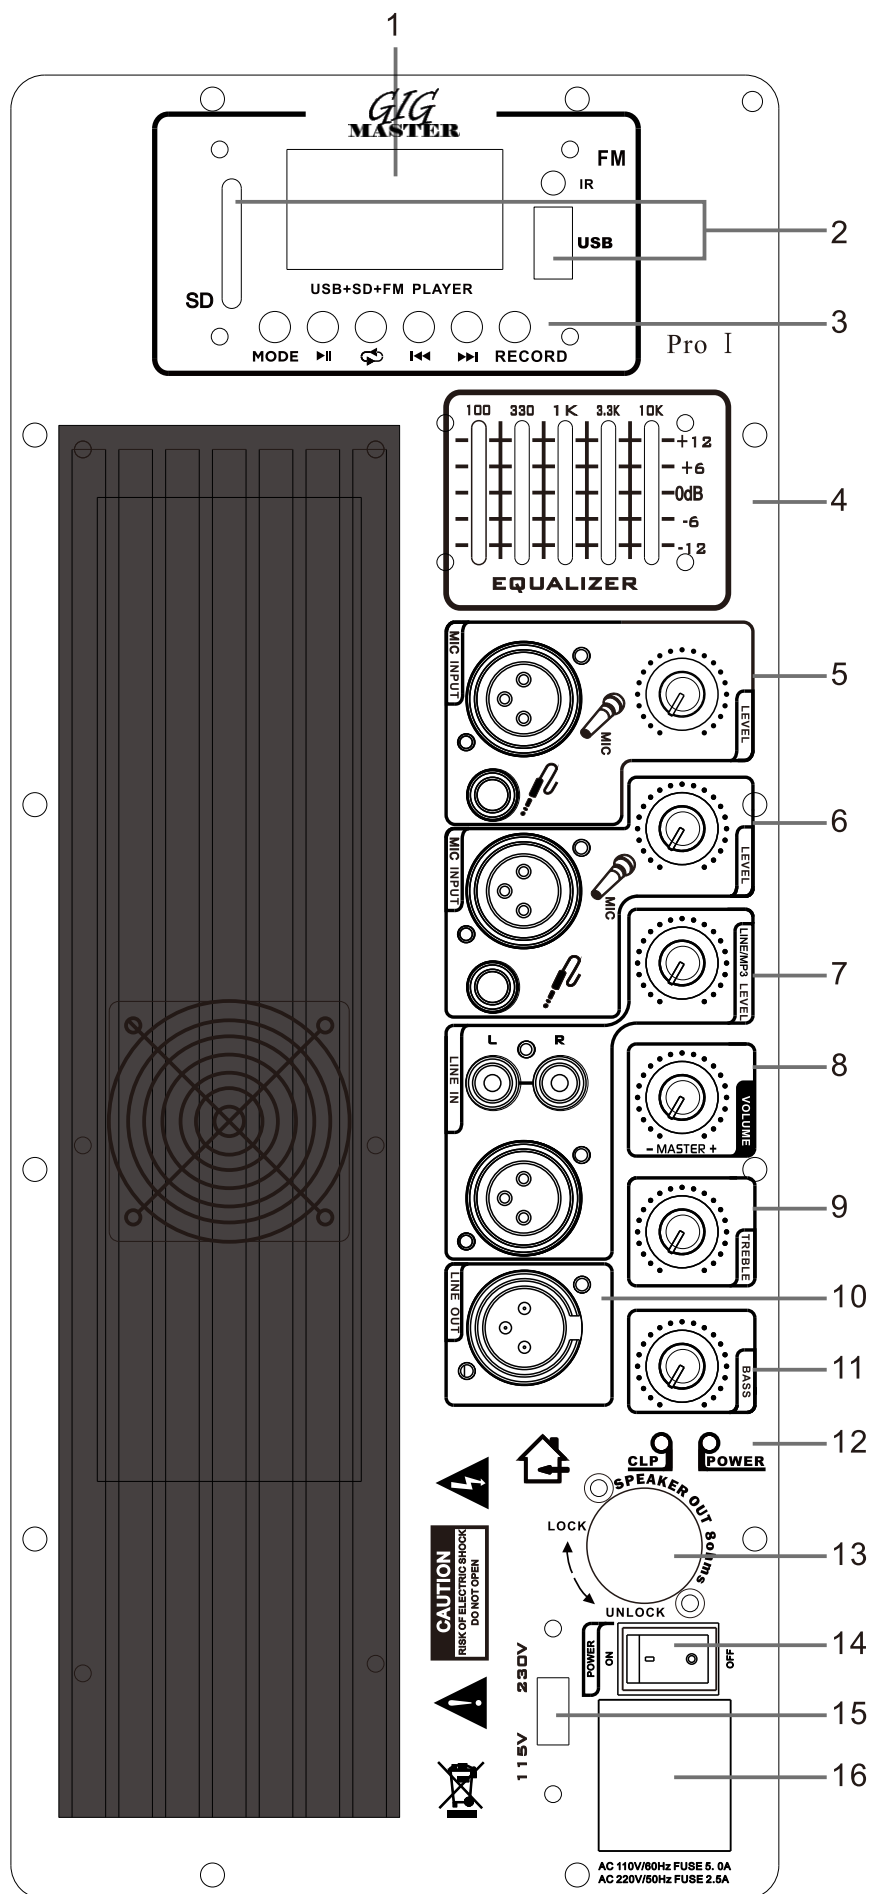

1. LCD Display to indicate current mode selected.
2. USB and SD ports for recorded USB and SD drives
3. MP3 function keys:

Mode: Press this button to jump between BT, USB, SD or FM functions.

MODE: Press this button to select between BT, USB, SD or FM

◀◀ PREV: Press this button to select the Previous channel (FM MODE) or Previous music file

▶▶ PA/PL: Press this button to Play or Pause a song in the USB/SD functions, you can also use this button to scan FM Radio stations

▶▶ Next: Press this button to select the next channel (FM Radio) or next music file

REPEAT: Press this button to repeat a song

Record: Records music, inputs and microphones connected to this device to USB and SD drives

4.EQ: Five band Equalizer. Place five keys in the "0" dB position for normal use

5.MIC 1: ¼" & XLR Inputs and volume adjustment knob

6.MIC 2: ¼" & XLR Inputs and volume adjustment knob

7.RCA & XLR inputs and Volume adjustment knob

8.Master volume adjustment knob

9.Treble adjustment knob

10. XLR Line output

11. Bass adjustment knob

12. Power and peak power Light indicators

13. 8Ω Speaker Output

14. ON and OFF switch

15. 115V-230V switch

16. Power cable input

REMOTE CONTROL



Pause/Play



Scan the different channels of FM radio



Equalizer switch



Volume Up



Volume Down



Select the previous channel



Select the next channel



Used to select track number



PICK SONG



Repeat current playing music



Press this button to select between BT, USB, micro SD/ TF or FM Radio mode



IMPORTANT SAFETY INSTRUCTION

	Caution: Please do not open the unit to avoid fire hazard or electric shock. The corresponding repairs should be done by professional person.
	This mark warns the user that there is the High Voltage, please prevent from electronic shock.
	This mark warns the user that there are some important instructions for the Operation and the Maintaining attached to the unit.

Caution: Please do not expose the unit in the rain or to moisture environment to avoid fire hazard or electronic shock. Do not open the unit any repairs should be done by a professional.

POWER CORD PREVENTIONS

1. Hold the plug firmly when you plug the power cord in or out
2. Do not put the AC power cord near any hot source
3. Do not place any heavy objects on the AC power cord
4. Do not overhaul the AC power cord

USE AND PREVENTIONS FOR THE UNIT

1. Do not leave the unit in a closed spaces while playing to prevent it from getting hot or burn internal parts.
2. Do not expose the unit under direct sunlight
3. Do not let the unit get wet. In case of this unit getting wet unplug immediately to avoid fire and shock hazards.
4. Do not open the unit to prevent risks of electric shock or unit damage. Opening the unit WILL VOID YOUR WARRANTY
5. Do not put any heavy objects on the unit
6. For repairs contact your seller
7. Do not alter this speaker unit

WARRANTY INFORMATION

1. This unit is covered under 1 year Limited Warranty
2. Keep your receipt to avoid losing your warranty
3. The warranty do not covers any problems created by human miss use
4. Warranty will be void if there is water damage
5. The warranty will be void if the unit is opened by a non-professional or a third party not related to APOLO™
6. Returns and exchanges (If accepted by the seller) should be done with all the components which were included in the package. In the case of missing items a fee shall be charged.

APOLO

Manual de Usuario



Pro I

Es recomendable que usted lea el manual de usuario antes de usar el producto para así comprender datos de mantenimiento, garantía e instrucciones referentes al uso de este equipo. Al saber apropiadamente como conectar y usar este equipo los usuarios podrán disfrutar todos los beneficios de este equipo de alta definición.

CARÁCTERÍSTICAS DE ESTE EQUIPO:

Modo de BT para música inalámbrica

Pantalla de display LED

Radio FM

Entradas USB y SD

Control Remoto

Entradas de Micrófono

Equalizador de 5 bandas

Salida de poder RMS de 150Wx2

Impedimento de 8Ω

Entradas:

Entradas de micrófono de ¼" y XLR

Líneas de entradas RCA y XLR


Línea de salida XLR

Salidas y entradas Speakon

NOTA

Para extender la vida de este producto, el usuario debe de esperar al menos 30 segundos al prender este equipo antes de poner sonidos o audio. Siempre apague el equipo al terminar de usarlo para prevenir que se caliente. Solo use el cable de poder especificado para este equipo

Descripción del amplificador y sus entradas

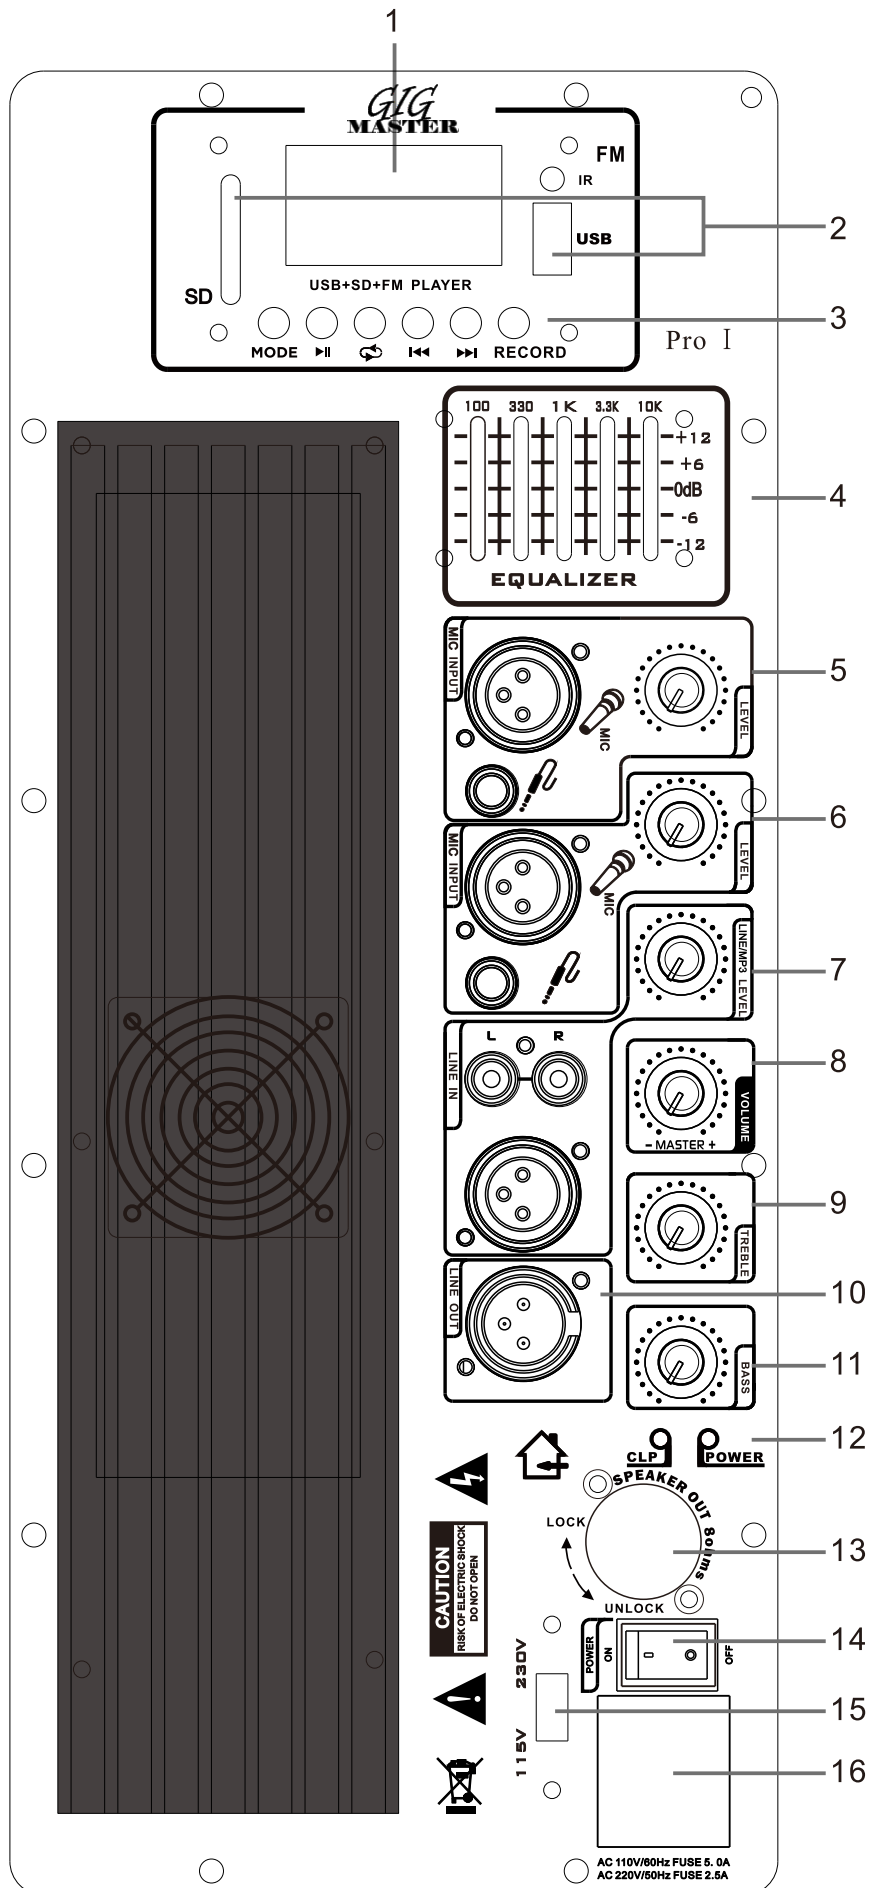

- 1.Display LCD para indicar el modo seleccionado
- 2.Entradas USB y SD para pastillas de memoria pre-grabadas con música
- 3.Funciones del MP3:

Mode: Seleccione este botón para saltar entre las funciones BT, USB, SD o FM.

⏮ PREV: Presione este botón para seleccionar el canal anterior (Radio FM)
O el archivo de música anterior.

⏸ PA-PL: Presione este botón para empezar o pausar la canción en las funciones USB/SD,
También puede usar este botón para escanear estaciones de radio FM.

⏭ NEXT: Presione este botón para pasar a la siguiente estación (radio FM)
O archivo de música

REPEAT: Presione este botón para repetir una canción

Record: Graba música, entradas y micrófonos conectados al equipo hacia una pastilla de memoria USB o SD

4.EQ: Ecualizador de 5 bandas. Ponga las 5 barras en la posición de “0” dB para su uso normal

5.MIC 1: Entradas ¼” & XLR y perilla de ajuste de volumen

6.MIC 2: Entradas ¼” & XLR y perilla de ajuste de volumen

7.Entradas RCA & XLR y perillas de ajuste de volumen

8.Perilla de volumen máster

9.Perilla para ajuste de “Treble”

10. Salida XLR

11. Perilla para ajuste de “Bass”

12. Luces indicadoras de poder y poder máximo

13. Salida de poder de 8Ω

14. Switch de prendido y apagado

15. Switch de 115V-230V

16. Entrada de cable de poder

REMOTE CONTROL

-  Empezar o pausar
-  Escanear los diferentes canales del radio FM
- 
-  Cambio de ecualizador
-  Subir volumen
-  Bajar volumen
-  Seleccionar el canal previo
-  Seleccionar el siguiente canal
-  Seleccionar la canción por número
-  Seleccionar la canción
-  Repetir la canción
-  Presione este botón para brincar entre las funciones BT, USB, SD/TF o Radio FM



INSTRUCCIONES IMPORTANTES DE SEGURIDAD

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	ADVERTENCIA: Por ningún motivo abra la unidad, evite riesgos de incendio o shock eléctrico. Cualquier reparación debe ser hecha por un experto.
	Este símbolo advierte al usuario de que existe alto voltaje, prevéngase para evitar riesgos de shock eléctrico.
	Este símbolo advierte al usuario de que hay instrucciones especiales para la operación y mantenimiento de la unidad.

Advertencia: No exponga la unidad a la lluvia o humedad para evitar riesgos de incendio o shock eléctrico. No abra la unidad, cualquier reparación deberá ser hecha por un profesional

PREVENCIÓNES DEL CABLE DE PODER

1. Agarre firmemente el cable de poder al conectarlo o desconectarlo de la unidad
2. No ponga el cable de poder cerca de ninguna fuente de calor
3. No ponga objetos pesados encima de el cable de poder
4. No deshaga el cable de poder para intentar repararlo

PREVENCIÓNES DE USO DE LA UNIDAD

- 1.No ponga la unidad en espacios cerrados sin ventilación para evitar que se caliente o se quemen componentes internos.
- 2.No exponga la unidad directamente a rayos del sol
- 3.No deje que la unidad se moje. En caso de que la unidad se llegara a mojar desconéctela inmediatamente para evitar fuego o riesgo de shock eléctrico.
- 4.Nunca abra la unidad para prevenir así riesgos de shock eléctrico o daños a la unidad. Abrir la unidad resultaría en la CANCELACIÓN DE SU GARANTÍA
- 5.No ponga artículos pesados sobre la unidad
- 6.Para reparaciones contacte la tienda donde compró el equipo
- 7.No altere la unidad ni sus componentes

INFORMACIÓN DE LA GARANTÍA

- 1.Esta unidad está cubierta por 1 año de garantía limitada.
- 2.Mantenga su recibo para evitar perder su garantía.
- 3.La garantía no cubre problemas o daños causados por mal uso del equipo.
- 4.La garantía será cancelada si hay daño por agua.
- 5.La garantía será cancelada si la unidad es abierta por alguien no profesional o una tercera persona/negocio no asociada a APOLO™.
- 6.Para retornos o cambios (En caso de ser aceptados por el vendedor) todas las partes y componentes deberán estar en la caja en perfecto estado. En caso de faltar artículos o estar dañados se cobrará una cuota.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.