



SPACE ROBOTDOG USER MANUAL

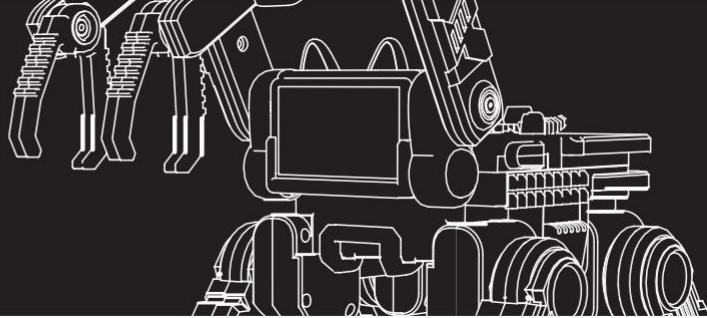

Batteries and Charging


Battery installation for transmitter

Battery Safety Information

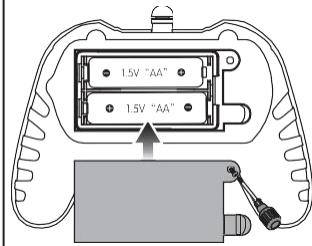

1. Battery requirement: Transmitter requires 2 x 1.5 V "AA" non-rechargeable batteries.
2. Install and remove battery properly.
3. DO NOT recharge non-rechargeable batteries.
4. DO NOT mix old and new batteries or different types of batteries.
5. Use only batteries of the same or equivalent type as recommended.
6. Insert batteries with correct polarity.
7. Always remove exhausted batteries from the toy.
8. Rechargeable batteries are only to be charged under adult supervision.
9. Remove rechargeable batteries from the toy before charging.
10. DO NOT short-circuit the supply terminals.

Battery installation for vehicle

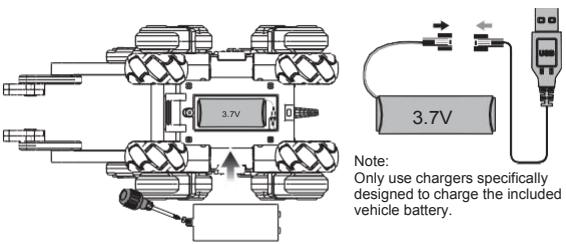


Note:
Only use chargers specifically designed to charge the included vehicle battery.


Vehicle requires 1 x 3.6V rechargeable battery pack

1. Loosen the screw and remove the battery door. Remove the exhausted battery pack and install a fully charged one, making sure the battery connected with correct polarity (+/-). Replace the battery door and tighten the screw.
2. Insert the battery pack into the USB charger, then plug the charger into a USB port.

Transmitter control

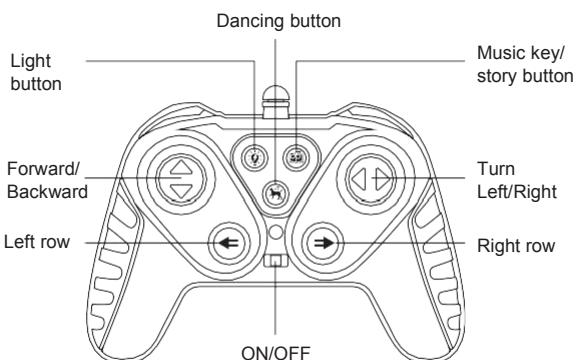


How to play

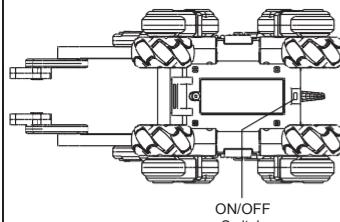


Power ON: Turn on the vehicle and then the transmitter. The light on transmitter will turn off to indicate the transmitter and the vehicle is linked.
Remote control distance: more than 20 meters.
Operating time: approx. 20-30 minutes with fully charged battery.


Note:
Always switch vehicle OFF and remove the battery when not in use to avoid reducing the life of the battery.

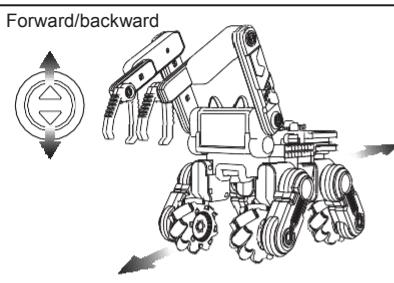


1. Forward/backward
Press the forward/backward button on the left side of the remote control, and the robot dog will rootForward/backward as directed.

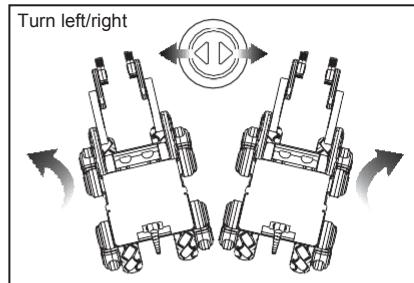

2. Turn left/right
Press the left turn/right turn button on the right side of the remote control, the robot dog will root Turn left/right as directed.

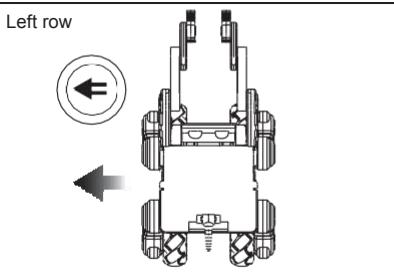

3. Left row
Press the left row button on the remote control, the robot dog will move to the left according to the instruction

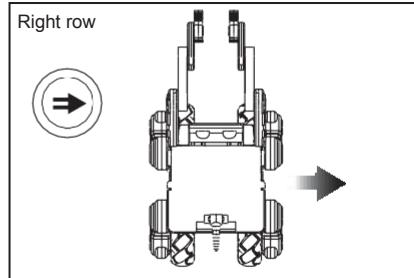

4. Right row
Press the right row button on the remote control, the robot dog will move to the right side according to the instruction

5. Music key/story button

Press once to sing; press again to tell a story, there are 4 stories in total.

6. Light button

Press to switch a color, there are 7 colors in total.

7. Dancing button

Press the "dance" button once, and the robot dog will perform programmed actions and start dancing.
There are two modes.

Note:

When there is no operation, when the "robot dog" is static, every 15 seconds A naughty voice wake-up function

Trouble shooting guide

PROBLEM	CAUSE	SOLUTION
Transmitter does not work	1. Batteries are installed incorrectly.	1. Check that the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
	2. The battery is low.	2. Replace new batteries.
	3. Vehicle is out of range of transmitter.	3. Ensure the distance of remote control within 30 meters, point transmitter at the vehicle.
	4. Fail to link transmitter with vehicle.	4. Remove and re-install the batteries to the transmitter. Re-set the vehicle OFF to ON. Move the sticks on the transmitter to re-link transmitter and vehicle.
Vehicle does not work properly	1. Power switch is OFF.	1. Make sure the switch is in "ON" position.
	2. Fail to connect the battery pack to the vehicle with correct polarity.	2. Check that the battery pack is connected to the vehicle with correct polarity.
	3. The battery is low.	3. Recharge the rechargeable battery pack, or replace with a fully charged one.
	4. Fail to link transmitter with vehicle.	4. Remove and re-install the batteries to the transmitter. Re-set the vehicle OFF to ON. Move the sticks on the transmitter to re-link transmitter and vehicle.

⚠ Warning

CHOKING HAZARD – Small Parts. Not for children under 3 years. Children should be supervised during play.

Please keep this instruction manual for future reference, as it contains important information.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction