

TWS Bluetooth Eerphone

User Manual



Simple, Portable, Free, Stable and Comfortable


The whole set of TW8 is composed of “TWS real wireless earphone” and “mini case of mobile power bank”, which is a perfect match to smart phone. It is not only a real wireless earphone with bluetooth, but also a mobile power bank with large capacity. It is mini and portable, so it can keep your device fully charged when enjoying the beautiful music.


Product Parameter

Bluetooth Version	V5.0
Support Protocol	A2DPV1.3,AVRCPV1.6,HFP1.7,HSPV1.2,SPP1.2,PBAP1.0
Transmission Distance	12m
Capacity of Mobile Power Bank	13800mAh
Input/output(2A Adapter)	INPUT 5V- 2A OUTPUT - 5V 2A
Battery Capacity of Earphone	40mAh *2
Frequency Range	2.402-2.48GHZ
Working Voltage	3.7V

The Composition of Product

- ① TWS Bluetooth Earphone
- ② Battery Volume Indicator Light of Mobile Power Bank
- ③ Input Port of Mobile Power Bank
- ④ Output Port of Mobile Power Bank
- ⑤ Charging Case for Mobile Power Bank
- ⑥ Working Indicator Light
- ⑦ Touch Button of Earphone
- ⑧ Charging Case for Earphone

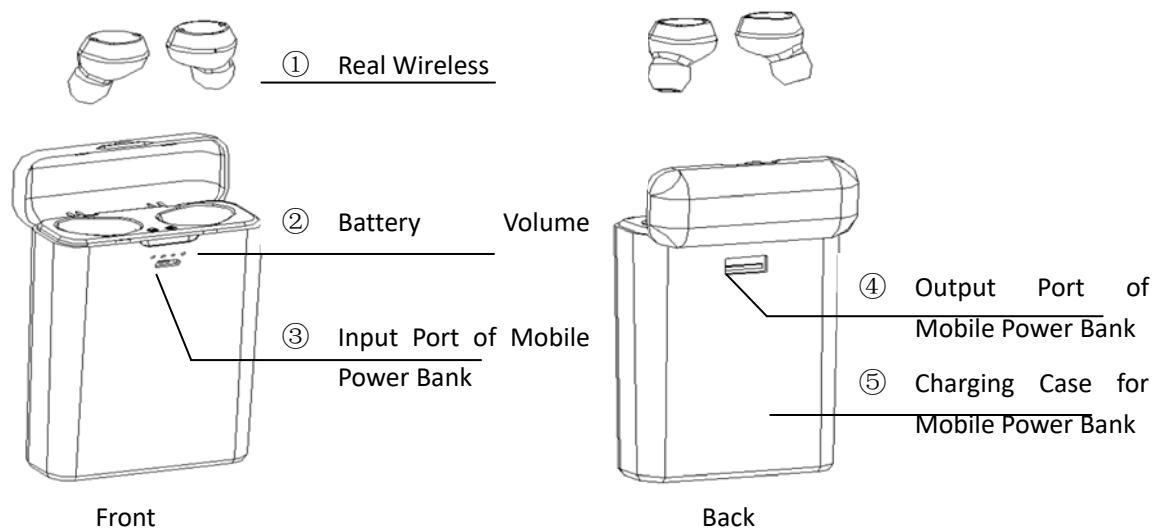

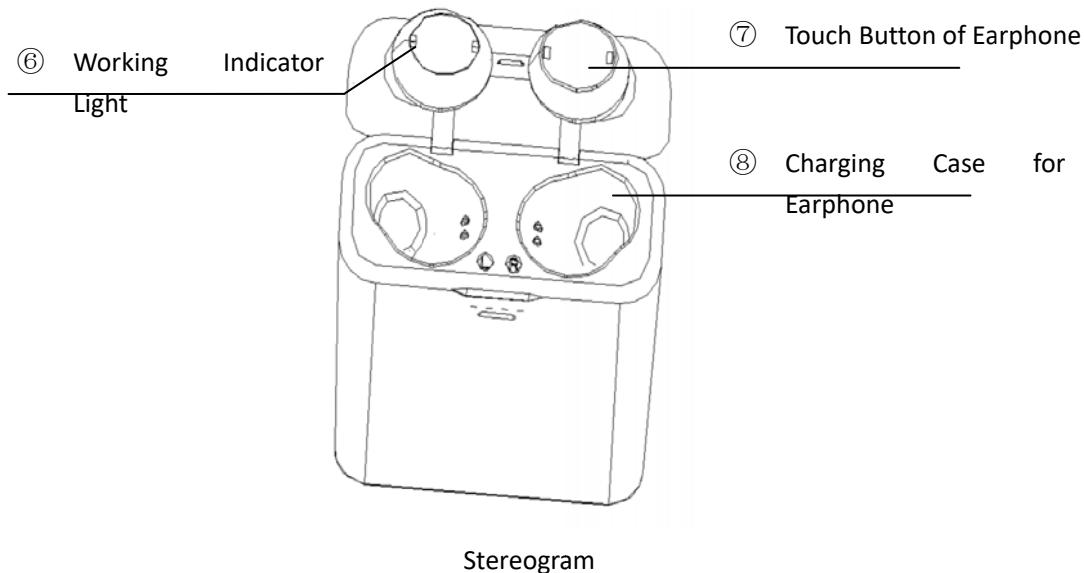

Functional Operation Description

- ① Power on: it will be automatically on when the earphone is taken out from the charging case; or touch the earphone button for 2 seconds outside of the earphone box, it will be on when the green light flashes.
- ② Power off: it will be automatically off when the earphone is back to the charging case; or touch the earphone button for 4 seconds outside of the earphone box, it will be off when the red light flashes.
- ③ Incoming call: The green lights of two earphones flash.
- ④ Answer the call: click left/right earphone for one time.
- ⑤ Hang up: click left/right earphone for one time.
- ⑥ Reject the call: double click left/right earphone for two times.
- ⑦ Music play/pause: click left/right earphone for one time.
- ⑧ Previous: double click left earphone for two times.
- ⑨ Next: double click right earphone for two times.
- ⑩ Volume up: touch the right earphone for 2 seconds, release after hearing “beep” sound, the volume up for one bar, and then repeat this operation to increase the volume.
- ⑪ Volume down: touch the left earphone for 2 seconds, release after hearing “beep” sound, the volume down for one bar, and then repeat this operation to decrease the volume.
- ⑫ Language assistant: triple click left/right earphone for three times.

Earphone Match

- ① When using two earphones, the bluetooth will conduct automatically match after the earphone is automatically/manually on; the green light of right earphone goes off after the match is finished; the red and green lights of left earphone flash alternately, and then wait to connect the equipment.
- ② The first time use of single earphone: when the left earphone is on(automatically or manually), the red and green lights flash quickly to enter the to-be-connected mode of single

earphone after they flash slowly for 20 seconds; the right earphone needs to manually press for 3 seconds, wait the green light to turn to red and green light, flash quickly to enter the to-be-connected mode of single earphone, and then connect the device in accordance with the following operations.

- ③ After using left and right earphone alone, when the connection is not cancelled on the mobile phone, the earphone will automatically connect to device used last time after the earphone is off. You need to cancel the previous single earphone mode and match the connection again if you want to use double earphones.

Device Connection

After the earphone matches successfully or enters the single earphone mode, you should turn on bluetooth on mobile phone to search “TW8” and click the connection. The red and green light will goes off after it matches successfully.

Factory Reset of Earphone

In the certain circumstances, for example, the double earphones can not match the device. You should put back double earphones to the charging case. During charging, press the touch button of each earphone for 12 seconds, wait the red and green light to flash alternately, reset the factory reset, and then take out the double earphones to automatically start and match.

Attention

- ① After using the earphone, please put back the earphones to charging case and charge them. When using it next time, just take out the double earphones to start it automatically, and then the earphone will automatically match and connect with the mobile phone.
- ② If you use the double earphones separately, then the matching will be disconnected. When you want to use the double earphones later, you need to cancel the single earphone connection from mobile phone and finish the matching again in accordance with the above operations.

Operation Description for Charging

- ① When the earphone is charging, the red light of earphone indicator light will be on; it will turn green light when it is fully charged and the green light will goes off after 60 seconds; If the earphone is fully charged and put back into the charging case, the green light will be on and then goes off(the earphone takes about 1 hour to be fully charged.); the red light of earphone will be on when using it and will prompt “Battery Low”, that means the battery volume is low and it needs to be charged in time. If you continue to use it at this circumstance, it will be automatically shut down.
- ② Charge the charging case of mobile power bank, and then LED light of charging case will flash and prompt the volume of charging case. The first light on means 0-25% volume, the second light on means 25-50% volume, the third light on means 50-75% volume and the fourth light on means 75-100% volume. The LED light will keep on after fully charged. (The charging case takes about 5 hours to be fully charged).
- ③ When the mobile charging case is used for power output, the LED light of charging case will

keep on, the same as volume indicator light; when the first light flashes, it means the low battery mode of charging case, and then the charging case needs to be charged in time.

Attention

The actual talk time and standby time of the earphone as well as the input and output charging time of charging case may be different from the different power adapters, charging line, charging devices, usage settings, usage methods and environment.

Packing List

- ① 2 Bluetooth Earphones(Attach 2 Small Earphone Caps)
- ② 1 Portable Charging Case
- ④ 1 USB Charging Line
- ⑤ 2 Earphone Caps(Big and Small)
- ⑥ Instruction Book
- ⑦ Cloth Bag

FAQ and its Solutions

The Problems	Cause	Solutions
Can not start	Power off	Charge the earphone by using charging case
	The timing of long touch the “on” button is too short	Long touch the “on” button for 2 seconds
Can not charge	Battery volume of mobile power bank run out	Charge the earphone after charging the mobile power bank
The matching of double earphones fails	The earphone does not enter the matching mode	After double earphones flash, and then make the red and blue light of left earphone flash quickly
	Maybe one of the earphones connect to the other earphone	Put back double earphones to the charging case, take them out again and automatically match again
	Enter the mode of single earphone that causes the mismatch	Put back double earphones to charging case, at the same time, press “reset” button for 12 seconds to conduct factory reset
Mobile phone can not search the earphone or fails to connect	Earphone does not enter the search mode	Turn on the earphone to ensure the correct match and wait for the connection
	Mobile phone bluetooth application error	Restarts the bluetooth search function of mobile phone

Attention

- ① The earphone and charging case adopts the built-in non-removable charging battery. Do not try to take out the battery from the earphone and charging case in case of damaging the machine.
- ② The volume of product shall be adjusted to the most appropriate mode; the long-term excessive volume may cause the risk of hearing loss.
- ③ Please make sure the product stored in the dry and warm environment. Do not use the corrosive detergent to clean the product.
- ④ If you do not use your earphone or charging case for a long time, please put it on the dry and ventilated place and charge it every one month.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.