


Inwa®

PRODUCT MANUAL

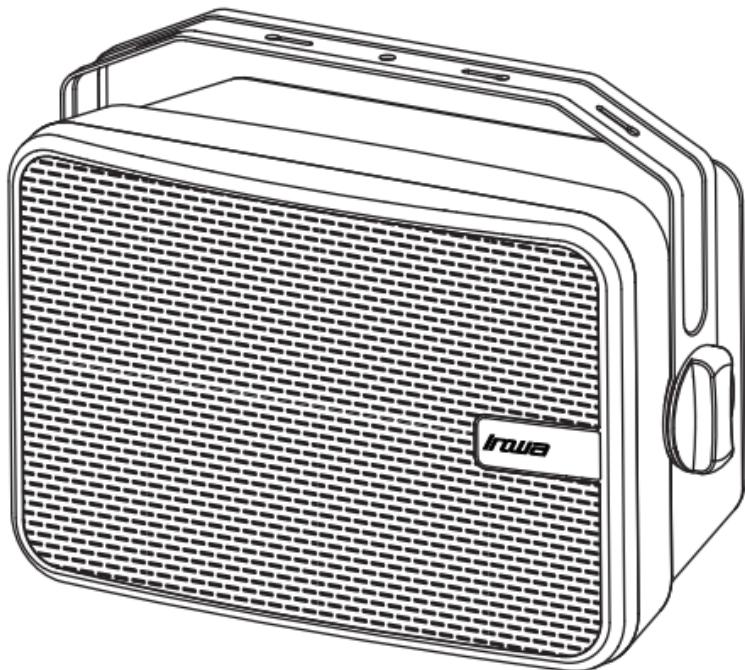

MZ-658
Sync Wall Speaker

MZ-658

Sync Wall Speaker

Thank you for buying this product. Please read all safety information and operation instruction before using the bluetooth speaker.

 
SAFETY INSTRUCTIONS

- Please read and follow this instruction.
- Please keep or use at room temperature.
- Please do not use this product near heat sources such as radiators, enthalpy regulators, stoves or other heat generating instruments (including amplifiers).
- All types of malfunction should be repaired by professional maintenance staff, disassemble without permission will void the warranty.

PACKAGE CONTENTS



Speaker



Remote control



User manual



DC Power adapter




Plastic expansion



Screw


DIMENSIONS

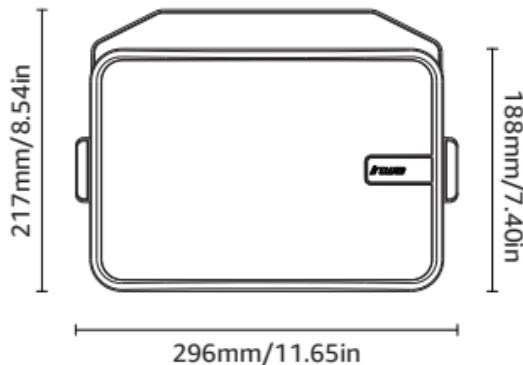

PARAMETER

Bluetooth version:	5.3
Wireless distance:	≤15M
Input voltage:	DC 24V
Output power:	60W
THD:	< 1%
Frequency range:	20Hz-20KHz
SNR:	>80dB
Waterproof level:	IPX5

SPEAKER CONTROL PANEL AND PORTS

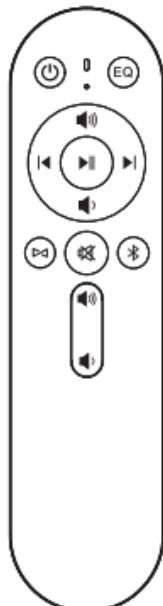

- ▶ On/Off key: short press to turn on/off
- EQ Short press to switch music/news mode
- ▶|| Short press: play/pause
- ◀ Short press: previous song
- ▶ Short press: next song
- 🔊 Short press: increase volume
- 🔉 Short press: decrease volume
- ▷ Networking key: short press to enter network pairing status
- ✿ Bluetooth pairing key: short press to enter Bluetooth pairing status
- 🔇 Speaker mute key: click to mute


OPERATION INSTRUCTION

Step 1

Bluetooth connection with one speaker:

Power on the speaker via connect to the power supply, the blue indicator flashes. Turn on the mobile phone Bluetooth to search for "Sync Speaker" and connect with it.

(Note: If the red indicator flashes after the speaker powered on, short press Bluetooth pairing key "✿" on the remote control to switch to the blue indicator flashing. Bluetooth can only be connected when the blue indicator flashes)

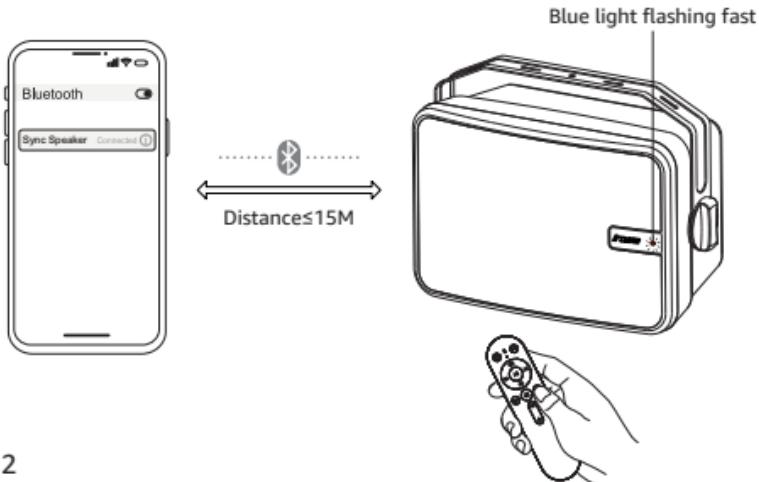


Step 2

Network pairing with Multiple speakers:

After finish with step 1, you have Bluetooth connected one speaker (**Main**) with your mobile phone, power on the other speakers(**Aux.**), and they will auto pair with the **Main** speaker when their indicator lights are in red.

(Note: If the indicator of **Aux.** speaker does not show red after they powered on, short press the remote control networking key "▷" on the remote control to switch to red)

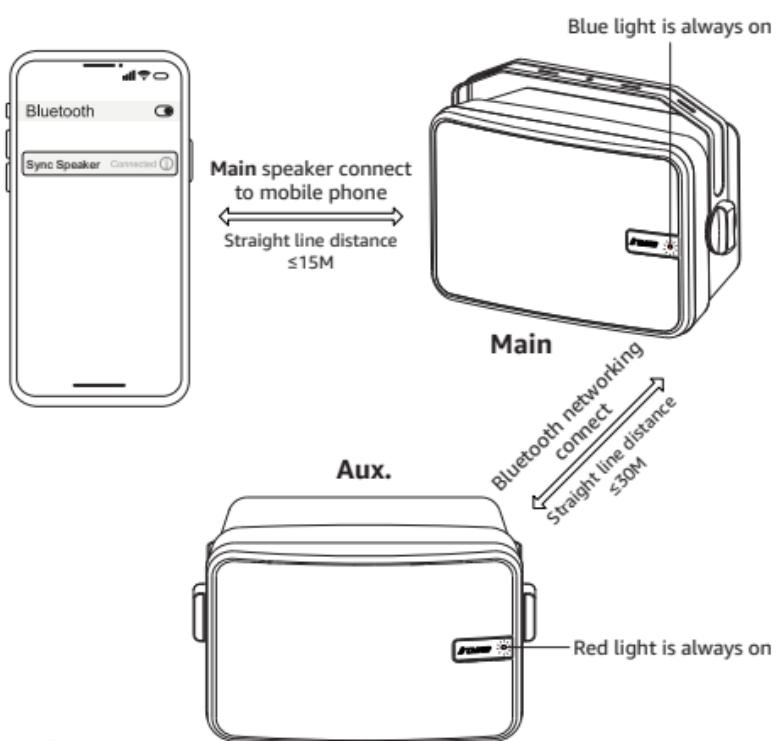

Step 3

When multiple speakers successfully enter the networking mode, the blue indicator light of the **Main** speaker is always on, and the red indicator light of the **Aux.** speakers is always on also.

The blue indicator of the **Main** speaker keeps on




The red indicator of **Aux.** speaker keeps on



***Disconenct network mode method:**

After successfully connecting multiple speakers, point the remote control at the **Aux.** speaker and press the Bluetooth pairing key "☒" of the remote control until the blue light of the **Aux.** speaker blinks rapidly to exit the networking mode.

(NOTE: Press the networking key "☒" again, the **Aux.** speaker will enter the networking mode again.)

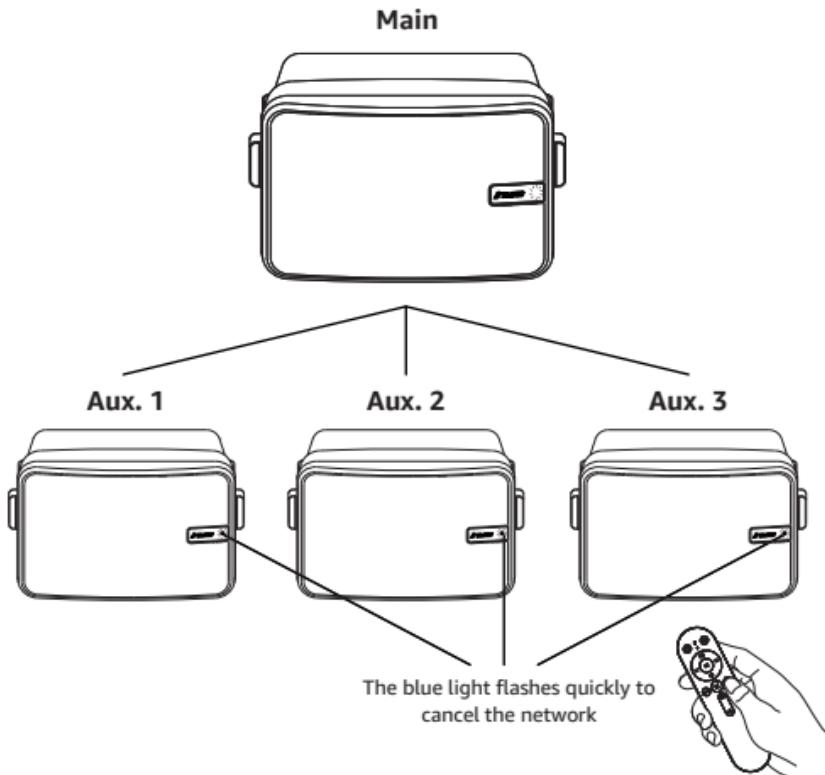


 **INSTALLATION DIAGRAM****Note:**


1. Please confirm the speaker can work normally before installing.
2. Tools in Figure A are not included.

Step 1


Remove the bracket from the product and drill two mounting holes in the wall spaced apart (see Figure A).

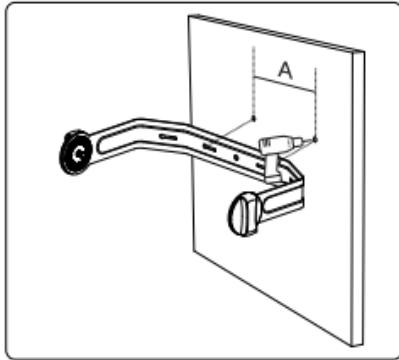**Step 2**

Screw the bracket to the mounting holes on the wall with the screws in the accessories.

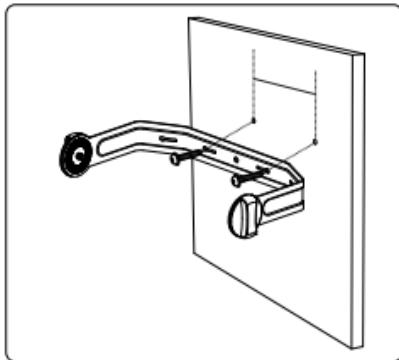**Step 3**

Install the speaker on the bracket, adjust it to your desired angle and tighten the screw.

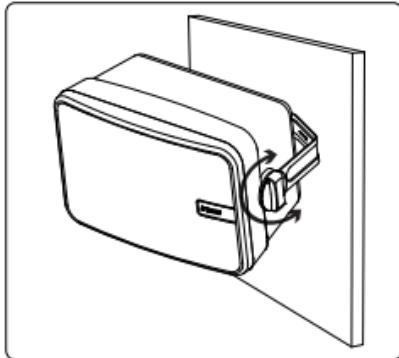

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Inwa®

产品手册

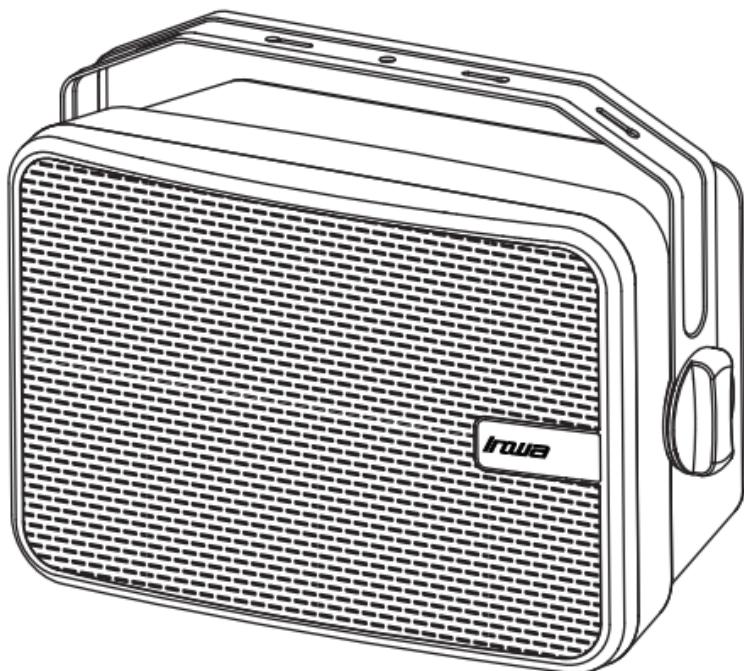

MZ-658

无线组网音箱

MZ-658

无线组网音箱

感谢您购买此产品。在使用无线音箱之前，请阅读所有安全信息和操作说明。

安全守则

- 请阅读并遵循本说明。
- 请在室温下保存或使用。
- 请勿在热源附近使用本产品，如散热器、焰调节器、火炉或其他发热仪器（包括放大器）。
- 各类故障均应由专业维修人员进行维修，擅自拆卸将导致保修失效。

包装内容



音箱



遥控器




说明书


直流电源
适配器塑料
膨胀钉

螺丝钉

产品描述

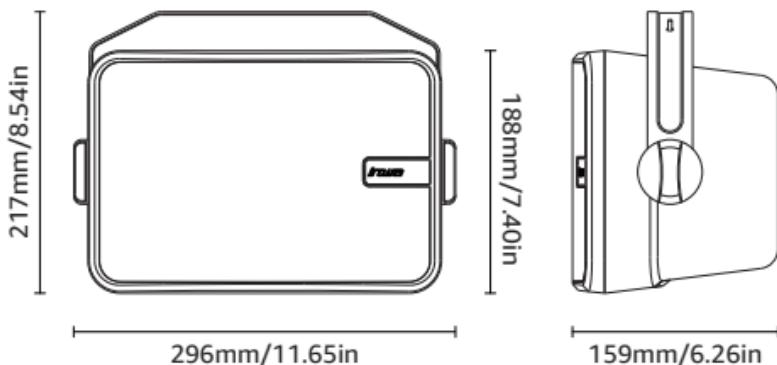

控制面板和界面

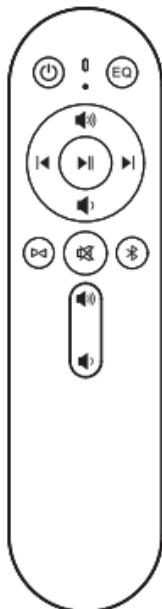

- 开关键：短按开关机
- EQ EQ音效：短按切换音乐/新闻模式
- ▶|| 播放/暂停键：短按播放暂停
- ◀ 上一曲：短按上一曲
- ▶ 下一曲：短按下一曲
- 音量+：短按增加音量
- 音量-：短按降低音量
- 组网键：短按进入组网配对状态
- 蓝牙配对键：短按进入蓝牙配对状态
- 功放静音键：单击静音

产品参数


蓝牙版本:	5.3
无线距离:	≤15M
输入电压:	DC 24V
输出功率:	60W
失真度:	< 1%
频率响应:	20Hz-20KHz
信噪比:	>80dB
防水等级:	IPX5

操作指令

步骤1

蓝牙连接方式：

打开音箱电源，蓝灯快闪，打开手机蓝牙搜索“Sync Speaker”并与之连接。（注意：如音箱通电后红灯快闪，短按遥控器上的蓝牙配对键
※ 切换到蓝灯快闪。蓝灯快闪时才能连接蓝牙）

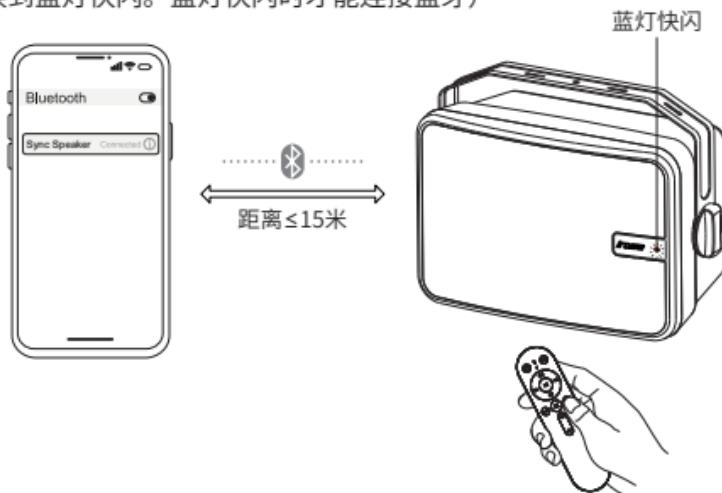


步骤2

多个音箱组网配对方法：

完成步骤1后，已经连接上手机蓝牙的音箱作为主机，然后打开其他音箱（从机）电源，当从机红灯闪烁时，从机将自动与主机配对。

(注意：如从机通电后指示灯不显示红色，短按遥控器上的组网键即可切换到红色)

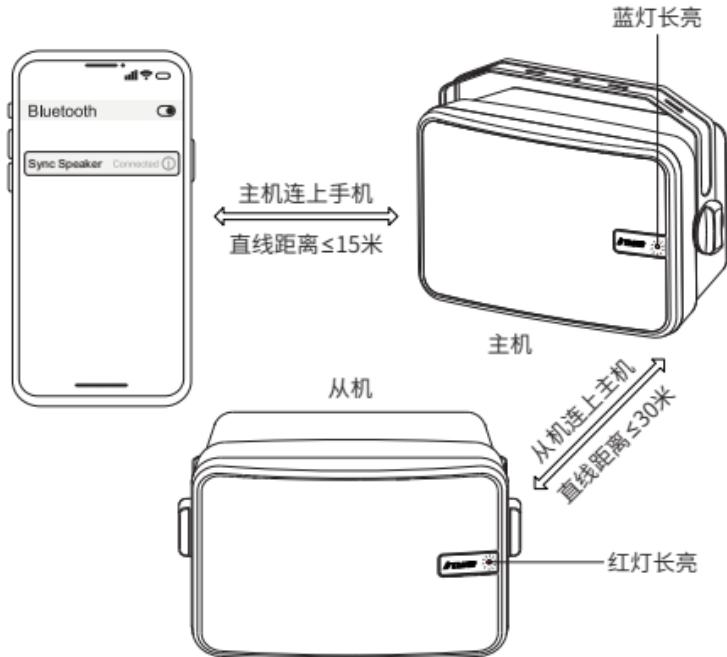

步骤3

当主、从机完成组网配对后，主机蓝灯长亮，从机红灯长亮。



*断开组网模式方法：两台或多台音箱连接成功后，遥控器对准从机，短按遥控器上的蓝牙配对键  至蓝灯快闪即解除组网模式。

(再次短按遥控器上的组网键  至红灯快闪，从机会再次进入自动组网模式。)


主机



从机1

从机2

从机3

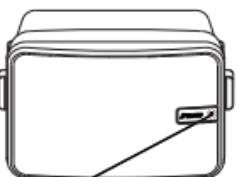

蓝灯快闪
解除组网




安装步骤

注意

1. 安装前请确认音箱能正常工作。
2. 图A中的工具不包括在内。


步骤1

从产品上拆下支架，按照间距在墙上钻两个安装孔（见图A）。

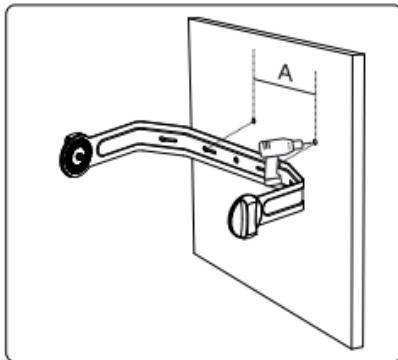


步骤2

使用附件中的螺钉将支架拧入墙
壁上的安装孔。

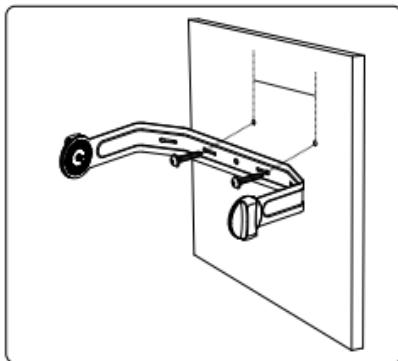

步骤3

将音箱安装在支架上，将其调整
到您想要的角度并拧紧螺丝。

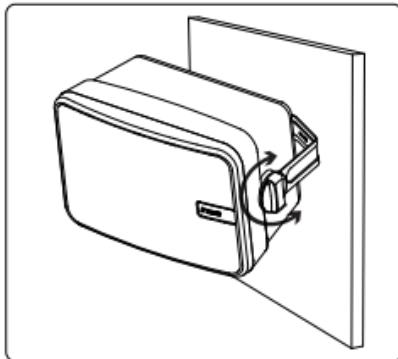

Support Information

Need further help, you can contact us by:

- A. Service Email: inwa_support@innosystemtech.com
- B. Or Scan the QR code for quick contact.



- C. Or Contact us on Amazon:

1. Go to Your Orders.
2. Find your order.
3. Select "Problem with order."
4. Choose your topic, then select "Contact seller."

S/N: MP202504

Model number: MZ-658

Brand Name: Inwa

Manufacture: hunan shen chang de shi aoyuan xian zhang jiang jie
daoguan jia ping she qu yan xi dong lu 1 haohui de chan ye yuan

Email: innosystemtech@outlook.com

EU	REP
----	-----

SUCCESS COURIER SL
CALLE RIO TORMES NUM.1, PLANTA 1,
DERECHA , OFICINA 3, Fuenlabrada,
Madrid, 28947 Spain

OST_EU_20230424000022 successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.