

Tilt Alarm Deactivation

In disarmed state, Press and hold the "setting" key with 5

seconds then release and shortly press "Search" key, when sounds a short beep means deactivation is success.

5

Overview

- Simple and exquisite exterior design, serving as a security guard for both the battery and the vehicle.
- Built-in 6-tone alarm sound with a loud volume of 110dB; effective deterrence against thieves even when discreetly installed.
- Built-in 7-level sensitivity adjustment, suitable for various situations, ranging from light touches to forceful impacts.
- · Wireless remote control operation for added simplicity and convenience.
- IP55 waterproof and dustproof, making it suitable for outdoor use.
- Dual installation options: double-sided adhesive or zip ties, catering to different types of vehicles.

2

Diagram: Setting Disarm

Function Instructions

※ Remote Control Pairing

Install the batteries. Press the "setting" key within 8 seconds to enter pairing mode. Up to 8 remotes can be paired, the ninth one overwrits the first automatically.

※ Remote Control Deletion

Install the batteries. Press and hold the "setting" key with 5 seconds until sounds three beeps means all remotes be deleted.

X Set Alarm Ringtone

In disarmed state, Press and hold the "setting" key with 5 seconds then release and shortly press "setting" key again to choose next alarm ringtone, there are 6 option tones to choose.

4

Press the "Arm" key; after 5 seconds it enters armed state. If there are 2 times of vibration within 10 seconds, the system will alarm, playing the alarm sound in a loop.

Low Battery Alarm

Vibration Alarm

seconds then release and shortly press "Arm" key to select it arm or disarm means battery is low, please replace the

Alarm trigger when the inclination is greater than 45°

Search

When the car inclination angle is greater than 45°, the system will automatically alarm, no need to arm, stop the alarm after the car is righted (when the installation angle changes, you need to turn off the inclination alarm, and then turn on the Troubleshooting inclination alarm, otherwise it has been in the alarm state)

7

Factory default

Search ringtone": 1 Sensitivity level: 3 Tilt detection: Deactivated

Product Parameters:

Input Voltage: DC3V AA battery Remote control: CR2032 Static Current: 79uA (average)

Alarm Current: 120mA (average)

Working Temperature: -20°C to +60°C Working Humidity: ≤90%

- 1) Unable to remote control: Check if the operation follows the instructions, see if the remote control indicator lights up, replace batteries if not.
- Reduced distance: Check if the alarm has sufficient power, try changing the batteries, test in a different environment for possible interference.
- Reduced sound: The alarm may have low battery; replace the batteries.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.