

User's Manual

Product name : Wonder Elf Box

Model: C1

Port and button:

| | | |
|-------|----------------------------|--|
| DC | power port | Power adaptor for the docking router |
| Reset | reset button | Used to reset the router |
| LAN | LAN interface | Wired device connected to the router |
| WAN | External network interface | Connect the router to the external network (lightning cable, external network cable) |

 
Indicator description:

| | |
|--|--|
| | The device is powered (always on) |
| | USB connection is successful (flashing) |
| | The external network connection is successful (flashing) |
| | Wired device connected successfully (flashing) |
| | WIFI boot (flashing) |
| | 4G signal starts (flashing) |
| | 2.4Gwifi startup (flashing) |


Login management page

Log in through management IP


The default management address of the device is 192.168.1.1. Default password is admin.
If the management IP address of the device is the same as the IP segment of the device, the management IP of this device will automatically change to 192.168.2.1.
Use a network cable to connect the computer to any LAN port of the router. Enter local network card settings, choose DHCP internet access.

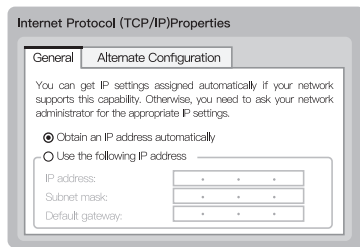

 Or set the fixed IP of the 192.168.1.X network (X means any number between 2 to 255) segment, like below:

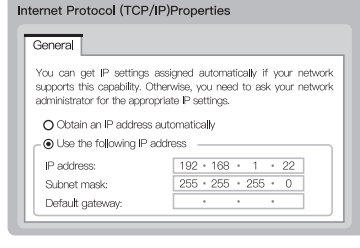

 Then open a browser and enter the default IP address 192.168.1.1

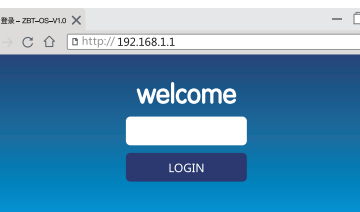


Enter the default password admin to log in



Cloud login

 For example, enter https://cloud.ac-link.com/84 in the browser to log in to the administration page.

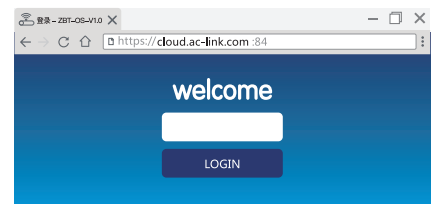

WeChat, Alipay and other APP scan QR code login

Note: Scan code registration needs to meet the following conditions.
A. The currently connected WIFI is from the device, or the WIFI signal sent by the wireless AP connected to the device.
B. Device ETH-WAN uplink no configuration required.
C. The device is already online.



 
Configure the Internet access method

The device supports ETH-WAN port Internet access modes.

Set ETH-WAN Internet access


Log in and enter the network -> WAN settings. There are three modes: automatically obtain / PPPoE / fixed IP. Please fill in the correct way to access the Internet according to the requirements of broadband operation.

A. Get online automatically (default)

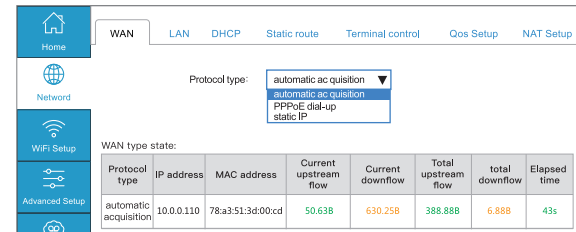


B. PPPoE dial-up Internet access

 Select PPPoE, using the account password provided by the operator. Automatically dial after saving. Obtain the IP address assigned to it and go online after dialing successfully.

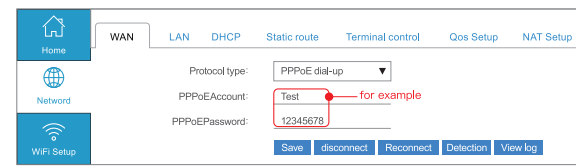


C. Fixed IP access Internet

 Select fixed IP. Enter the IP address mask gateway provided by the operator and click save button.

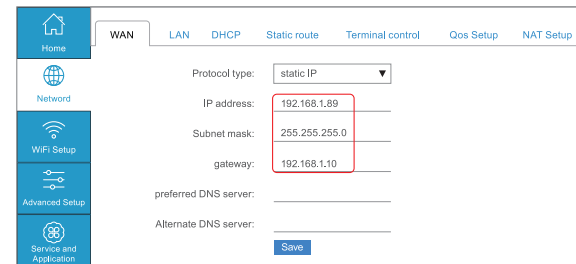


Set wireless password

 When the device is shipped from the factory, the wireless password is not set by default. For your network security, we recommend to use the router after setting the wireless password. Dual-band devices have two SSID both need to set a password.

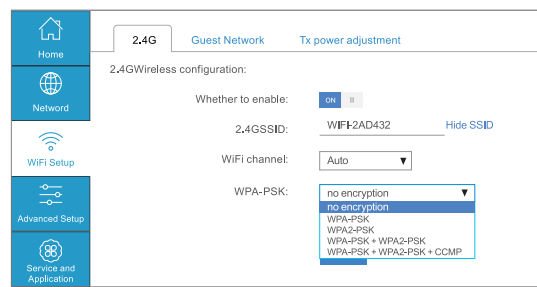

Change the system management password

Click icon in the upper right corner of the configuration page. It will be appeared a dialog box for modifying the administrative password. In addition, has language options. It can be switched between Chinese and English language.

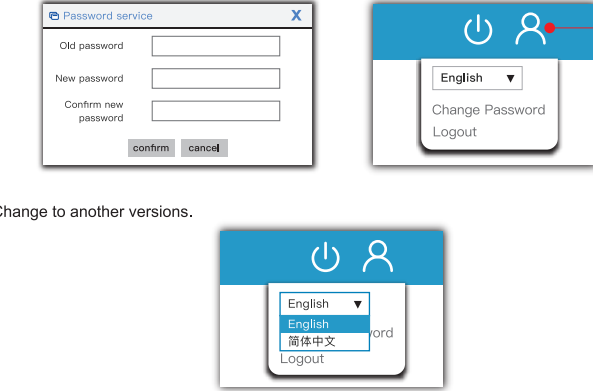 


Change to another version.

You need to log in to the management page again after the new password is set. Please kindly remember your password.


Use in cloud login

Cloud login can penetrate the external network firewall to log in to the local settings page. Mainly used for remote management and remote assistance, etc.

 
Click 'service and Application-cloud' page, enter any character to enable cloud login

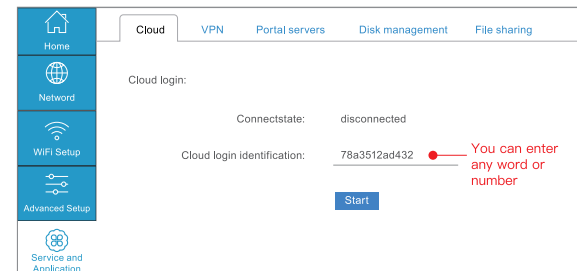

 It will display the corresponding cloud login address after cloud login is successfully enabled as below picture: https://78a3512a432.ac-link.com/84

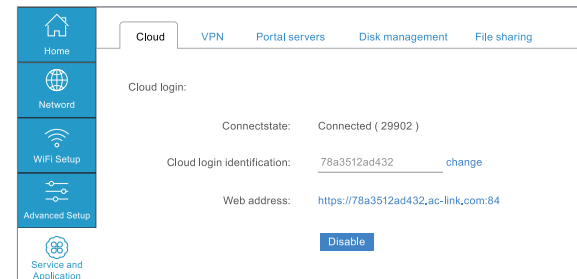





 
Enter https://78a3512a432.ac-link.com/84 in the internet browser to log in to the machine for management.

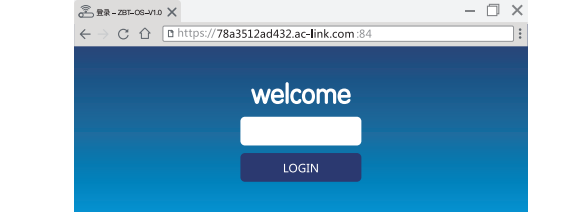

How to register cloud account and cloud management.

Our company's cloud platform can only support the our company's OS firmware. It cannot be supported customer's own firmware.

     If you are new user and need to use cloud management, please register your cloud platform management account with your mobile phone number or phone numbers. Note: the number of words is 11 digits. Please fill in the cloud platform account (ID) on each router and save it after the registration is successful. Please see the screenshot of the steps as below:

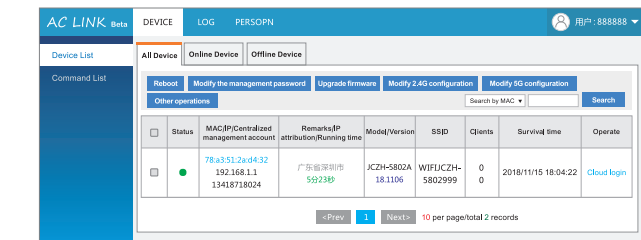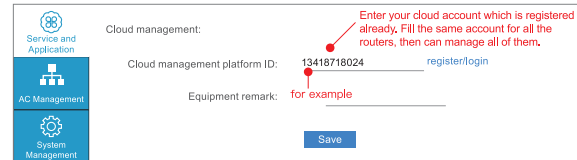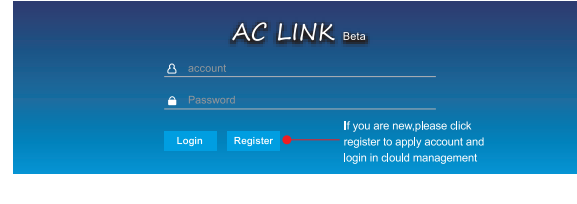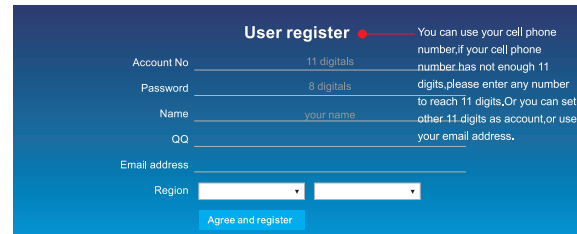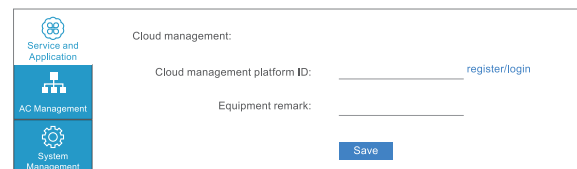

Recovery to factory setting

When you forget the password, unable to login to device, abnormal device configuration etc. It is recommended to reset to the factory configuration, then reboot the device.

 
Reset mode 1:

Use a pin or a pin tip or a toothpick to press and hold the reset button for more than 5 seconds after the device powered on, then wait for reboot device.



Reset mode 2:

Click the "Execute Reset" button in "System Management-Restore setting".

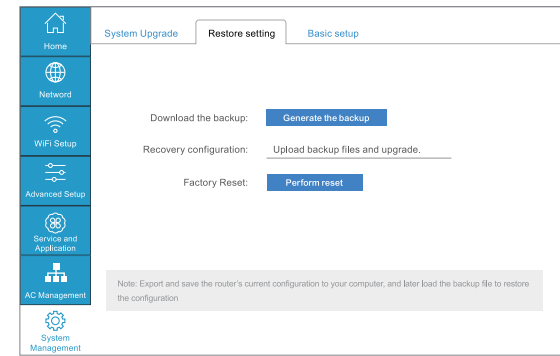

Product warranty

The following conditions are not covered by the warranty replacement, please note:

- Unauthorised repair, unauthorised disassembly.
- Product failure or damage caused by failure to install, use, maintain, or store in accordance with the instruction manual.
- Artificially injecting or loading, altering the serial number of the product.
- Has exceeded the warranty, warranty period.
- External factors or human behavior lead to product damage, such as input inappropriate voltage, high temperature, liquid, mechanical damage, broken, severely oxidized or rusted, etc.
- Customer's damage caused by transportation during the repair process.
- Failure or damage caused by force majeure (such as fire, earthquake, etc.) or natural disasters (such as lightning strikes).
- Other failures or damages caused by problems other than product design, technology, manufacturing, quality, etc.

Warranty description

- Product warranty time is 1 year, the warranty method is for customer service, warranty replacement is limited to this machine, packaging, software production Product.
- The power adapter has a warranty period of 1 year, such as the power adapter has obvious hard object damage, cracks, broken feet, serious deformation, damage to the power cord, disconnection, and bare core are not guaranteed, and users can purchase it themselves.
- The repaired machine, if it is under the warranty period, will continue to enjoy the warranty service; if it is less than 3 months from the end of the warranty period, the replaced product has a 3 month warranty from the date of replacement.
- The mailing fee for the returned product is the one-way responsibility of the sender.

User sub

In order to protect your rights and interests, please fill in carefully and keep it as a voucher for maintenance.

User information:

Contact address:

Contact number:

Email:

Product certification

Model number:

DC:

Date:

Note: The final interpretation right of this manual belongs to our company. There are product changes, which are subject to the actual product without prior notice!

Declaration of Conformity (EUD)

This product is applicable to all EU member states. An alternative format of this instruction manual is available upon request to the Customer Service. Hereby, we declare that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Warranty, declares that the radio equipment type

Wonder Elf Box

C1

Signs in compliance with Directive 2014/53/EU. It can be used if no longer without restriction. Also, user can found the Declaration of Conformity EUD Directive in our website: www.ac-link.com

The full text of the CE Declaration of conformity is available at the following:

Report: www.ac-link.com

Address: Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong

Unit 10, 10/F, Tower 1, Southbank, Hong Kong