

size: 90x130mm

说明书

一, 充电

外插5V为本机充电, 充电时LED灯常亮。

二, 开机/关机

开关拨到“ON”位置为开机, 拨到“OFF”位置为关机。

三, 按键操作

1, “M”

短按: 蓝牙/自拍/USB/TF/RADIO/AUX切换。

2, “M/V-”

长按: 音量减。

短按: 收音模式为上一个台, MP3模式为上一首歌曲。

在自拍模式下短按 “M/V-” 键为自拍功能 (仅适于苹果系统手机)

3, “M/V+”

长按: 音量加。

短按: 收音模式为下一个台, MP3模式为下一首歌曲。

在自拍模式下短按 “M/V+” 键为自拍功能 (仅适于安卓系统手机)

4, “M/”

MP3/收音/蓝牙状态时短按为播放/暂停; 收音状态时长按为自动搜台。

通话中短按 “M/” 键为“手机接听/蓝牙音箱接听”之间切换;

通话中长按 “M/” 键为挂机;

蓝牙静置时长按 “M/” 键为回拨上一个电话。

有来电时短按 “M/” 键为接听电话, 长按为拒听;

5, “REC/DEL”

在蓝牙/AUX/FM模式下长按开始录音(显示REC), 再次长按退出录音。

在音乐模式下短按快速播放录音, 长按删除录音。

四, 蓝牙连接

开机自动进入蓝牙模式(有语音提示), 手机打开蓝牙搜索本机品牌, 点击连接。成功有语音提示, 进入蓝牙模式后可以各项蓝牙操作。

五, 自拍功能

1. 按“M”键, 从蓝牙模式转换到自拍模式;

2. 手机打开蓝牙, 搜索“shutter”, 点击连接; 连接成功会声音提示

3. 打开手机的拍照界面, 此时按 “M/V-” 或者 “M/V+” 按键进行拍照。

附: 安卓系统要求4.2.2以上版本, IOS要求6.0以上版本, 其它版本不支持;
手机有独立拍照按键的一般不支持。

manual

一, charge

Extrapolation for native 5V charging when the charging LED lights stay lit.

二, ON/OFF

Switch to "ON" position to turn on, dial to "OFF" position to turn off the machine.

三, The Key Operation

1, "M" Short press: Bluetooth / Self- timer /USB/TF/RADIO/AUX switch.

2, "M/V-"

Long press: for the volume reduction.

Short press: for a station in radio mode, MP3 mode to the previous song.

The self timer mode, short press "M/V-" button for the self- timerfunction (only available for Windows Mobile Phones)

3, "M/V+"

Long press: the volume increase.

Short press: Radio Mode for a console, MP3 mode for the next song.

In self-timer mode, short press "M/V+" button for the self-timer function (only for Android)

4, "M/"

MP3/Radio/Bluetooth short pressPLAY / pause status. Long press for autoscan radio;

Call, short press "M/" "Key for "Bluetooth speaker phone / answer" to switch between.

There is an incoming call, short press "M/" button to answer the phone,

Long press to reject

Call in the short / long Press "M/" button to hang up

Bluetooth static long Press "M/" button to dial a telephone

5, "REC/DEL"

Long press start recording (show REC) in wireless, AUX/FM mode and long press exit recording again. Short press to play the recording in music mode and long press to delete the recording

四, The Bluetooth connection

Boot into the bluetooth mode automatically(Voice prompt), open the mobile phone, search the brand and click connect. Success has a voice prompt.

五, The Self timer function

Press "M" key from the Bluetooth mode switch to the self-timer mode;

Open the Bluetooth mobile phone, search for "shutter", and click Connect;

Open your phone's camera interface, then press "M/V-" or "M/V+" button to take pictures.

Attachment: Android system requires version 4.2.2 or above, IOS requires version 6.0 or above, other versions are not supported for the being. camera phones have an independent entity keys are generally not supported.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction