


F TAB

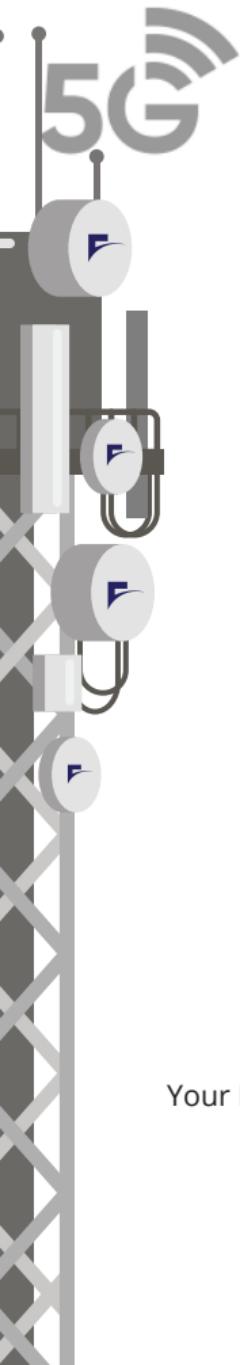



Thank You For Your Trust In



Your Local US Cellular and Broadband Services Provider

Table of Content

What's in the box	3
Getting Started	6
Your Home Screen	8
Switch On or Wake Up	11
Power Off or Restart	11
Emergency Call	11
Internet Connection	12
Quick Settings Options	14
Voice Commands	17
Common Troubleshooting	18
Warnings	19
Technical Specifications	20

What's in the box

Your Figgers tablet comes ready to use. We have taken care to package together all hardware accessories and software tools needed for your learning, healthcare and professional needs. The box comes with

- Tablet
- Power Charger
- Data Cable
- Bluetooth Keyboard with Touchpad
- Screen Protector
- Magnetic Protective Cover
- Figgers SIM Card
- User Manual

Your Figgers tablet is already activated for

- ▶ Unlimited Calls
- ▶ Unlimited Text
- ▶ High-speed Data

However if you need assistance please call the toll free helpline **1-800-223-5435** or email Customer.Service@figgers.com with your IMEI and ICC ID numbers printed on the box.

Tablet



1 Tablet Power Button	2 Volume Up +/-
3 Front Camera	4 Microphone
5 Back Camera	6 Flashlight
7 Stereo Speakers	8 Headphone
9 Tablet USB C Interface	10 External Memory Slot
11 Factory Reset Key	12 Keyboard Power Button
13 Keyboard Charging Slot	14 Magnetic Close Strap
15 Premium Cover	16 Touchpad

Keyboard with Touchpad



Getting Started

Before diving in, ensure your Figgers Tablet and Bluetooth Keyboard are fully charged. This typically takes about 4 hours before the first use.

Charging Your Figgers Tablet

Using the provided USB C wall charger, juice up your tablet. When the device is off, a charging animation will appear to show the current battery status. If the tablet is on, look for the battery indicator at the top right corner of the screen to confirm it's charging.

Charging Keyboard and Touchpad

Your tablet includes a Bluetooth keyboard and touchpad, both needing a charge like any other Bluetooth device. Plug them in using the included USB C wall charger. Once connected, the keyboard's charging indicator will glow blue. This light might change color or switch off entirely once its fully charged.

Powering Up Your Figgers Tablet

Spot the red power button on the top right of your Figgers tablet (1 in the previous figure). To turn it on, press and hold the red power button for a few seconds. The FIGGERS logo screen will appear, signaling the tablet is starting up.



As for the Bluetooth keyboard, it's already paired with your tablet. slide down the power button on the keyboard's right side (identified as ⑫ in the previous figure) to switch it on. The indicator light will indicating the keyboard is active.



Touch Screen Basics

Tap the screen once to **activate or open** something.



Touch and hold to **move an item** by dragging. In many apps touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map. some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.



You can flick the screen with your finger to quickly **scroll** through a long list, such as a library of music.

Tap a specific location on the screen where you would like to **enter text**. The on-screen keyboard will pop up.

Your Home Screen

You can fill the home screen with any combinations of shortcuts, widgets, and folders you like.

When you power up your Figgers tablet for the first time, you'll see the main home screen panel with the Google search bar on the top and app icons at bottom. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.



Battery Level: The white battery level indicator will decrease and change to red as the battery is drained.



Wi-Fi Signal: Will show the Wi-Fi connection if any. It turns gray when there is no Wi-Fi connection.



LTE Signal: Will show the signal strength of the cellular network.



Home: Go back to the home screen. Hold for a few seconds to open Assistant offering voice commands.



Recent apps: Open a list of recent apps. Tap an app to open or swipe left/right to remove the thumbnail.



Back: Go back to the previous screen.

Adding Icons

Choose an app or widget for about 2 seconds until the same screen appears. slide it wherever you want and let go.



Moving Icons

Touch and hold the icon.

1. Slide your finger to the new position.
 - To move between screens, slide toward the edge of the screen. To bump another icon out of the way, slide slowly towards it.)
2. Lift your finger to drop the icon into its new position.

Removing Icons

Touch and hold the app or widget and drag to the X icon at the top of the screen.



Take a Screenshot

Make sure the image you want is displayed on the screen. Press the Power button (red) and Volume Down - button together. It will take the screenshot and display it at the bottom corner.



Sleep Mode

To save battery, you should put your FTab in sleep mode by turning off the LCD display. To do this, press the power key red button ① and immediately release it. Do it again to bring up the lock screen.



Notifications

Swipe down from the top of your Home screen to view your notifications.



This will open up the quick menu for reviewing all notifications from all apps. The notifications list can be cleared by the clear button on the bottom.

This swipe down screen also lists quick access applications and settings including screen brightness and Internet. More on that is shared later.


Switch On or Wake Up

The red power button next to volume is used to switch on or wake up from sleep mode. Click this button once wakes the FTab from sleep mode. When FTab is powered off, clicking and holding the red power button for a few seconds will switch on the FTab.

Power Off or Restart

With the FTab powered on, click and hold the red button for a few seconds. It will show the menu for shutdown and restart. Choose as needed.

Same menu can be access from the swipe down screen. The power button on the bottom of that screen will show the same options to shut down or restart the FTab.

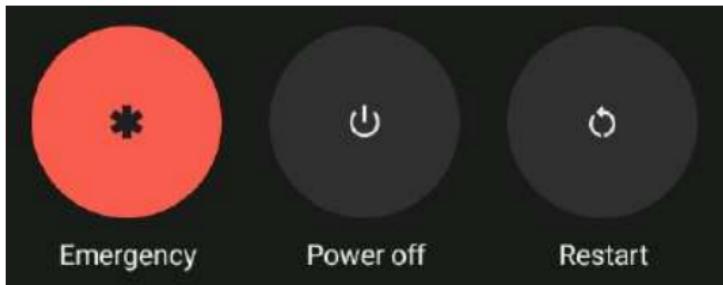

Emergency Call

With the FTab powered on, click and hold the red button for a few seconds. It will show the menu to make Emergency call. Clicking the emergency call button will allow dialing emergency services 911.

Internet Connection


Your FTab comes with high speed mobile data service enabled, and you can connect to Wi-Fi as well. The active data connections appear with their icons on the top bar, as shown below.



Connect to Wi-Fi


Your FTab allows to connect to and switch between different Wi-Fi networks in two easy steps, as shared below.

1. Swipe down the top of your home screen and click on **Internet**.

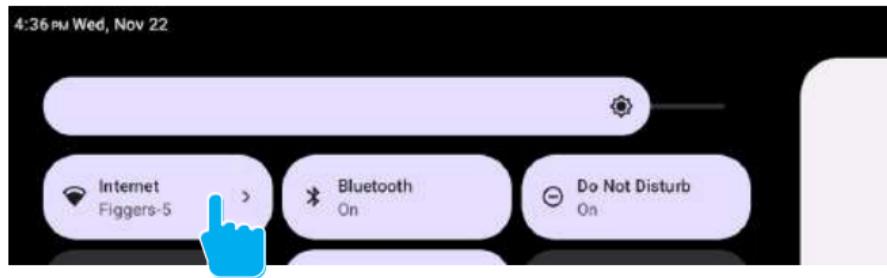

2. The **Internet** dialog box will show up. All your Wi-Fi and LTE data settings are controlled from this one location. Please ensure that

- Wi-Fi is turned ON, indicated by the colored switch. You can change the status by tapping on the button. It will turn gray when its switched OFF.
- You will see the list of available wireless networks. Choose the wireless network from the list of available networks.

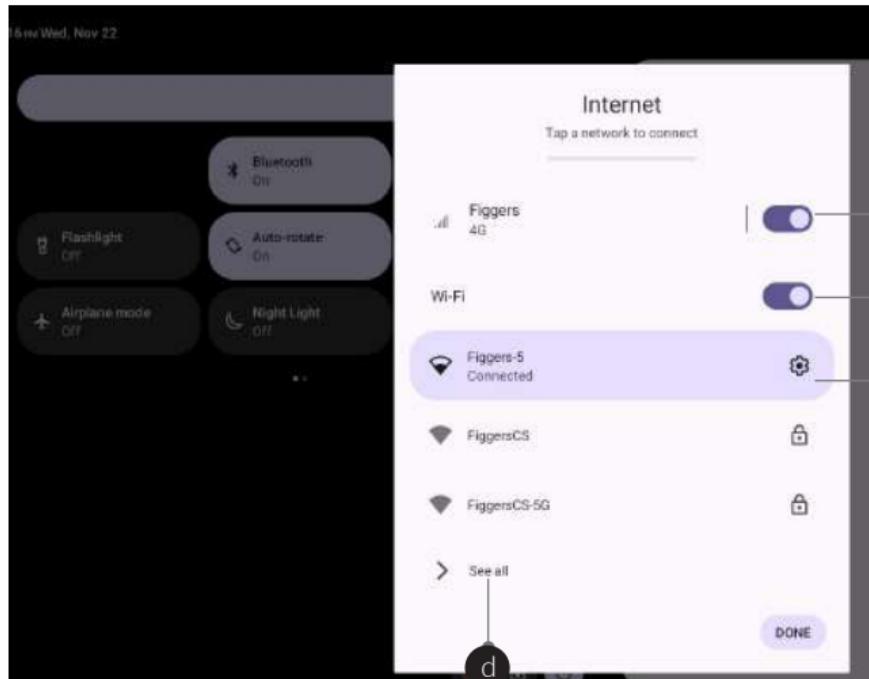

a Cellular Data Switch

b Wi-Fi Switch

c Wireless Networks List

d Show All Available Networks

- Switch mobile data on and off.
- Wi-Fi switch on and off.
- List of available networks. Currently connected wireless network appears selected as shown. The settings icon allows to configure this wireless connection.
- Click to see all available wireless networks.

Quick Settings Options

Your FTab is engineered for swift, seamless access to your daily tasks. Customize your experience for faster navigation and simplified operations, tailored to suit your preferences.

Here are some common tasks that can be configured with a simple swipe down from the top of the screen:

-  **Screen Brightness:** Easily adjust your FTab's screen brightness with a simple slide, ensuring optimal visibility as needed.
-  **Bluetooth:** Bluetooth is seamlessly activated by default to pair with your Figgers Keyboard with Touchpad. Toggle Bluetooth on and off directly from this screen.
-  **Internet:** Effortlessly manage both mobile data and Wi-Fi connections from one convenient location.
-  **Do Not Disturb:** Tailor your experience by receiving calls only from selected contacts and notifications from chosen apps. Additionally, customize alarms that can interrupt you in this mode.
-  **Flashlight:** Illuminate your surroundings with the built-in flashlight on the back of your FTab, conveniently controlled from this menu.
-  **Auto Rotate:** Toggle the auto-rotate mode on or off. Once activated, this feature automatically adjusts your displayed content as you change the orientation of your FTab.
-  **Battery Saver:** Optimize your FTab's battery life by easily switching the intelligent battery saver mode on or off as needed.

-  **Screen Record:** Capture your screen, including videos, with the screen recording feature. Choose to record audio and display touches on screen during recording.
-  **Nearby Share:** Make your FTab visible to nearby Bluetooth devices and connect seamlessly with others in proximity.
-  **Location:** Exercise control over location sharing settings on your FTab with easy-to-use configurations.
-  **Hotspot:** Transform your FTab into a Wi-Fi hotspot, securing access with a customizable password for network sharing.
-  **Bedtime Mode:** Transform your FTab into a tranquil space by silencing it, dimming the wallpaper, and switching the screen to black and white. Optionally, activate "Do Not Disturb" automatically.
-  **Mic Access:** Toggle the microphone on or off with a simple touch for enhanced control.
-  **Data Saver:** Conserve data usage by activating data saver, preventing selected apps from sending or receiving data in the background.
-  **Dark Theme:** Embrace a dark-themed interface, utilizing a black background to extend battery life on specific screens.
-  **Airplane Mode:** Ideal for air travel or situations where signals may cause disturbance. Activate Airplane Mode to switch off cellular connectivity instantly.
-  **Night Light:** Automatically adapt the tablet screen for easier viewing and reading in dim light, potentially aiding better sleep.



Live Caption: Harness the power of automatic speech detection on your FTab, generating captions that can be customized for language, profanity, and labels for laughter, applause, and music.



Storage: Access a one-click display of your FTab's current storage status, categorizing files for easy cleanup or scans for potentially harmful apps.



Color Inversion: Automatically switch light screens to dark and dark screens to light, providing a unique visual experience.



Extra Dim: Dim your screen further for a more comfortable reading experience on your FTab.



Alarm: Set up alarms with ease, configuring them for one-time or repeating schedules according to your preferences.



Screen Cast: Share your FTab screen seamlessly with a connected Android device using the screen casting feature.



Focus Mode: Temporarily pause distracting apps and hide their notifications when you need uninterrupted focus.



Scan QR Code: Activate the QR code scanner effortlessly to scan any QR code as needed.



Calculator: Launch the calculator app directly from the Quick Settings menu.



Color Correction: Adjust your FTab display to your liking, fine-tuning how colors are shown.

Voice Commands

Keep the home button pressed for a few seconds will show the voice assistant. Please note that you need to login with your Google account to enable this.

Some examples of voice commands are as follows,

Say	Followed By	Examples
[Words you want to search for]		"dress shoes"
"Map of"	Address, name, business name, or other destination	"Navigate to Florida Memorial" or "3810 3810 Inverrary Blvd, Fort Lauderdale, FL"
"Go to"	Search string or url	"Go to bing.com"
"Note to self"	Message text	"Note to self: remember to buy milk"
"Define"	Word to define	"Define campanile"
"Weather"	Location	"Weather Tamarac"
"Movie"	Movie location and Movie name	"Movie, AMC Tamarac, Wish"
"Pictures of"	Topic	"Pictures of cats"
"Translate to"	Language & Phrase	"Translate to Chinease, Thank you for helping"
[A math phrase]		"989 divided by 6"

Common Troubleshooting

Cannot turn on the tablet.

Check the tablet's power level. Please charge it before starting it. If your tablet still cannot be turned on, you may reset it before you turn it on.

Keyboard not working.

Please check that keyboard is powered-on and connected.

- Your keyboard should be charged
- Switch on using the switch on the right side.
- Please also confirm that your FTab Bluetooth is switched on and paired with your keyboard.

No sound from speakers or headphone.

Please check FTab volume is not '0'. Please also check the speaker volume in the app you are using. If headphones aren't working try another pair.

Static noise when talking or taking calls.

Please don't place any magnetic or electric devices in front of mic. Adjusting your distance from the mic also helps.

Frozen to any operation.

Press and hold the power button for 10 seconds to reset the device.

Application is not working.

Please confirm that app is compatible with android. You may need to download a full version from Google app store.

How do I delete a Google account?

If an account is added, the account is shown in Accounts of Settings, where you may also add another account. To delete an undesired account, tap the account, then tap the menu icon in the upper right hand corner and choose Remove account.

Warnings

- ! Only the original power adapter and Type-c line cable can be used to charge the tablet. Using different power adapters may damage the tablet.
- ! Make sure you plug the power supply into the power outlet with the correct input voltage. The adapter output voltage is 5.0V DC,2A.
- ! Keep your device away from strong magnetic fields which may damage the device.
- ! Only qualified employees of our company can repair tablets.
- ! We recommend keeping the volume at a safe level to preserve your health. In case of prolonged exposure to loud noise hearing troubles may arise.
- ! Be careful not to drop the device or bump it against objects, it may cause damages not covered by the standard warranty.
- ! Do not expose your device to damp environments, rain or extremely hot environments.
- ! The contact with water, sand or prolonged exposure to high temperatures may cause an irreparable damage.
- ! Keep your device away from excessive moisture and extreme temperatures.
- ! Do not place anything on top of your device or drop objects on your device. Do not drop your device or subject it to severe shock. Do not subject your device to sudden and severe temperature changes.

Technical Specifications

Display	Fullscreen IPS 10.36 inch 2000 x 1200 Full HD Capacitive 10-point touch 60 Hz refresh rate
Operating System	Latest Android 15 Free Support & Updates
Processors	Octa core 2.0 GHz Processor
Camera	Front 5M Rear 13M Flashlight
Storage/Memory	6GB RAM 128 GB internal storage Expansion: microSD card(max. 512GB)
Battery/Charging	6000 mAh battery Non-removable Li-Ion 5V/2A TYPE-C charger
Audio/Media	Loudspeaker 3.5mm stereo Radio: FM Video: MPEG4-SP, H.264/AVC, H.263, 3GP, 3G2, MP4, MKV, AVI, WEBM Audio: MP3, MP2, AMR, AWB, APE, M4A, MIDI, OGG, WAV, FLAC, 3GP Image: JPEG, BMP, GIF, PNG
Wireless	Wi-Fi(2.4G/5G WIFI) Bluetooth 5.0

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

This device meets the government's requirements for FCC exposure limits set forth for an uncontrolled environment. This device was tested for typical body worn operations with the back of the Tablets kept 0 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0 mm separation distance between the user's body and the back of the Tablets. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



We're here for you

Contact Figgers Support

Supporting You 24 Hours a Day, 7 Days a Week

Professional customer support team available to assist you at any time, using online chat. You may also connect us over phone and email as follows.



3810 Inverrary Blvd. Suite: 401, Fort Lauderdale, Florida 33319



1-800-223-5435



Customer.Service@Figgers.com