

MOVE remote

User manual

MOVE remote - Use it to control MOVE devices

Table of Content

1	Warnings and general precautions for safety	3
1.1	General warnings	3
1.2	Use warnings.....	3
2	Regulatory and safety notices	4
2.1	FCC warnings.....	4
2.2	ISED RSS Warning/ISED RF Exposure Statement	4
3	Product description and intended use	5
4	Pairing with a smartphone application	7
5	Pairing with a MOVE device	7
6	Normal use	7
7	Factory reset.....	8
8	Technical specifications.....	8
9	Disposal and recycling information	9

1 WARNINGS AND GENERAL PRECAUTIONS FOR SAFETY

Read these warnings carefully before you continue installing, connecting and using MOVE remote hereinafter called the product. It is very important that you follow the safety and warning instructions written in this manual to ensure a safe use of the product. Keep these instructions. Heed all warnings. Only use the product as described in these instructions.

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the product or other property.

1.1 GENERAL WARNINGS

The product configuration, collection programming and maintenance operations must be carried out exclusively by a qualified adult in observance of the instructions in this manual.

Keep the product out of reach for children. The product and its accessories may contain small parts. Keep them away from small children.

It is very important NOT to use a product with battery power if it must be placed in direct sunlight or near other heat sources, in high temperatures batteries can be dangerous. Read all safety instructions for any other products and/or accessories before using with this product. The manufacture of this product is not responsible for the operation of, or any damage caused by, third-party accessories or their compliance with safety and regulatory standards.

During set up and use, handle the product with care - avoid crushing, impact, dropping or contact with liquids - never place the product near sources of heat or expose to naked flames. All these actions could damage the product and cause malfunctions or dangerous situations.

Do not drop the product, if dropped or damaged do not use it. Be aware of that a dropped product may not have visibly detectable damage at the outside but have internal damages.

Be very careful when handling knives, scissors or similar sharp cutting tools.

Do not dismantle the product other than described in this manual. Do not make any changes to any part of the product except those indicated in this manual. Do not insert anything in the product except what's described in this manual. The manufacturer of this product declines all liability for damage caused by makeshift modifications to the product.

Only use batteries specified in this user manual, other types of batteries may damage the product. The manufacture is not responsible for any damage or situation that can be caused by using the wrong type of batteries.

1.2 USE WARNINGS

Keep the product out of reach for children. The product may attract attention of children and animals. During operation children and animals should be kept away from the device.

Wash yourself immediately if exposed to battery acid.

Always shield the product from direct sunlight.

Make sure that your burglar alarm does not trigger because of movement from your blinds or shades.

Never force insertion of batteries into the device. Check for obstructions in the battery compartment before installing batteries.

Refer all servicing to qualified service personnel. Service is required when the apparatus has been damaged in any way, such as when the plastic is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Do not use the product in rain, or near washbasins or other wet locations and avoiding water and wet locations. Take care not to spill any food or liquid on the product. In case the product gets wet, remove the battery before cleaning, and allow it to dry thoroughly before turning it on again. Do not attempt to dry the product with an external heat source, such as a microwave oven or hair dryer. Damage to the product caused by contact with liquid is not covered by the manufacturer.

2 REGULATORY AND SAFETY NOTICES

Model name: MR1904

2.1 FCC WARNINGS

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

2.2 ISED RSS WARNING/ISED RF EXPOSURE STATEMENT

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. Ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

3 PRODUCT DESCRIPTION AND INTENDED USE

Note: MOVE remote is intended exclusively for use to control MOVE devices. Any other use is absolutely prohibited! The manufacturer is not liable for damage resulting from any use of the product other than the intended use specified in this manual.

Functional characteristics of the product:

- MOVE remote is a remote to control MOVE devices.

MORE remote use the radio protocol Bluetooth and can be used either directly with MORE devices or together with a smartphone application. The remote have 9 channels where either single MORE devices can be controlled, or groups of MORE devices can be controlled. The remote also have a broadcast channel to send commands to all MORE devices that is in the same mesh network.

Pic 1, MORE remote overview



- | | |
|---------------------|----------------|
| 1. Indication LED:s | 4. Stop button |
| 2. Channel button | 5. Down button |
| 3. Up button | |


The indicator LED:s can show the following:

- Digit 0 to indicate broadcast mode
- Digit 1-9 to indicate the current selected channel
- Letter A to indicate pairing to application
- Letter P to indicate pairing to MOVE device
- Letter F to indicate factory reset
- Letter L to indicate low power

Note: Make sure to install batteries with the correct polarity orientation in the battery compartment

Note: Only use LR03/AAA batteries

Pic 2, Battery overview

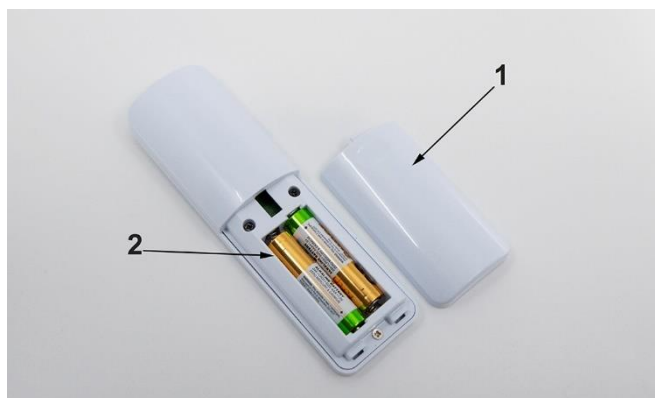

1. Plastic cover

2. Batteries

To access the batteries, remove the plastic cover (pic 2, position 1) at the back side of the MOVE remote.

It is important to insert batteries of the correct type (LR03/AAA) with the correct orientation. Positive and negative terminals are always marked at the batteries.

In the battery compartment, under the plastic cover the battery orientation (pic 2, position 2) and battery details are molded into the plastic.

When batteries are running low the letter L will be shown by the indicator LED:s (pic 1, position 1).

4 PAIRING WITH A SMARTPHONE APPLICATION

First download the MOVE application from either Google Play or Apple Store.

Once the application is installed do the following:

1. Put the application in pairing mode.
2. Press and hold the stop button (pic 1, position 4) until A is visible by the indicator LED:s (pic 1, position 1).
3. Follow instructions in the application.

5 PAIRING WITH A MOVE DEVICE

Do the following:

1. Press and hold the stop button at the MOVE device for 15 seconds (release stop button when the red led is illuminated at the MOVE device). After the stop button at the MOVE devices is release the MOVE device will reboot and start blinking green to indicate that it is in paring mode.
2. With the MOVE device in paring mode (blinking green), press and hold stop button (pic 1, position 4) until P is visible by the indicator LED:s (pic 1, position 1) at the MOVE remote. Release the stop button at the MOVE remote and wait until the MOVE device stops blinking green.
3. When the MOVE device has stopped blinking green, click any button at the MOVE remote to exit paring mode.
4. Start using the up and down buttons to control the MOVE device.

6 NORMAL USE

Use the channel button (pic 1, position 2) to select what channel that should receive the commands.

Use the up and down buttons (pic 1, position 3 and 5) to command a MOVE device to either go up or down.

The stop button (pic 1, position 4) can be used to stop the MOVE device, this can be used to only partly go up or down with the MOVE device.

7 FACTORY RESET

In order to clear all settings and go back to the default state of a MOVE remote, a factory reset can be performed.

To do this:

1. Push and hold down the stop button (pic 1, position 4) until F is visible by the indicator LED:s (pic 1, position 1). When F is indicated by the LED:s, release the stop button.
2. After the stop button is release the MOVE remote will perform a factory reset and then reboot.

8 TECHNICAL SPECIFICATIONS

Main power source: Battery LR03/AAA

Radio protocol: Bluetooth LE 4.2

Size MOVE remote: Length 130mm, width 38mm, height 18mm

Weight: 60g

9 Disposal and recycling information

You must dispose of MOVE properly according to local laws and regulations. Because MOVE contains electronic components, MOVE must be disposed of separately from household waste. When MOVE reaches its end of life, contact local authorities to learn about disposal and recycling options, or simply drop it off at your local Tepron retail store or return it to Tepron.

MOVE packaging materials must be disposed of in full compliance with local regulations.



European Union—Disposal Information

The symbol above means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Union Européenne—informations sur l'élimination: Le symbole ci-dessus signifie que, conformément aux lois et réglementations locales, vous devez jeter votre produit et/ou sa batterie séparément des ordures ménagères. Lorsque ce produit arrive en fin de vie, apportez-le à un point de collecte désigné par les autorités locales. La collecte séparée et le recyclage de votre produit et/ou de sa batterie lors de sa mise au rebut aideront à préserver les ressources naturelles et à s'assurer qu'il est recyclé de manière à protéger la santé humaine et l'environnement.

Europäische Union—Informationen zur Entsorgung: Das oben aufgeführte Symbol weist darauf hin, dass dieses Produkt und/oder die damit verwendete Batterie den geltenden gesetzlichen Vorschriften entsprechend und vom Hausmüll getrennt entsorgt werden muss. Geben Sie dieses Produkt zur Entsorgung bei einer offiziellen Sammelstelle ab. Durch getrenntes Sammeln und Recycling werden die Rohstoffreserven geschont und es ist sichergestellt, dass beim Recycling des Produkts und/oder der Batterie alle Bestimmungen zum Schutz von Gesundheit und Umwelt eingehalten werden.

Unione Europea—informazioni per lo smaltimento: Il simbolo qui sopra significa che, in base alle leggi e alle normative locali, il prodotto e/o la sua batteria dovrebbero essere riciclati separatamente dai rifiuti domestici. Quando il prodotto diventa inutilizzabile, portalo nel punto di raccolta stabilito dalle autorità locali. La raccolta separata e il riciclaggio del prodotto e/o della sua batteria al momento dello smaltimento aiutano a conservare le risorse naturali e assicurano che il riciclaggio avvenga nel rispetto della salute umana e dell'ambiente.

Europeiska unionen—information om kassering: Symbolen ovan betyder att produkten och/eller dess batteri enligt lokala lagar och bestämmelser inte får kastas tillsammans med hushållsavfallet. När produkten har tjänat ut måste den tas till en återvinningsstation som utsetts av lokala myndigheter. Genom att låta den uttjänta produkten och/eller dess batteri tas om hand för återvinning hjälper du till att spara naturresurser och skydda hälsa och miljö.