

The device you need to track the things you care about

Quick User Guide

Weatherman® Droplet

GETTING STARTED

1. Download the app

Download the free app from the Play Store or App Store

2. Enable Bluetooth and Location

Enable Bluetooth on your smartphone to communicate with the device. Turn on location services and select “Always On” to always have current information about your device.

3. Sign Up

Sign up for an account to manage all your locations and devices in one place.

4. Connect your device

- On first use, using a coin, open the back battery cover and remove the battery insulating pull tab. A tone should sound to wake up the device.
- While the device is near, open the app and search for your “Weatherman Droplet” device
- Select to “Weatherman Droplet” and wait for activation

5. Attach your device

While the Weatherman® Droplet slides into the zipper pocket of the canopy in all Weatherman® umbrellas, the Weatherman® Droplet can also be attached to other items you want to track.

6. Keep the app and your device connected

The app can run continuously in the background to keep your track of your device.

Primary Features

Track your device- Just open your Weatherman® App, locate the devices tab, and beep your device.

Last known location – Locate the last place your device was connected with in-app maps to navigate back to your device.

Long Range- Using Bluetooth© 5 technology, you will be able to locate your device up to about 450ft unobstructed.

Reminder Alerts - Using the Weatherman® App, your device can remind you about important things

CARE INSTRUCTIONS

The device is rated to IPX54 standards and can withstand splashes of water. Do not submerge the device in water to avoid irreversible damage.

Do not expose the device to extreme hot or cold temperatures as it can affect the performance of the device.

Please keep the device out of reach of children. The small parts of the device may present a choking hazard

DEVICE DETAILS

Show 2D image of the device with dimensions.

CHANGING THE BATTERY

Using a coin to open the device, turn counter-clockwise.
Turn the device upside down and the battery should fall out.
Replace the old battery with a new CR2032 battery.

After replacing the battery cover the device will beep to indicate that it is on.

*The device does not need to be paired with the phone again

Safety Tips

Keep batteries out of reach of children and pets. If swallowed please seek medical attention immediately.

Do not expose batteries to water or fire

Do not attempt to charge non-rechargeable batteries

Used batteries contain toxic substances that must be treated separately from domestic waste. Please contact your local waste administration regarding disposal and recycling.

REGULATORY STATEMENT

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ATDR-WMN111

CAUTION: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device meets the FCC requirements for RF exposure in public or uncontrolled environments.

Declaration of European Conformity (CE)

This device complies with the essential requirements and other relevant provisions of RED 2014/53/EU

Canadian Compliance Statement

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device meets the ISED requirements for RF exposure in public or uncontrolled environments.

WARRANTY

The device has been manufactured and thoroughly tested to meet strict quality standards. The warranty covers defects in materials and manufacturing process.

For more information, please visit:

<http://www.weathermanumbrella.com/warranty>

Online User Guide available at:

<http://www.weathermanumbrella.com/user-guide>

Weatherman Inc.
Brooklyn, NY USA