



WATER RESISTANT WIRELESS SPEAKER Model: 160499

Warnings

Battery warning!

- "Caution" — The battery used in the product may present a risk of fire or chemical burn if mistreated. Batteries may explode if damaged.
- Only recharge your battery with the provided approved cable designated for the product.
- Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose the battery as household waste or in a fire as it may explode.
- The battery in your product can not be removed or replaced by the user. Any attempt to do so is unsafe and may result in damage of the product.

Built-in Battery Care:

- Your product is powered by a rechargeable battery. Optimal performance of a new battery is achieved only after two or three complete charge and discharge cycles. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Leaving the product in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.
- Always try to keep the battery between 32°F and 113°F. A product may not work temporarily with an extremely hot or cold battery, even when the battery is fully charged.

Important Safety Precautions

 
Read all instructions before using your Wireless Speaker.

- Never expose your product to high temperatures, extreme cold or submerge in water.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- In order to avoid the risk of electric shock, never attempt to open your product or repair it, consult a certified professional.
- If you detect any abnormalities when using your product immediately discontinue use and contact the manufacturer.
- Unplug your product when it will not be in use for long periods of time or during lightning storms.
- Never mount or store the product over any airbag deployment area, as serious injury may result when an airbag deploys.
- Do not dispose of product in heat or fire.
- Do not clean the product with harmful chemicals or detergents.



Water Resistant

IPX4 water resistance rating: Wireless speaker is protected against splashing water for a short period of time.

Note: The wireless speaker is NOT waterproof and can not be used while swimming, showering or submerged in water.

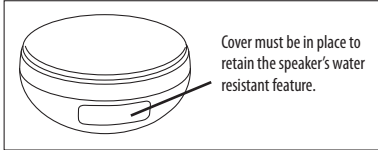

Product Overview

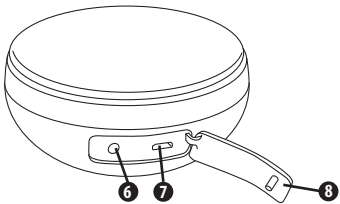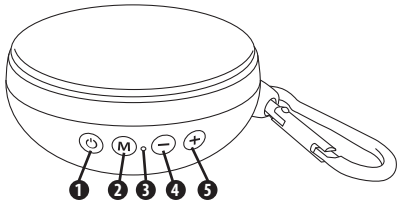  

- | | |
|-------------------------------------|-------------------------------------|
| 1 Power | 5 Volume + / Next Track |
| 2 Mode | 6 Auxiliary Audio Input Jack |
| 3 Indicator Light/Microphone | 7 Micro-USB Charging Port |
| 4 Volume - / Previous Track | 8 Water Resistant Cover |

Turning On/Off the Wireless Speaker

Turning On: Press and hold **1** button for 2 seconds until indicator light flashes and you hear "Power on, wireless mode".

Note: If you have an aux cable plugged into the auxiliary audio input jack you will hear "Power on, audio mode".

Turning Off: Press and hold **1** button for 2 seconds until indicator light turns off and you hear a "Power off".

Bluetooth® Connection (Pairing)

1. Turn on the wireless speaker by pressing and holding the **1** button for 2 seconds until indicator light flashes and you hear "Power on, wireless mode".
2. Place the wireless speaker and the Bluetooth device (phone) so that they are no further than 3ft apart.
3. Activate the Bluetooth function on your Bluetooth device. (Refer to the manufacturer's instruction manual to enable Bluetooth on your device).
4. Select "24/7 LIFE BT Speaker" from the list of available Bluetooth devices. If required enter password "0000". If "24/7 LIFE BT Speaker" does not appear in your device turn off the Bluetooth function on your device then turn it back on.
5. Once paired successfully, you will hear a confirmation "Connected" and the indicator light will be on solid.

Note 1: Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range.

Note 2: The speaker will attempt to automatically connect to the last device it was paired with when switch on. If you want to pair it with a new device, disconnect (unpair) the speaker from the previous device and follow the steps outlined above.

Bluetooth® Connection Trouble Shooting

Why won't the wireless speaker connect to my device?

- a. The Bluetooth setting on your device may have been turned off. Turn on the Bluetooth function and search for "24/7 LIFE BT Speaker".
- b. The wireless speaker may have been connected to another device. Disconnect (unpair) the speaker from the previous device before connecting it to your device.
- c. The wireless speaker may not have been recognized by your device. Turn off the wireless speaker then turn it back on. Search your Bluetooth settings on your device and connect the wireless speaker.
- d. The wireless speaker may be to far away from the device to connect. Make sure there are no obstacles between the devices and reconnect the wireless speaker.

Music Operation

You can control your music from your device by using the buttons on the wireless speaker. Use the chart to control your music:

Function	Operation
Volume Up	Long press “+” button
Volume Down	Long press “-” button
Previous Track	Short press “-” button
Next Track	Short press “+” button
Pause	Short press “M” button once
Play	Short press “M” button once

Why isn’t the wireless speaker playing music?


The volume level on the wireless speaker is set at the minimum. For best sound quality long press the volume “+” on the wireless speaker until you hear a beep, then use your device to adjust the volume to the desired level.

Hands Free Operation

You can control phone calls from your Bluetooth device by using the buttons on the wireless speaker. Use the chart to control your phone calls:

Function	Operation
Answer a Call	Short press “M” button once
End a Call	Short press “M” button once

 
Note: If caller can’t hear you clearly speak directly into the microphone.

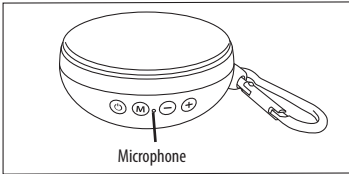

Auxiliary Audio Input Jack

The Auxiliary Audio Input Jack allows you connect the output from your audio player device such as your portable player, phone, etc to your wireless speaker. When you plug a 3.5mm auxiliary audio cable into the wireless speaker you will hear “Audio mode”.

 Note: For best audio quality increase the volume level on the wireless speaker to it’s maximum, then use the volume control on the audio player device to adjust the volume to the desired level.

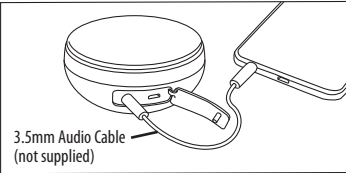


Charging


The wireless speaker has a built-in rechargeable battery. It is recommended to fully charge the wireless speaker before using.

1. Use the provided cable to charge the wireless speaker from a car/wall charger or from a computer’s USB port.
 - Red indicator light on = charging
 - Red indicator light off = fully charged
2. It takes approximately 2 to 3 hours to fully charge the wireless speaker.

 Recharge via USB Wall Charger:

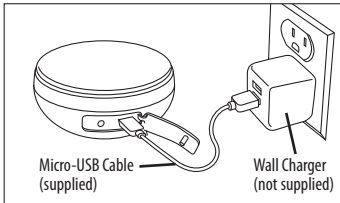

Recharge via Computer’s USB Port:

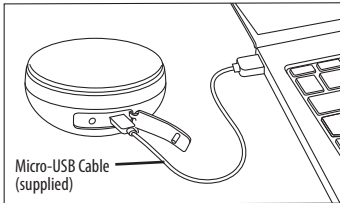 

Trouble Shooting

Why won’t the wireless speaker power on?

- a. The wireless speaker’s batteries need to be recharged using the charging cable.

Why isn’t the wireless speaker playing music?

- a. The volume level on the wireless speaker is set at the minimum. For best sound quality press the volume “+” on the wireless speaker until you hear a beep, then use your device to adjust the volume to the desired level.
- b. Make sure the wireless speaker is connect to the Bluetooth device.

Specifications

Product Covering Material: ABS plastic + Silicone + Fabric

Bluetooth Version: V5.0

Sound Output: 3W

Battery type: Li-ion

Battery Capacity: 800mAh

Charge Time: 2-3hours

Included Accessories: Charging cable and carabiner

Specifications are subject to change without notice.

FCC Information

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

“The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by [licensee name] is under license. Other trademarks and trade names are those of their respective owners.”