



SPORT TWS EARBUD



QUICK START GUIDE

IMPORTANT SAFETY

Read all instructions before using your earbuds.
Important: Use of earbuds while operating a vehicle, motorcycle, watercraft or bicycle is not recommended and is illegal in some areas. Check and obey applicable laws and regulations on the use of earbuds while your operating a vehicle. Be careful and attentive while driving. Stop listening to your audio device if you find it disruptive or distracting while operating any of vehicle or performing another activity that requires your full attention.
• Never expose your earbuds to high temperatures, extreme cold or submerge in water.
• If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
• In order to avoid the risk of electric shock, never attempt to open your earbuds or repair them, consult a certified professional.
• Your earbuds are not to be used by children without adult supervision.
• Do not clean the earbuds with harmful chemicals or detergents.

MAINTENANCE

Store the earbuds.
When you're not using the earbuds, store them in the charging case. Close the charging case to help preserve battery life and keep the charging case free of debris. When storing the earbuds for an extended period of time (more than 4 weeks), make sure they are stored at room temperature and the charging case battery level is greater than 40%.
Clean the earbuds and charging case.
Ear tips: Remove the tips from the earbuds and wash them with a mild detergent and water. NOTE: Make sure you thoroughly rinse and dry the tips before re-attaching them to the earbuds.
Earbud nozzles: Wipe only with a dry, soft cotton swab or equivalent. CAUTION: Never insert any cleaning tool into the nozzle.
Charging contacts (on earbuds) and charging pins (in charging case): To prevent rusting, wipe with a dry, soft cotton swab or equivalent.
Charging case: Wipe only with a dry, soft cotton swab or equivalent.

GETTING STARTED

- ① TYPE-C charging port


② Charging case LED indicators
- ③ Left earbud LED indicator

④ Left control area

⑤ Right earbud LED indicators

⑥ Right control area

Ⓘ Left Earbud / Ⓡ Right Earbud
Pause/Play/Answer Call/End Call, Next Track, Volume +/-

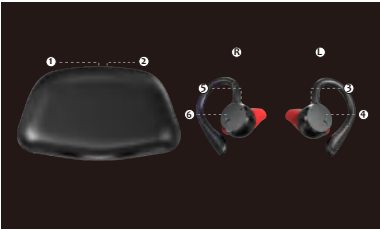

CHARGING YOUR CASE

— Charge on the go charging case, with the included TYPE-C cable for 2-3 hours.(LEDs will blink white)
Do not charge longer than suggested time. Do not charge overnight.
— When 4 LEDs are on, battery case is fully charged.



CHARGING YOUR EARBUDS



— Put the two earbuds into the charging case, earbud LED indicators (3, 5) will illuminate Red.
— When Earbuds LEDs (3, 5) turn off, earbud batteries are fully charged.

- STEREO MODE
(DUAL EARBUD USE)**



- ## PAIRING



- *Note: Once earbuds have been initially paired successfully with your mobile device they will automatically pair the next time they are powered on.

OPERATING BLUETOOTH EARBUDS

Function	Operation
Power On	Touch (4) or (6) for 3 seconds
Power Off	Touch (4) or (6) for 5 seconds
Play/Pause	Single touch (4) or (6)
Answer	Single touch (4) or (6)
Reject	Touch (5) or (7) for 2 seconds
Earbuds	LED Indications (4) & (6)
Power On	Red and Blue LED will flash alternately
Link Mode	Flashing Blue + Red
Paired Successfully	Flashing Blue
Power Off	LED Off
Earbuds in Case	
Charging	Light Red
Fully Charged	Light Off
Charging Case	See CHARGING YOUR CASE

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:
Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement Caution:
This transmitter must be installed to provide a separation distance of at least 5 feet from all persons.

FCC Statement:
"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off or on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."