


OSQ

Portable DVD Projector

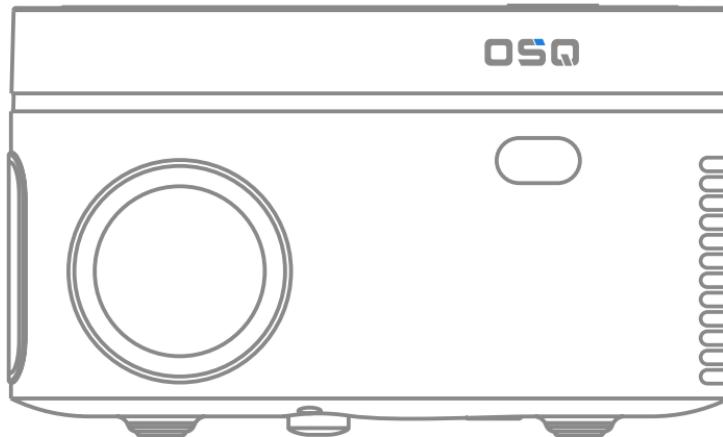

O-303 USER MANUAL

REV1.0



English
User Manual
01-20



日本語
取扱説明書
21-39

Content

FCC WARNING STATEMENT	02
PACKING LIST	03
NOTICE	03
FUNCTION OVERVIEW	04
REMOTE CONTROL	05
BATTERIES STATEMENT AND NOTICES	06
QUICK START	07
PROJECTION DISTANCE & SIZE	08
PROJECTION MODE	08
INPUT SOURCE	09
BLUETOOTH SETTING	11
WIFI CONNECTION & SCREEN MIRRORING	12
DIGITAL ZOOM	16
SPECIFICATION	17
TROUBLE SHOOTING	18
WARRANTY	20

FCC WARNING STATEMENT

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

The device has been evaluated to meet general RF exposure requirements.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

PACKING LIST



DVD Projector



Remote control



2 AA Batteries



Power Cable



HDMI Cable



User Manual



Projector Package

NOTICE


Recommended




NOT Recommended



FUNCTION OVERVIEW

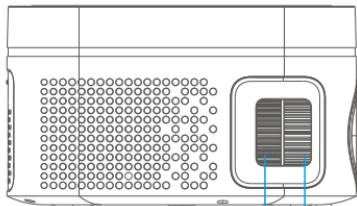


Keystone Focus

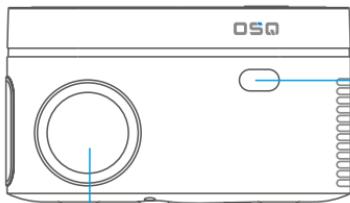

Lens


IR

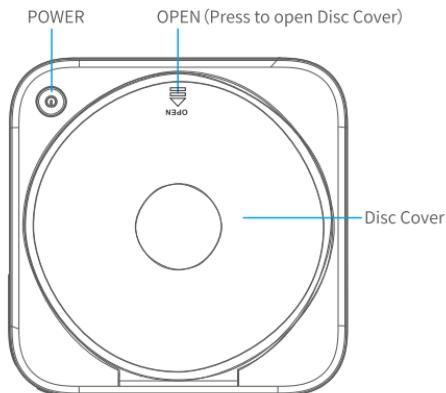

POWER

OPEN (Press to open Disc Cover)

Disc Cover

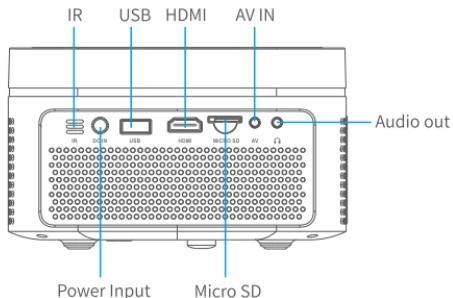

IR

USB

HDMI


AV IN

Audio out

Power Input

Micro SD

REMOTE CONTROL

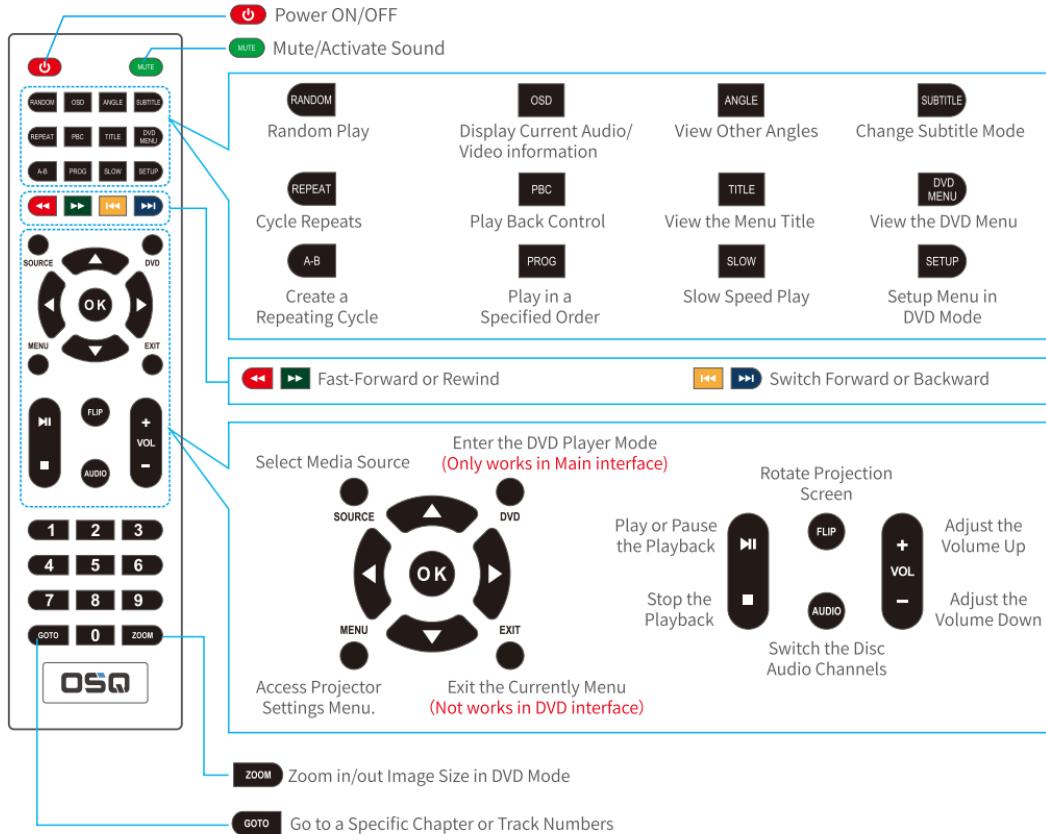


BATTERIES STATEMENT AND NOTICES








Remove the battery compartment cover on the back of your remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries, referring to the polarity markings. Finally, replace the cover.

NOTE:

- When you receive the product and find that the batteries of the remote control is swollen or softened, please do not use it before you change it.
- Batteries shall not be exposed to excessive heat such as sunshine, fire.
- Make sure that the batteries are installed polarity correctly.
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak. Do not try to recharge a battery.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cad,ni-mh,etc) batteries.

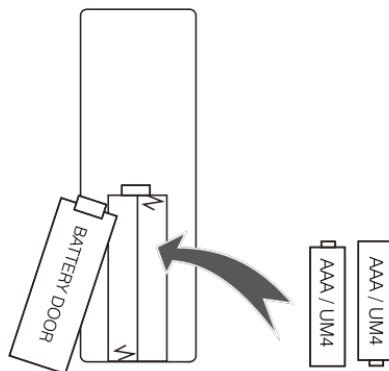


QUICK START

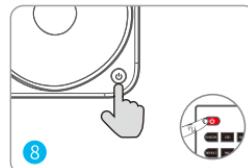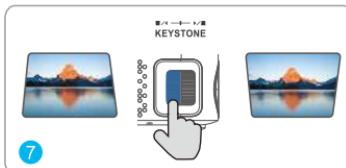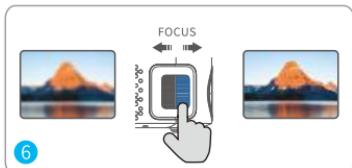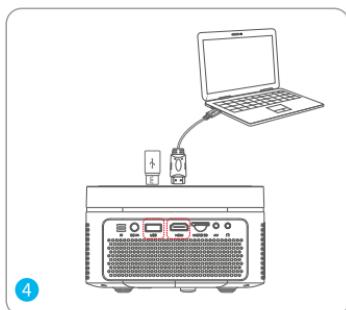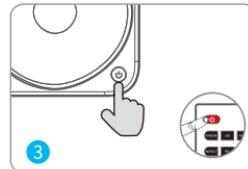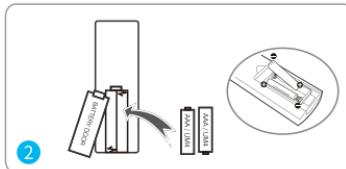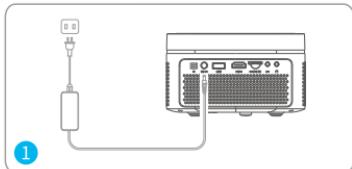

PROJECTION DISTANCE & SIZE

The recommended projection screen is around 80 inches with a distance of around 9.7 ft. Ambient darkness will improve the clarity of the projected images.

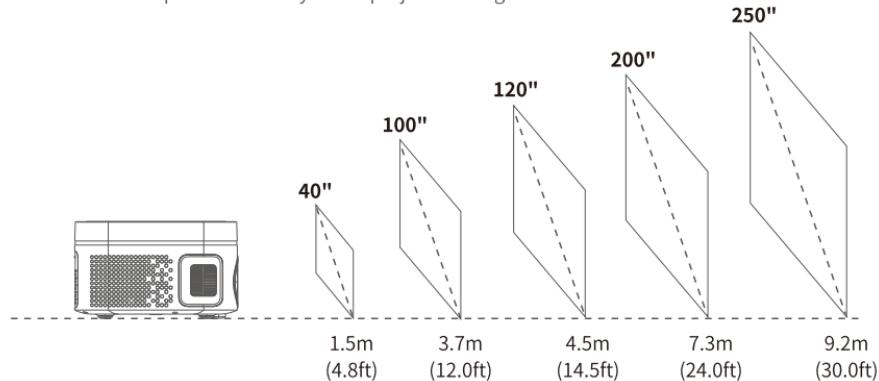


PROJECTION MODE

If you want to hang the projector to the ceiling, a projector mount will be needed.

If you want to project in different way, please select corresponding mode in the setting page.



 FRONT TABLE



FRONT CEILING



REAR TABLE




REAR CEILING


INPUT SOURCE

Press  on the remote to enter the interface of the **Input Source**.

A. HDMI Connection

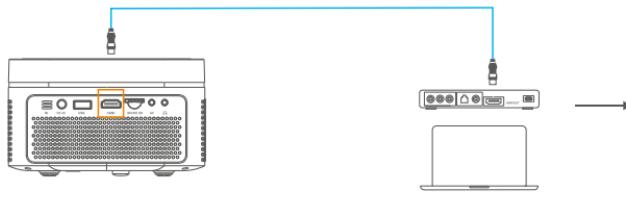

B. AV Connection

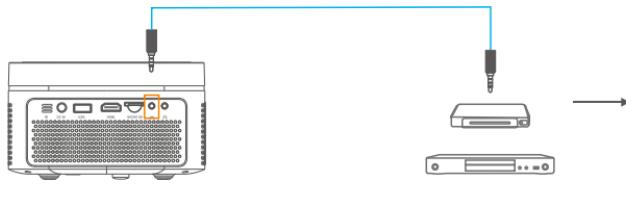

C. DVD Player Connection


Supports direct play of CD, DVD, CD-R/RW, DVD -R/+ R, DVD+ RW/-RW, VCD, SVCD

Note:

1. Not support Blu-ray disc.
2. The DVD button on controller only works in the main interface.
3. Please through Source button to exit DVD interface.




D. USB Connection

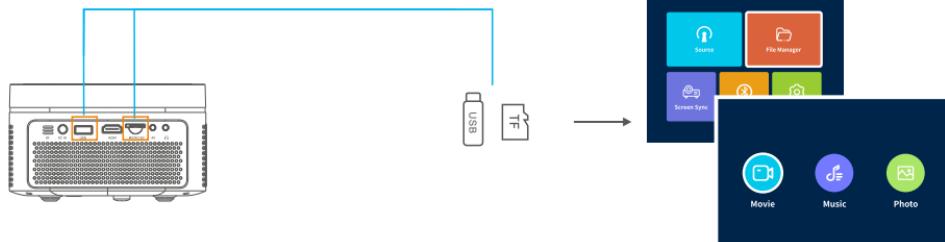

BLUETOOTH SETTING

Bluetooth Connecting

1. Go to **Home Page** > **Bluetooth Settings**
2. Turn the Bluetooth function **(ON)** and search for nearby Bluetooth devices.
3. Choose correct Bluetooth device to connect.

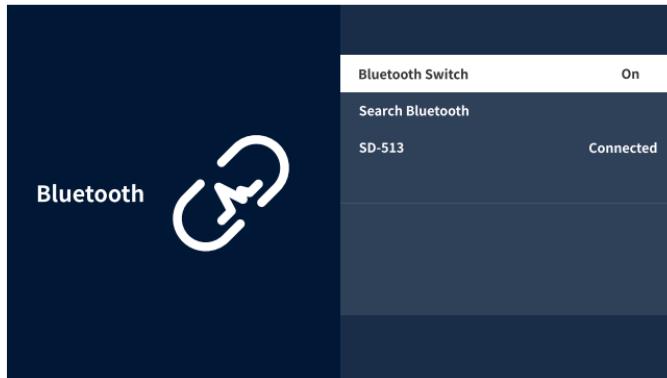

NOTE:



1. Bluetooth function is **ONLY** for audio transfer with audio devices, like Bluetooth speaker/headset/soundbar, NOT support video/audio sync with smartphone/Pad.
2. Due to compatibility issues with the Bluetooth protocol, some brands of Bluetooth speakers may not support connection to **OSQ** projectors.
3. Control the Bluetooth switch by the **left/ right** buttons on controller

WIFI CONNECTION & SCREEN MIRRORING

WIFI CONNECTION

1. Go to **Homepage** > **Setting** > **Network** > **WiFi Settings**

2. Scan and Choose your WiFi, then enter password to connect.

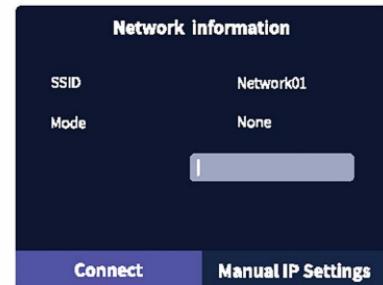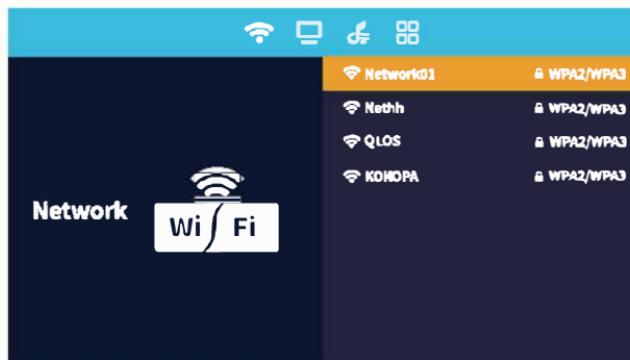

SCREEN MIRRORING

MIRACAST (For Android System)

1. Go to **Home Page** > **Screen Sync** > **MIRACAST**
2. On your Android device launch the Multiscreen/Wireless Display/Screen Mirroring/Smart View Function.
3. Looking for device that can be mirrored.
4. Select your Miracast receiver from the list to connect.




NOTE:

Please remember to turn on the WiFi function on your Android device, but not necessary to connect to any WiFi signal.

iOS CAST (For iOS System)

1. Go to **Home Page** > **Screen Sync** > **iOS CAST**
2. On your iOS device open control center and tap Screen Mirroring.
3. Looking for device that can be mirrored.
4. Select your iOS Cast receiver from the list to connect.

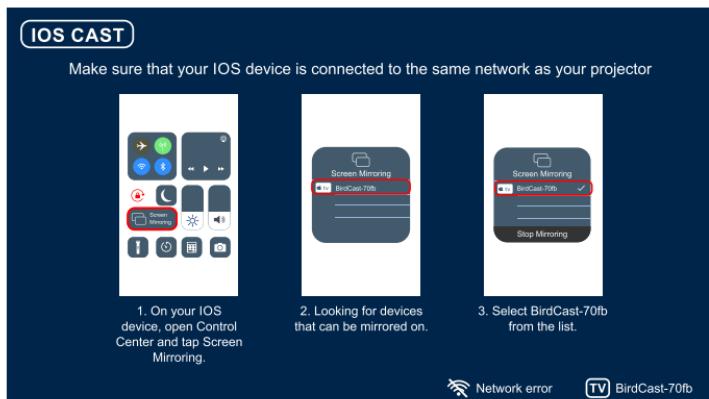

DLNA (For Android and iOS Device)

1. Make sure that your device is connected to the same network as your projector.
2. Open your video player software
3. Click the  icon and select the projector name BirdCast-XXXX to connect




NOTE:

1. The DLNA connection can be operated in any page of the projector.
2. Through the DLNA connection, the mobile phone can continue to be used normally, and the projected video/image will continue to be played, but the mobile phone interface will not be displayed synchronously.

DIGITAL ZOOM

1. Go to **Homepage** > **Setting** > **Option**, then choose the **Digital Zoom** function, Adjust the screen size from 100% to 75% through the parameters.

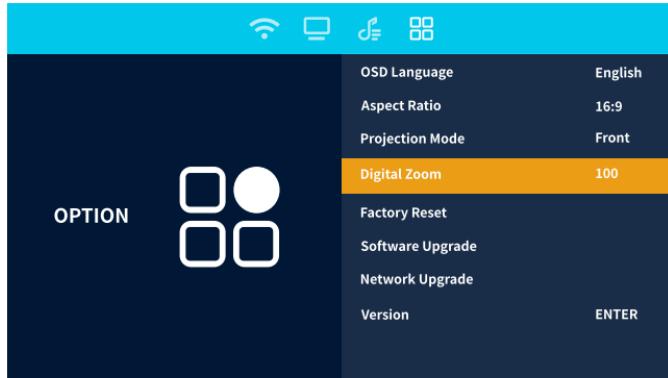

NOTE:

Digital Zoom could be set on this interface or through **MENU button** on controller.

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	1280 x720	Input Signal	HDMI / USB / AV / DVD/ MICRO SD
Aspect Ratio	16:9 / 4:3	Focus	Manual
Keystone	Manual ± 15	Speaker	3W
Bluetooth	Version 4.2	Power Input	AC 100-240V 50/60Hz
Power Output	30.0V / 2.4A 72W	Photo Format Supported	.jpg .bmp .jpeg .png .webp .gif
Audio Format Supported	mp3 .wma .aac .ogg .pcm .m4a .ec3 .dts .ra .wav .cd .arm .mp2 .flac .midi .mid .mlp .vr	Video Format Supported	.avi .wmv .m2t .mts .ts .mpg .m2p .mp4 .flv .swf .mkv .divx .xvid .rv .3gp .3g2 .pmp .tp .trp .webm
Ports	HDMI / AV / USB / MICRO SD/ DC IN / AUDIO 3.5MM	DVD Player Format	CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD. (Not support Blu-ray discs)
Unit Dimension	160*160*96mm	Unit Net Weight	0.96KG

TROUBLE SHOOTING

Q

Remote control not work?

- Make sure the batteries are effective and installed in the correct way.
- Please contact our after-sales team to get a new remote control.

A

Q

Blurry Image?

- Adjust focus ring/keystone to get the best image.
- The quality of the projection screen will also affect the image quality. Recommended to use it on a white wall or a better quality screen. Not suggest to use it on a thin white gauze screen, which will reduce the image quality.

A

Q

No Sound?

- Turn Dolby audio off in your device.
- The mute button on the remote was be pressed accidentally.

A

Q

Automatic shut-down?

- Overheating protection. Please use in a ventilated environment.
- It is recommended to unplug the power supply after use to prolong the service life.

A

Q

Upside down image?

- Press “Flip” button on the remote control.
- Enter “Projection Settings” to change the Projection Mode.

A

Q

The content from HULU, Netflix, and similar services can not be mirrored or cast?

- Due to the copyright restriction from Hulu, Netflix, and similar services, the contents can't be mirrored or cast.
- If needed to play these videos, please prepare a TV stick, Roku or Chromecast (not included).

A

Q

Missing accessories?

- If the device is damaged or any accessories missing, please contact our after-sales department for help.

A

WARRANTY

OSQ provides the following service for each customer:

- 30-days full refund or free replacement
- 1-year technology support
- Lifetime professional consult

If you need any help or want to extend the warranty time for your order, please email us:

 us-projector-303@eitack.com

