

CLOUD

USER MANUAL



Table of Contents

1. PRECAUTIONS	1
2. PARTS AND BUTTONS OF THE DEVICE	2
3. TOUCH BUTTONS	3
4. INSERTING/REMOVING SIM CARDS	3
5. HOME SCREEN	4
6. QUICK NOTIFICATION PANEL	5
7. SETTINGS MENU	6
8. INSERTING/REMOVING SIM CARDS	8
9. MAKING AND RECEIVING CALLS	8
10. ANSWERING AND REJECTING CALLS	9
11. SEND MESSAGE	10
12. SOFTWARE KEYBOARD	10
13. HOW TO CONNECT TO A COMPUTER	11
14. CONNECTION TO INTERNET	11
15. MOBILE DATA AND INTERNET	12
16. BLUETOOTH	12
17. CAMERA	13
18. TROUBLE SHOOTING	14
19. FCC RF EXPOSURE INFORMATION	16

1. PRECAUTIONS

1)、On the Road

Using a device while driving is illegal in many countries.
Please refrain from using your mobile while driving.

2)、Near Sensitive Electronics or Medical Equipment

Don't use your device near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

3)、While Flying

Your device can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your device, or disable its wireless functions, please do as they say.

4)、At a Petrol Station

Don't use your device at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

5)、Making Repairs

Never take your device apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty. Don't use your device if the antenna is damaged, as it could cause injury.

6)、Around Children

Keep your mobile out of children's reach. It should never be used as a toy as this is hazardous.

7)、Near Explosives

Turn off your device in or near areas where explosive materials are used. Always obey local laws and turn off your device when requested.


8)、Emergency Calls

To make an emergency call your device must be turned on and in an area where there's network coverage. Dial the national emergency number and press "Send". Explain exactly where you are and don't hang up until help has arrived.

9)、Working Temperature

The working temperature for the device is between 0 and 40 degree Celsius. Please don't use the device outside the range. Using the device under too high or too low temperature might cause problems. At very high volume, prolonged listening to a mobile device can damage your hearing.

2. PARTS AND BUTTONS OF THE DEVICE

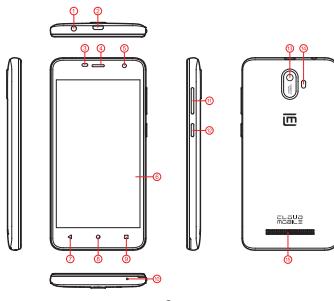

① Earphone Jack	⑥ Touchscreen	⑩ Volume Button
② Micro-USB Connector	⑦ Back Button	⑪ Power Button
③ Light Distance sensor	⑧ Home Button	⑫ Rear Camera
④ Receiver	⑨ App Switch Button	⑬ Flash
⑤ Front Camera	⑩ Microphone	⑭ Speaker

3.TOUCH BUTTONS

The **◀** button moves back one step to the previous menu/page.

The **○** button returns immediately to the main screen.

The **□** button displays a menu of recently opened applications.


(This interface adds a "CLEAR ALL" button)

Swipe up on the home screen to open the application list

4. INSERTING/REMOVING SIM CARDS

Installing the SIM Card and Battery Switch off your phone before installing or replacing the battery or the -SIM card.

Insert your fingernail into the slot at the bottom left of the back cover, and slide fingernail across bottom of back cover to lift it off.

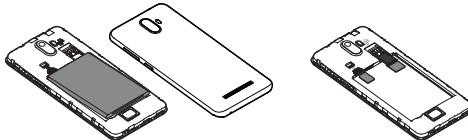

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard SIM card cut from a SIM card. You can get a standard SIM card from your service provider.

Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

Align the back cover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

5.HOME SCREEN

The home screen will look similar to the picture below. To switch between screens, simply slide your finger left or right across the display.



The home screen contains shortcuts to your most-used applications and widgets. The status bar displays system information, such as current time, wireless connectivity and battery charge status.

6.QUICK NOTIFICATION PANEL

When you receive a notification you can quickly view it by following the below instructions. Slide your finger from the top of the screen down to the center to access Notification Panel to see your notifications.



Drag the notification menu down to display the second fast access menu, the menu will look similar to the below image.



Through this menu, it is possible to modify the functions such as brightness, auto rotation, Wi-Fi, Bluetooth and more.

7. SETTINGS MENU

The settings menu allows you to adjust cell phone System Configuration.

To Change Settings:

Touch the "Settings" menu icon  on the Application menu.

The Settings menu will open.

2. Touch a category title to view further options.

1. Network & Internet

- Wi-Fi - Connect to/disconnect from wireless networks, view connection status.

• Mobile network - Insert SIM card and switch data.

network(2G/3G/4G)

• Data usage - Enable/disable mobile data, view current usage, set mobile data limit.

(note: this function is available only on devices supplied with 3G card functionality.)

• Hotspot & tethering - Including USB tethering , Bluetooth tethering and Wi-Fi hotspot.

2. Connected devices

• Bluetooth - Connect or disconnect Bluetooth devices .

• USB - Insert the USB line to use this menu.

3. Apps & notifications

• Notifications - Adjust different notification settings.

• App info - A list of all apps downloaded and running.

• App permissions - View app permissions.


• Battery - View the status of your battery and make adjustments to power consumption.

4. Display - Adjust display settings.

5. Sound - Adjust the different audio settings such as ringtones.

6. Storage - View your phone's internal and external storage settings.

- 7. **Privacy** - Change privacy settings
- 8. **location** - 'Change approximate location detection, improve search results, GPS satellites.
- 9. **Security** - Adjust phone's security settings;
- 10. **Accounts** - Add or remove email and Google accounts such as Gmail, Google.
- 11. **DuraSpeed** - "ON" / "OFF"
- 12. **System**
 - Language & input - add to the dictionary, edit on-screen keyboard settings, vocal search, etc.
 - Date & time - Set date, time zone, time, clock format etc.
 - Backup - Backup and restore data, perform factory reset, etc.
 - Reset options - reset all preferences.
- 13. **About Phone** - Displays information about your phone.

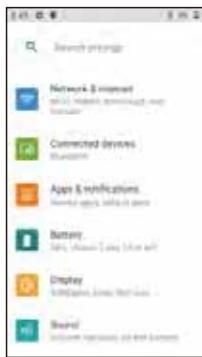

8. INSERTING/REMOVING SIM CARDS

1. When phone is powered off insert a SIM card by removing the SIM cover as illustrated above, insert your finger in the indent located near the charging port and unclip the SIM cover, then insert the SIM card. Please take note of the direction of insertion following the diagram on the phone's SIM port.
2. After inserting a SIM card, turn on the phone and wait a few minutes for your phone to display Network information.

Inserting TF Card :

NB: Please ensure when inserting an SD card your phone is powered "OFF"

1. Insert the TF card into the TF card slot located under the SIM card cover as explained in the Inserting/Removing SIM card section. Gently push TF card into slot until it clicks into place.
2. A prompt will be seen on the screen saying "Preparing SD card".

Removing TF Card:


1. Close all applications and documents which have been opened from the TF card.
2. Select "Settings" and find "Storage" then click "Unmount SD card".
3. A prompt will be seen on the screen saying "SD card safe to remove".
4. Gently press the TF card to remove and pull out the TF card.

9. MAKING AND RECEIVING CALLS

Once your SIM cards are installed turn on your phone and wait a few minutes for your phone to find a network.


Then select the Call  icon. Here you can dial a number or select a contact from your stored contacts list to call.

You can also view outgoing and incoming calls that have been made, as well as adding or removing contacts.

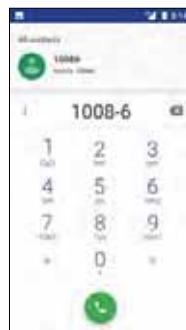

10. ANSWERING AND REJECTING CALLS

To answer a call – Slide your finger to the blue Call Answer key.
To reject a Call – Slide your finger to the Red Call End key.

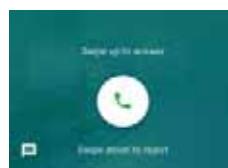

11.SEND MESSAGE

Touch the Messaging icon  to other mobile phone users to send SMS or MMS, enter the name or phone number in the "Type name or number" column, or select one from the contacts. Enter the information content and select send.

12. SOFTWARE KEYBOARD

The phone has a software keyboard which automatically displays when you tap the place on screen where you want text or numbers to be entered, then simply start typing.

Touchscreen

The touchscreen responds to finger touch.

Note:

• Don't place any object on the touchscreen for it may damage or crush the screen.

Single Click: Single click one icon to choose the icon or option you want.

Long Press: Press and hold an icon to delete or move an icon or app, and will display APP info、Widgets、shortcut menu etc.

Drag: Press the icon and drag it to a different screen.



13. HOW TO CONNECT TO A COMPUTER

Note:

• Turn on your phone before connecting the phone to a PC by USB cable.

1. Use a USB cable to connect the phone with a computer. The phone will automatically detect a USB connection.
2. The USB connection menu will be displayed in the notification bar, select the desired USB operation.
3. The USB connection has been successful.

14. CONNECTION TO INTERNET

Wireless:

1. Select “Settings”.
2. Select Network & Internet.
3. Select “Wi-Fi” and slide OFF to ON status.
4. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
5. Enter network key if necessary.
6. Once connected to a wireless network, settings will be saved.
7. Wireless icon will appear on the taskbar when connected successfully.
8. Wireless icon will appear on the taskbar when connected successfully.

Note:

• When the phone detects the same wireless network in the future, the device will connect to the network automatically with the same password record.

15. MOBILE DATA AND INTERNET

Please Note: Cell Data may be turned “OFF” as a factory setting, to allow data to flow through your network provider please turn Data usage “ON” either from your quick drop down menu or in > Settings >Network & Internet >Data usage, you will not be able to access the Internet when Data usage is “OFF”.

NB: Mobile Data charges apply when this setting is “ON” – Data will be passed through your network provider.

Web Browsing

Connect to the Internet and launch the browser.

Type in the desired browsing URL.



16.BLUETOOTH

Select “Settings”, select Bluetooth from “OFF” to “ON”.
Search for the device you would like to pair with and select “PAIR”.
You will see a message “Connected Successfully”.

17. CAMERA

Touch the icon  to enter camera mode and the interface is shown as follows:




1. Touch the  icon to take a photo.
2. Touch the  icon to start camera recording.
3. Touch the  icon on the top right to see the previous picture and to delete, share or set it as a wallpaper. Click the return button to exit camera interface.
4. Touch the  icon to switch from front to back camera.

18.TROUBLE SHOOTING

How to Close Applications

When an application is not responding you can manually shut the app down in “**Running Services**” menu. This will ensure the system responds as desired. Please shut down all idle applications to release memory and get the system speed back to normal. To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the ApplicationRunning and the interface is Tap the application you want to close. A pop-up window will be displayed. Tap “Stop” to close that application.

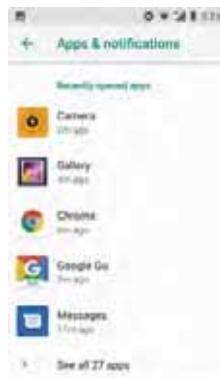

Power "OFF" / Restart / Reset the Phone

1. Press and hold the power button for 5 seconds and the device will be powered down.
2. Press the reset button located under the power button with a sharp object and the device will be forced to restart.

Restore Default Setting

If you want to reset the phone to factory settings and erase all materials, **please press Settings Backup and reset Factory data reset.**

WARNING:

factory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

19. FCC RF EXPOSURE INFORMATION

WARNING ! ! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 86-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov
Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August,1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) /<NCRP Report 86> (1986) /
<ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1) . Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards) .

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID:2ATH4-C4

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not use the device with the environment which below minimum -10 °C or over maximum 40 °C, the device may not work. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Google, Android™, Gmail, and other marks are trademarks of Google LLC.

SAR Statement:

This feature phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement: The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device type: SMART PHONE (FCC ID: 2A7H4-C4) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.