

CLOUD USER MANUAL



table of Contents

1. PRECAUTIONS	1
2. PARTS AND BUTTONS OF THE DEVICE	2
3. TOUCH BUTTONS	3
4. GETTING STARTED	4
5. HOME SCREEN	5
6. QUICK NOTIFICATION PANEL	5
7. SETTINGS MENU	6
8. INSERTING/REMOVING SIM CARDS	9
9. MAKING AND RECEIVING CALLS	9
10. ANSWERING AND REJECTING CALLS	10
11. Send message	11
12. SOFTWARE KEYBOARD	11
13. HOW TO CONNECT TO A COMPUTER	12
14. CONNECTION TO INTERNET	12
15. MOBILE DATA AND INTERNET	13
16. BLUETOOTH	14
17. CAMERA	14
18. TROUBLE SHOOTING	15

1. PRECAUTIONS

1)、 On the Road

Using a device while driving is illegal in many countries. Please refrain from using your mobile while driving.

2)、 Near Sensitive Electronics or Medical Equipment

Don't use your device near sensitive electronic equipment—particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

3)、 While Flying

Your device can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your device, or disable its wireless functions, please do as they say.

4)、 At a Petrol Station

Don't use your device at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

5)、 Making Repairs

Never take your device apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty. Don't use your device if the antenna is damaged, as it could cause injury.

6)、 Around Children

Keep your mobile out of children's reach. It should never be used as a toy as this is hazardous.

7)、 Near Explosives

Turn off your device in or near areas where explosive materials are used. Always obey local laws and turn off your device when requested.

8)、Emergency Calls

To make an emergency call your device must be turned on and in an area where there's network coverage. Dial the national emergency number and press "Send". Explain exactly where you are and don't hang up until help has arrived.

9)、Working Temperature

The working temperature for the device is between 0 and 40 degree Celsius. Please don't use the device outside the range. Using the device under too high or too low temperature might cause problems. At very high volume, prolonged listening to a mobile device can damage your hearing.

2. PARTS AND BUTTONS OF THE DEVICE



1. Front camera
2. Receiver
3. P/L Sensor
4. Touchscreen
5. Volume button
6. Power button
7. Earphone jack
8. Micro USB and charging port
9. Rear camera
10. Flash
11. Speaker
12. Microphone

3. TOUCH BUTTONS

The  button moves back one step to the previous menu/page.

The  button returns immediately to the main screen.

The  button displays a menu of recently opened applications. (This interface adds a “CLEAR ALL” button)

The  button will launch the applications and settings menu.

 


4. GETTING STARTED

Installing the Nano-SIM Card

Insert your fingernail into the slot at the bottom left of the back cover, and slide fingernail across bottom of back cover to lift it off.

Before installing the sim card, please open the sim card cover as shown below. This phone has a hot plug function and does not require a shutdown.

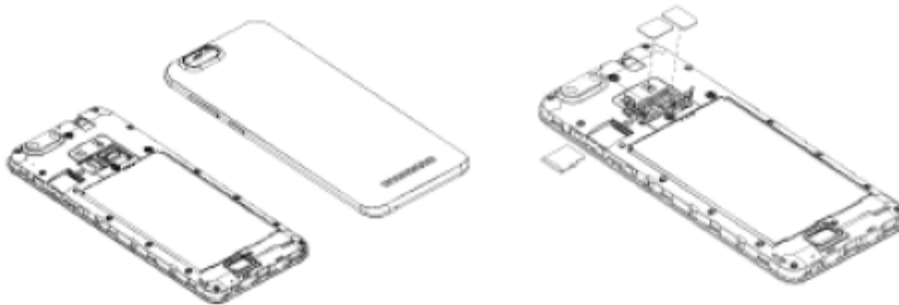

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard Nano - SIM card cut from a SIM card. You can get a standard Nano - SIM card from your service provider.

Align the back cover with the back of the phone and press the cover back into place.

Ensure that all the tabs are secure and there are no gaps around the cover.

5. HOME SCREEN

The home screen will look similar to the picture below. To switch between screens, simply slide your finger left or right across the display.

The home screen contains shortcuts to your most-used applications and widgets.

 
The status bar displays system information, such as current time, wireless connectivity and battery charge status.

6. QUICK NOTIFICATION PANEL

When you receive a notification you can quickly view it by following the below instructions. Slide your finger from the top of the screen down to the center to access Notification Panel to see your notifications.



Drag the notification menu down to display the second fast access menu, the menu will look similar to the below image.

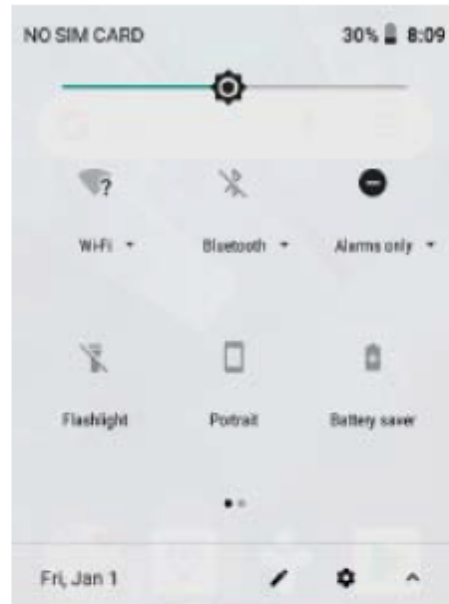

Through this menu, it is possible to modify the functions such as brightness, auto rotation, Wi-Fi, Bluetooth and more.

7. SETTINGS MENU

The settings menu allows you to adjust Tablet cellphone System Configuration.

To Change Settings:

1. Touch the “Settings” menu icon  on the Application menu. The Settings menu will open.
2. Touch a category title to view further options.

2. 1. Network&Internet

- Wi-Fi – Connect to/disconnect from wireless networks, view connection status
- Mobile network-Insert SIM card and switch data

network(2G/3G/4G)

- Data usage – Enable/disable mobile data, view current usage, set mobile data limit
- Hotspot & tethering - Including Usb tethering, Bluetooth tethering and Wi-Fi hotspot.

2. 2. Connected devices

- Bluetooth - Connect or disconnect Bluetooth devices .
- USB - Insert the USB line to use this menu.

2. 3. Apps & notifications

- Notifications – Adjust different notification settings
- App info – A list of all apps downloaded and running
- App permissions - View app permissions
- Battery – View the status of your battery and make adjustments to power consumption

2. 4. Display – Adjust display settings

2. 5. Sound– Adjust the different audio settings such as ringtones

2. 6. Storage – View your phone's internal and external storage settings

2. 7. DuraSpeed – “ON” / “OFF”

2. 8. Security & location

 
- Security-Adjust phone's security settings;
- location-’Change approximate location detection, improve search results, GPS satellites .

2. 9. User & accounts

- User-Switch between Owner and Guest;
- Accounts – Add or remove email and Google™ accounts such as Gmail, Google

3. 0. System

- Language and input – add to the dictionary, edit on-screen keyboard settings, vocal search, etc.
- Date and time – Set date, time zone, time, clock format etc.
- Backup– Backup and restore data, perform factory reset, etc.
- Reset
- DRM reset
- Network setting reset-this will reset all network settings.
- Reset app preferences- reset all preferences.
- Schedule power on&off : Set the time to turn on or off your phone.
- About Phone – Displays information about your phone
- Suggestions - Set some functions and slide these functions to the right to remove this item.

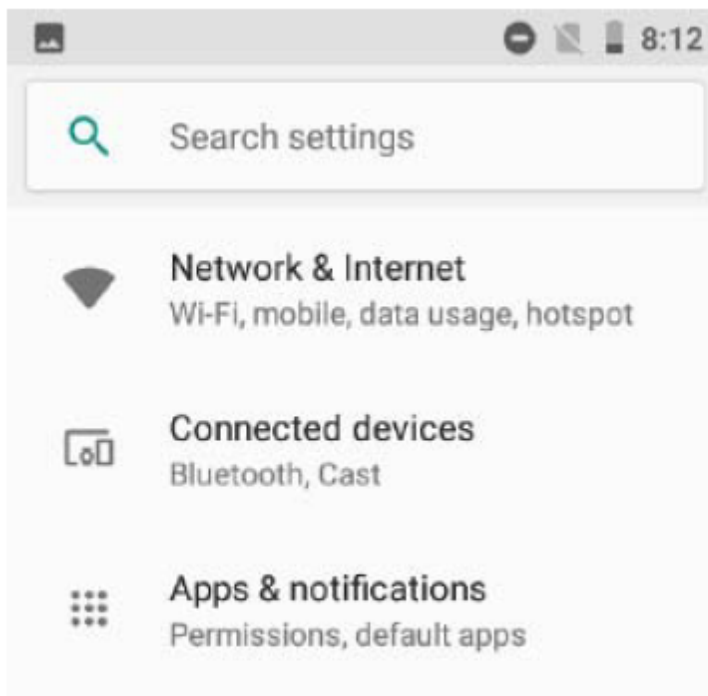

8. INSERTING/REMOVING SIM CARDS

1. When phone is powered off insert a SIM card by removing the SIM cover as illustrated above, insert your finger in the indent located near the charging port and unclip the SIM cover, then insert the SIM card. Please take note of the direction of insertion following the diagram on the phone's SIM port.
2. After inserting a SIM card, turn on the phone and wait a few minutes for your phone to display Network information.

Inserting TF Card :

NB: Please ensure when inserting an SD card your phone is powered "OFF"

1. Insert the TF card into the TF card slot located under the SIM card cover as explained in the Inserting/Removing SIM card section. Gently push TF card into slot until it clicks into place.
2. A prompt will be seen on the screen saying "Preparing SD card".

 
Removing TF Card:

1. Close all applications and documents which have been opened from the TF card.
2. Select "Settings" and find "Storage" then click "Unmount SD card".
3. A prompt will be seen on the screen saying "SD card safe to remove".
4. Gently press the TF card to remove and pull out the TF card.

9. MAKING AND RECEIVING CALLS


Once your SIM cards are installed turn on your phone and wait a few minutes for your phone to find a network.

Then select the Call  icon. Here you can dial a number or select a contact from your stored contacts list to call. You can also view outgoing and incoming calls that have been made, as well as adding or removing contacts.

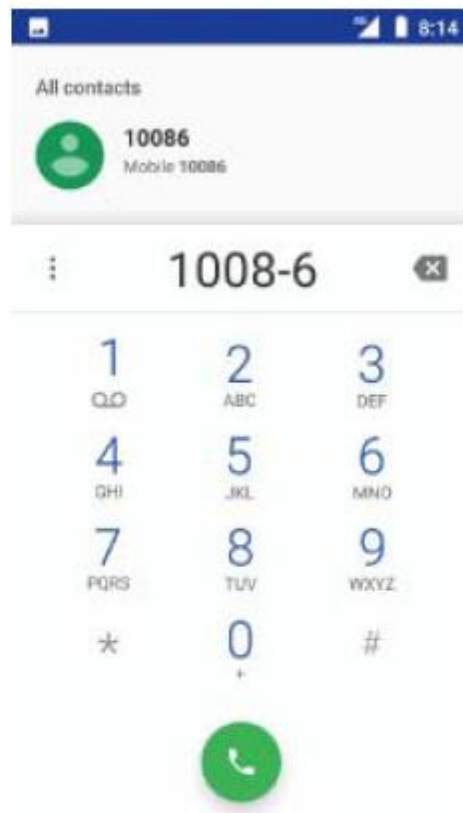

10. ANSWERING AND REJECTING CALLS

 To answer a call – Slide your finger to the blue Call Answer key.

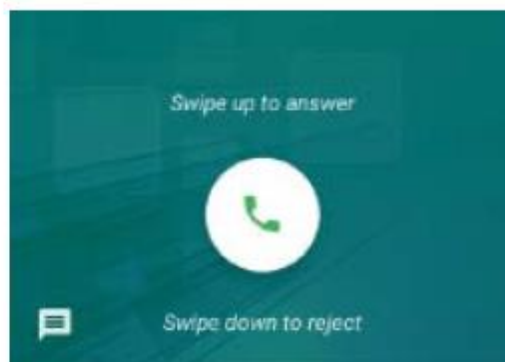


To reject a Call – Slide your finger to the Red Call End key.

11. Send message

Touch the Messaging icon  to other mobile phone users to send SMS or MMS, enter the name or phone number in the "Type name or number" column, or select one from the contacts. Enter the information content and select send.

12. SOFTWARE KEYBOARD

 The phone has a software keyboard which automatically displays when you tap the place on screen where you want text or numbers to be entered, then simply start typing.

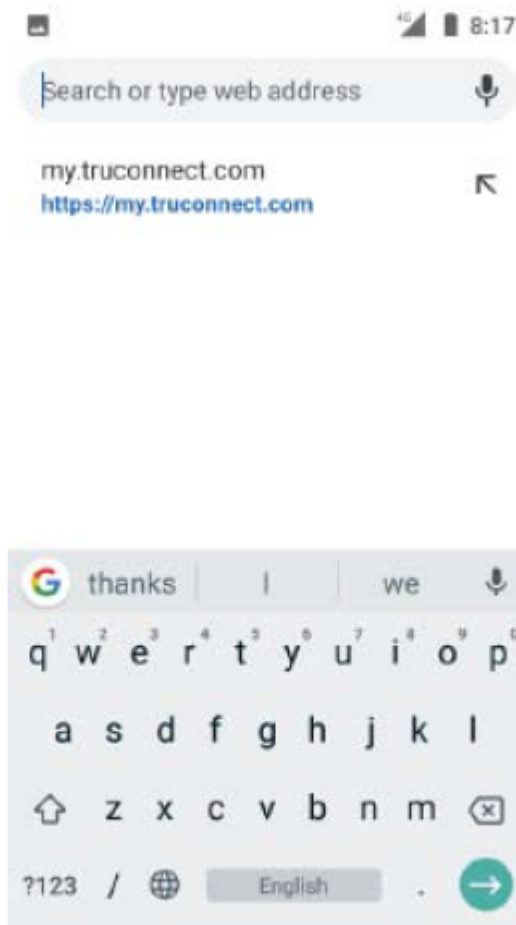

Touchscreen

The touchscreen responds to finger touch.

Note:

- Don't place any object on the touchscreen for it may damage or crush the screen.

Single Click:Single click one icon to choose the icon or option you want.

Long Press:Press and hold an icon to delete or move an icon or app, and will display APP info 、 Widgets、 shortcut menu ect.

Drag:Press the icon and drag it to a different screen.

13. HOW TO CONNECT TO A COMPUTER

Note:

- Turn on your phone before connecting the phone to a PC by USB cable.

1. Use a USB cable to connect the phone with a computer. The phone will automatically detect a USB connection.
2. The USB connection menu will be displayed in the notification bar, select the desired USB operation.
3. The USB connection has been successful.

14. CONNECTION TO INTERNET

Wireless:

- 1.Select "Settings".
- 2.Select Network & Internet.
3. Select "Wi-Fi" and slide OFF to ON status.
4. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
5. Enter network key if necessary.
6. Once connected to a wireless network, settings will be saved.

7. Wireless icon will appear on the taskbar when connected successfully.

Note:

- When the phone detects the same wireless network in the future, the device will connect to the network automatically with the same password record.

 
15. MOBILE DATA AND INTERNET

Please Note: Cell Data may be turned “OFF” as a factory setting, to allow data to flow through your network provider please turn Data usage “ON” either from your quick drop down menu or in > Settings > Network & Internet > Data usage, you will not be able to access the Internet when Data usage is “OFF”

NB: Mobile Data charges apply when this setting is “ON” – Data will be passed through your network provider.

Web Browsing

Connect to the Internet and launch the browser. Type in the desired browsing URL.

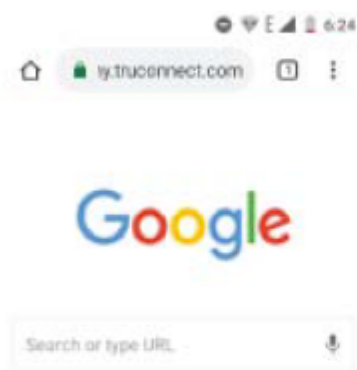

16. BLUETOOTH

Select "Settings", select Bluetooth from "OFF" to "ON".
Search for the device you would like to pair with and select "PAIR".

You will see a message "Connected Successfully"

17. CAMERA

Touch the icon  to enter camera mode and the interface is shown as follows:



 
1. Touch the icon  to take a photo.
2. Touch the icon  to start camera recording.
3. Touch the icon  the top right to see the previous picture and to delete, share or set it as a wallpaper. Click the return button to exit camera interface.

4. Touch the icon  to switch from front to back camera.

18.TROUBLE SHOOTING

How to Close Applications

When an application is not responding you can manually shut the app down in “**Running Services**” menu. This will ensure the system responds as desired. Please shut down all **idle applications** to release memory and get the system speed back to normal. To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the **ApplicationRunning** and the interface is

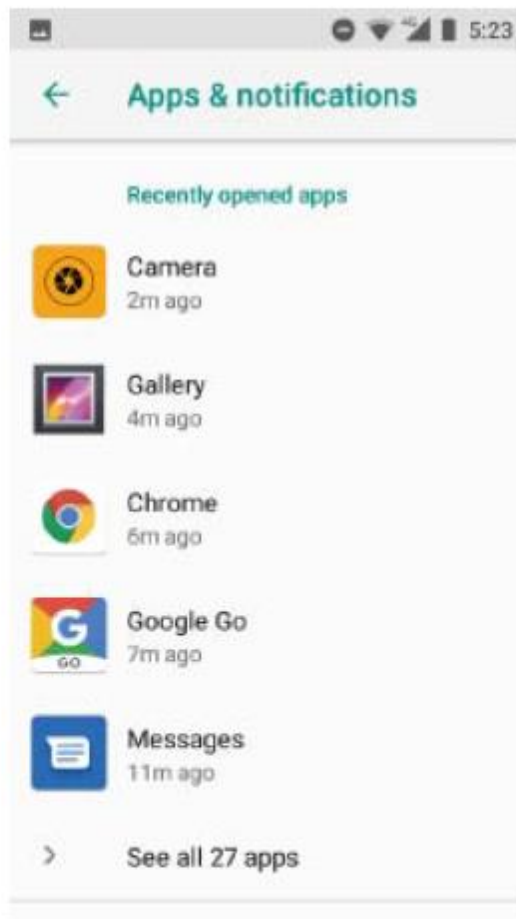

Tap the application you want to close. A pop-up window will be displayed. Tap "Stop" to close that application.

Power "OFF" / Restart / Reset the Phone

1. Press and hold the power button for 5 seconds and the device will be powered down.
2. Press the reset button located under the power button with a sharp object and the device will be forced to restart.

Restore Default Setting

If you want to reset the phone to factory settings and erase all materials, **please press Settings Backup and resetFactory data reset.**

WARNING:

actory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2ATH4-C5

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 40°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.

Google , Android™, Gmail, and other marks are trademarks of Google LLC. Oreo is a trademark of Mondelez International, Inc. group.