

1 Operating Manual

1.1 General

Please read the information contained herein so that you can become familiar with your device quickly and take advantage of the full scope of its functions.

Your Sound & Cool will serve you for many years if you handle it and care for it properly.

We wish you a lot of pleasure in using it!

1.2 Information on this manual

These Operating Instructions are a component of the Sound & Cool (referred to hereafter as the Device) and provide you with important information for the initial commissioning, safety, intended use and care of the device. The Operating Instructions must be available at all times at the device. This Operating Manual must be read and applied by every person who is instructed to work with the device:

- Commissioning
- Operation
- Troubleshooting and/or
- Cleaning

Keep the Operating Manual in a safe place and pass it on to the subsequent owner along with the device.

1.3 Warning notices

The following warning notices are used in the Operating Manual concerned here.



GEFAHR

DANGER

A warning notice of this level of danger indicates a potentially dangerous situation.

If the dangerous situation is not avoided, this can lead to death or serious injuries.

- Observe the instructions in this warning notice in order to avoid the danger of death or serious personal injuries.
- Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing
-



WARNING

WARNING

A warning notice of this level of danger indicates a possible dangerous situation.

If the dangerous situation is not avoided, this can lead to serious injuries.

- Observe the instructions in this warning notice in order to avoid the personal injuries.

- ▶ Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- ▶ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ▶ Do not damage the refrigerant circuit.
- ▶ Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ▶ Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed
- ▶ Risk Of Fire Or Explosion. Dispose Of Properly In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used.
- ▶ To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- ▶ Apparatus with Class I shall be connected to a MAINS socket outlet with a protective earthing connection.
- ▶ To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

⚠ VORSICHT

ATTENTION

A warning notice of this level of danger indicates a possible dangerous situation.

If the dangerous situation is not avoided, this can lead to slight or moderate injuries.

- ▶ Observe the instructions in this warning notice in order to avoid the personal injuries.
- ▶ that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

HINWEIS

PLEASE NOTE

A notice of this kind indicates additional information, which will simplify the handling of the machine.

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1.4 Limitation of liability

All the technical information, data and notices with regard to the installation, operation and care are completely up-to-date at the time of printing and are compiled to the best of our knowledge and belief, taking our past experience and findings into consideration.

No claims can be derived from the information provided, the illustrations or descriptions in this manual. The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
- Uses for non-intended purposes
- Technical alterations, modifications of the device
- Improper repairs
- Use of unauthorized spare parts

Modifications of the device are not recommended and are not covered by the guarantee.

All translations are carried out to the best of our knowledge. We do not assume any liability for translation errors, not even if the translation was carried out by us or on our instructions. The original German text remains solely binding.

1.5 Copyright protection

This document is copyright protected. Braukmann GmbH reserves all the rights, including those for photomechanical reproduction, duplication and distribution using special processes (e.g. data processing, data carriers, data networks), even partially. Subject to content and technical changes.

1.6 EU declaration of conformity

Hereby, Braukmann GmbH, declares that the radio equipment type [790] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.caso-germany.de/nc/service/dokumente-download/>

2 Safety

This chapter provides you with important safety notices when handling the device. The device corresponds with the required safety regulations. Improper use can result in personal or property damages.

2.1 Intended use

This device is only intended for use in enclosed spaces for cooling of food and beverages.

This device is intended for use in the household and for similar applications such as:

- in kitchens for employees in shops, offices, and other commercial areas; • in B&Bs,
- in agricultural estates;
- by customers in hotels, motels and other residential establishments.

Uses for a different purpose or for a purpose which exceeds this description are considered incompatible with the intended or designated use.

⚠️ WARNUNG WARNING

Danger due to unintended use! Dangers can emanate from the device if it is used for an unintended use and/or a different kind of use.

- Use the device exclusively for its intended use.

⚠️ WARNUNG WARNING

- Observe the procedural methods described in this Operating Manual.

Claims of all kinds due to damages resulting from unintended uses are excluded.

The User bears the sole risk.

2.2 General Safety information

HINWEIS PLEASE NOTE

Please observe the following general safety notices with regard to the safe handling of the device.

- Examine the device for any visible external damages prior to using it. Never put a damaged device into operation.
- If the connection lead is damaged, you will need to have a new connection lead installed by an authorized electrician.
- This device may be used by children aged 8 and above, if they are supervised or have been instructed at to the safe

use of the device and have understood the resulting hazards.

- ▶ Cleaning and maintenance by the user must not be performed by children unless they are at least 8 years old and are supervised. Children are not allowed to play with the device.
- ▶ The device and its connecting cable must be kept away from children who are less than 8 years old.
- ▶ The device may be used by individuals with reduced physical, sensory or mental capabilities or a lack of experience and / or knowledge of their use if they are supervised or have been instructed as to the safe use of the device and have understood the resulting hazards.
- ▶ Only qualified electricians, who have been trained by the manufacturer, may carry out any repairs that may be needed. Improperly performed repairs can cause considerable dangers for the user.

HINWEIS

Please note

- ▶ Only customer service departments authorized by the manufacturer may carry out repairs on the device during the guarantee period, as otherwise the guarantee entitlements will be null and void in the event of any subsequent damages.
- ▶ Defective components must always be replaced with original replacement parts. Only such parts will guarantee that the safety requirements are fulfilled.
- ▶ Pull the drawers out at the handle. Be careful not to get caught between the drawers and the device.
- ▶ Do not place unstable objects in the upper part of the device (heavy objects, water containers). If

these fall over and fluid escapes, electrical components could be damaged.

- ▶ Do not store perishable food in the device.
- ▶ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.



2.3 Sources of danger

2.3.1 Risk of fire / flammable materials used.

Danger of burns or of explosion

⚠GEFAHR DANGER

There is a danger of burns and explosion due to excess pressure that is created in the event the device is not used properly.

Observe the following safety notices to avoid dangers of burns or an explosion:



Warning: Risk of fire / flammable materials used.

- ▶ Do not store explosive substances such as aerosol cans with a flammable propellant in this device.

⚠GEFAHR DANGER

- ▶ Blowing gas inside the unit is flammable.
- ▶ Do not damage the cooling circuit of the device.
- ▶ Do not use electrical devices inside the device.
- ▶ Do not use mechanical devices or other means to accelerate the defrosting process.
- ▶ Never use the device to store or dry flammable materials. Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- ▶ Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- ▶ The mains plug must be plugged firmly into the connection socket on the bottom of the device, otherwise there is a risk of fire.

2.3.2 Dangers due to electrical power



Mortal danger due to electrical power!

Mortal danger exists when coming into contact with live wires or subassemblies! Observe the following safety notices to avoid dangers due to electrical power:

- ▶ If the connection lead is damaged, you will need to have a special connection lead installed by an authorized electrician.
- ▶ Do not operate this device if its power cable or plug is damaged, if it does not work properly or if it is damaged or has been dropped.

⚠GEFAHR Danger

- ▶ If the power cable is damaged, it will need to be replaced by the manufacturer or his service agency or a similar qualified person, to avoid any dangers.
- ▶ Do not open the housing on the device under any circumstances. There is a danger of an electrical shock if live connections are touched and the electrical or mechanical structure is altered. In addition, functional faults on the device can also occur.
- ▶ Do not clean the device with a spray / liquid and do not place the device in an environment where the device can get wet or splashed with liquid. There is a risk of a short circuit.

3 Commissioning

This chapter provides you with important safety notices during the initial commissioning of the device. Observe the following notices to avoid dangers and damages:

3.1 Safety information

⚠WARNING WARNING

Personal and property damages can occur during commissioning of the device!

Observe the following safety notices to avoid such dangers:

- ▶ Packaging materials may not be used for playing. There is a danger of suffocation.
- ▶ Transport, unpack and use two persons to set down the device because of the heavy weight of the device.

3.2 Delivery scope and transport inspection

As a rule, the Sound & Cool is delivered with the following components:

- Sound & Cool
- power cord
- 1 slot for power cord
- 1 audio line
- 4 partitions
- 2 sliding inserts
- Operating Instructions

HINWEIS

 
Please note

- Examine the shipment for its completeness and for any visible damages.
- Immediately notify the carrier, the insurance and the supplier about any incomplete shipment or damages as a result of inadequate packaging or due to transportation.

3.3 Unpacking

To unpack the device, proceed as follows:

- Remove the device out of the carton and remove the packaging material.
- The appliance may be tilted by a max angle of 45 °, otherwise the cooling system can be damaged.
- Clean the interior surface with lukewarm water using a soft cloth.
- After at least 12 hours, plugging the appliance into the wall outlet, then place food or beverages in the appliance.

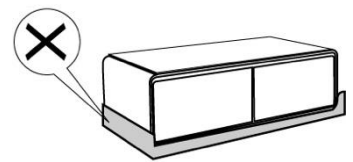

HINWEIS

Please note

- Only remove the blue protective film shortly before setting up the device in the location where it will be used, to prevent scratches and dirt accumulations.

3.4 Disposal of the packaging

The packaging protects the device against damages during transit. The packaging materials are selected in accordance with environmentally compatible and recycling-related points of view and can therefore be recycled. Returning the packaging back to the material loop saves raw materials and reduces the quantities of accumulated waste. Take any packaging materials that are no longer required to "Green Dot" recycling collection points for disposal.



HINWEIS

Please note

 
- If possible, keep the original packaging for the device for the duration of the guarantee period of the device, in order that the device can be re-packaged properly in the event of a guarantee claim.

3.5 Setup

3.5.1 Setup location requirements:

In order to ensure the safe and trouble-free operation of the device, the setup location must fulfil the following prerequisites:

- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- Ambient temperature below 16°C or above 38°C will hinder the performance of the appliance.
- This unit is not designed for use in a garage or any other outside installation.
- Do not set up the device in a hot, wet or extremely damp environment or near flammable material.
- The device requires an adequate flow of air in order to operate correctly. Leave a clearance of 45 cm around the appliance.
- Do not cover up any openings on the device and do not block these off.
- The electrical socket must be easily accessible so that the power lead can be disconnected easily, in the case of an emergency.
- The installation and assembly of this device in non-stationary setup locations (e.g. on ships) must be carried out by specialist companies / electricians, provided they guarantee the prerequisites for the safe use of this device.
- For energy saving reasons please ensure that the drawers are closed when the appliance is turned on.
- Adjust the adjustable feet, so that the device is placed even.

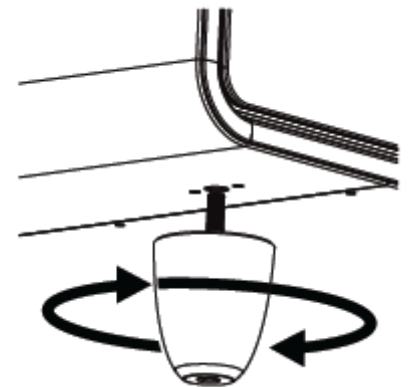

3.6 Electrical connection

In order to ensure the safe and trouble-free operation of the device, the following instructions must be observed for the electrical connection:

- Before connecting the device, compare the connection data (voltage and frequency) on the rating plate with those of your electrical network. This data must agree in order that no damages occur in the device. If in doubt, ask your qualified electrician.
- The electrical outlet must be protected by a 16A safety cut-out switch.
- Do not bend the power cord. Make sure that the power cable is undamaged and has not been installed under or over hot or sharp surfaces.
- The connection between the device and the electrical network may employ a 3 meter long (max.) extension cable with a cross-section of 1.5 mm². The use of multiple plugs or gangs is prohibited because of the danger of fire that is involved with this.

- This unit is not designed to be installed in an RV or used with an inverter.
- The electrical safety of the device is only guaranteed if the device is connected to a properly installed protective conductor system. Operations using an electrical outlet without a protective conductor are prohibited. If in doubt, have the house installation checked over by a qualified electrician. The manufacturer cannot be made responsible for damages that are caused by a missing or damaged protective conductor.

Options to connect the power cord

- 1) Plug the mains plug into a ground socket below the device.
- 2) Place power cord under carpet, to avoid stumbling over the cord.
- 3) Slot power cord through the supplied slot for the power cord.

⚠GEFAHR

 
Danger

 
- The mains plug must be plugged firmly into the connection socket on the bottom of the device, otherwise there is a risk of fire.

4 Design and Function

This chapter provides you with important safety notices on the design and function of the device.

4.1 Complete overview

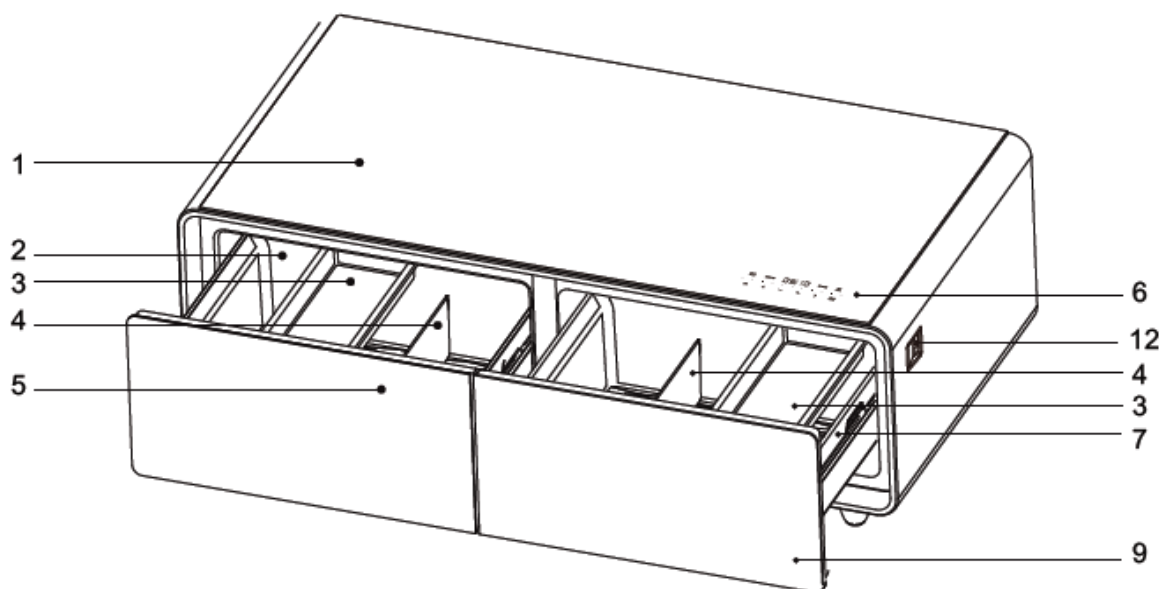

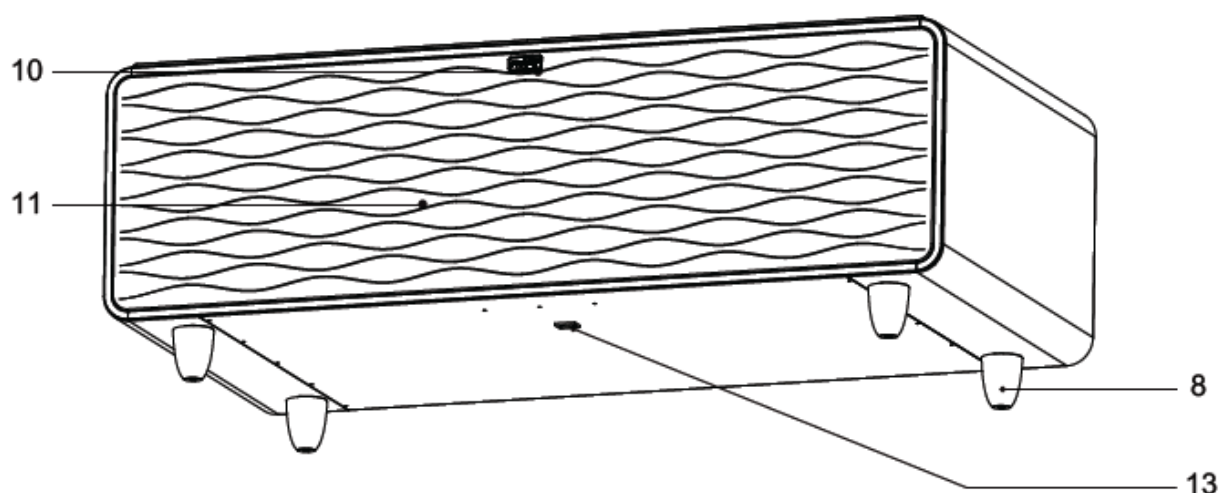


- | | | |
|-------------------------------|---------------------------------------|---------------------|
| (1) glass panel | (2) inner space, left drawer | (3) movable inserts |
| (4) partition | (5) left drawer | (6) control panel |
| (7) inner space, right drawer | (8) adjustable foot | (9) right drawer |
| (10) logo | (11) rear board | |
| (12) USB interface | (13) connection socket for mains plug | |
| (14) audio line | | |



5 Operation and Handling

This chapter provides you with important notices with regard to operating the device.

 5.1 Operating elements and displays

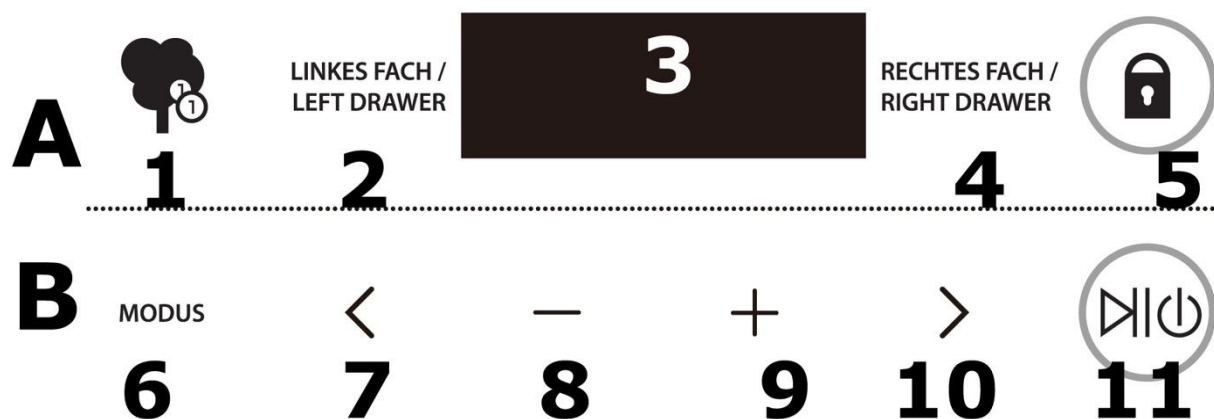

A control panel for the refrigerator zone

1 Eco mode

- 2 left cooling drawer, temperature regulation
- 3 display
- 4 right cooling drawer, temperature regulation
- 5 lock/ child protection for control panel of refrigerator zone

B control panel for music player

- 6 mode for selection of music source
- 7 previous music title
- 8 reduce volume
- 9 plus volume
- 10 next music title
- 11 lock / child protection for control panel of music play, play and pause

HINWEIS

Please note

- ▶ Refrigerator and Music Player share the same display zone.
- ▶ When the music player is on, the setting of cooling drawer can be unlocked by



pressing for 3 seconds.

5.2 Operation of the device

Temperature Setting.

Plug in the power plug.



Press the unlock key for 3 seconds.

LINKES FACH /

Press **LEFT DRAWER** for setting of temperature (1-12) of left drawer.

RECHTES FACH /

Press **RIGHT DRAWER** for setting of temperature (1-12) of right drawer.

With OF the respective drawer can be switched off.

When the Sound & Cool is switched on you can change the temperature of the



drawers by unlocking the panel for the drawers. Press for 3 seconds and

then set desired temperature. The two control panels are working independently from each other.

The temperature in the device depends on the room temperature, the quantity of bottles/ amount of food and the chosen temperature. Please note that your device is intended to cool food and beverages. The maximum temperature that can be reached inside the device cannot be significantly ABOVE the ambient temperature at the setup location.

When you open the drawer the actual temperature is displayed.

HINWEIS

Please note

- ▶ The device beeps when the drawers is opened too long and the display shows DR to remind you to close the drawer.
- ▶ Let the device work for 2 hours before placing food/beverages into the device.
- ▶ If not further operation is performed within 2 seconds, then the displayed temperature is confirmed and stops flashing.

Eco Mode



Press button for 3 seconds until ECO is displayed. The temperature for both drawers is set to 5 °C automatically.

5.3 Charging via USB

As soon as the device is switched on, you can charge via the two USB ports.

5.4 Instruction for storage of food / beverages in the device:

- It is important to store food / beverages properly.
- Do not store food in the device which is easliyl addled at low temperatures, such as bananas, tropical frutis. They may discolor and the vitamin content may be reduced.
- Do not place hot food / beverages into the device. Let them cool down before placing into the device. The adding of hot food / beverages would affect the temperature of the device and affect the freshness of other food / beverages.
- Do not open the device too frequently as this will allow warm air to enter the device and the inside temperature will rise.
- Store food in containers and bags so that the smelle and taste of the food will not be influenced.
- Food such as fruit and vegetables shall be cleaned before storage. This is also recommened for the packaging of food. So other food will not be affected.

- Bottles have to be tightly placed to prevent them from tilting when the drawers are opened.
- Do not place tall cans/canisters, otherwise the drawer cannot be closed properly.
- The portions of the drawers can be removed and the inserts can be moved, to store different types of food.
- The left and right drawer can be controlled independently. Adjust the temperature according to the food.
- Do not overfill the device so that the internal air circulation is not interfered.

5.5 Sound Bar



The Sound Bar is switched off when the device is switched on. Press  for 3 seconds to unlock the control panel and to activate the music player. Buzzer alarms and the control panel is flashing. The display of drawer shows the chosen music source.

Example for music source: USB



Press Modus to choose music-source:

BL = Bluetooth
USB

LINE = external audio mode

 
USB =

1) Connection via bluetooth

The display shows chosen music source and broadcast it in English language. For example: Bluetooth Mode. Select desired mode with your mobile/tablet and connect with the device. If phone requires password then input "0000". When the connection is successfully arranged then the Sound & Cool is working as external speaker for your mobile/tablet. When the connection is disconnected the voice prompts this for example "bluetooth disconnected."

After 5 minutes the connection will be reset. The connection will automatically be reconnection when your mobile/tablet will come back to range of the device.

2) External audio mode/ AUX mode

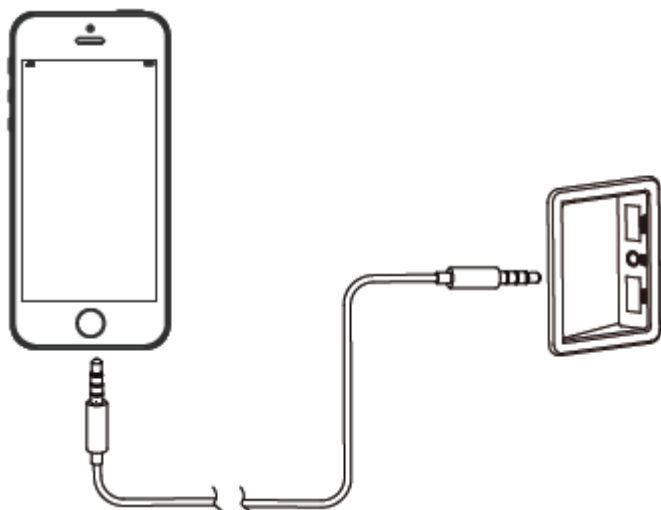

use your mobile/tablet for this.

The display shows „LINE“ and the voice prompts: “external audio mode“. The Sound & Cool can be used as external audio of your mobile / tablet by inserting a 3,5 mm audio cable for connection with your mobile/tablet. Then you can control the music using your mobile/tablet.

 
In this mode the control panel of the device cannot be used for switching to previous/ next title,

3) USB mode

“USB“ is displayed. Connect the your device to upper USB port. The Sound & Cool supports MP3/WMA/APE/FLAC/WAV Voice prompts “USB Mode“. The Sound & Cool will play the music from your USB device.

When the connection is disconnected the voice prompts this “USB disconnected.“

Only the upper USB port is suitable for playing of music.

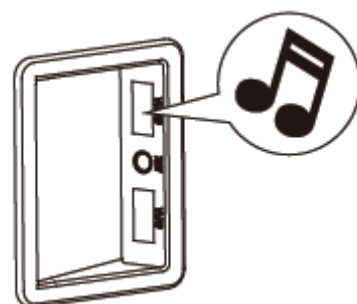

Pause of Music

To pause the music player you have 2 options:

- Press Pause/Play on your external device (your mobile/tablet).



- Press for 3 seconds to unlock the control panel and again to pause the



music player. The display shows: “—“. With and the display shows: “-||”.

you can restart the player

Selection of music title



Press  for 3 seconds to unlock control panel. With > you can select the next song, the display shows „I“ for 2 seconds. With < you can select the previous song, the display shows „I-“ for 2 seconds.

After 2 seconds the display returns to audio mode.

In external audio mode/AUX mode you cannot use the < and > on the control panel.

Volume adjustment

 
There are 16 levels of volume. Default volume is level 8. With + and – you can adjust the level. After 2 seconds the display returns to audio mode.

The control panel of the music player. will be locked automatically after 10 seconds



without operation. You can turn off the music player by pressing  for 6 seconds. After 3 seconds the control panel is locked and after additional 3 seconds the display shows “OFF”. Then music player is off.

5.6 Charging via USB

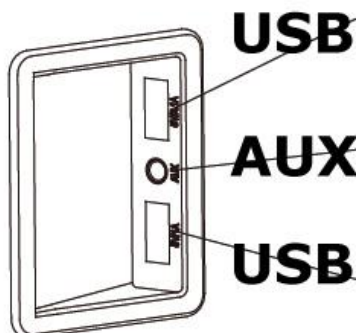

via upper USB port you can play music and charge your device (mobile)

via AUX port you can play music

via lower USB port you can charge your device (mobile)

5.7 Rating

The rating plate with the connection and placed here:



plate

performance data is

6 Cleaning and Maintenance

This chapter provides you with important notices with regard to cleaning and maintaining the device. Please observe the notices to prevent damages due to cleaning the device incorrectly and to ensure trouble-free operation.

6.1 Safety information

▲VORSICHT

Attention

Please observe the following safety notices, before you commence with cleaning the device:

- Prior to commissioning, clean the appliance thoroughly.

▲VORSICHT Attention

- Switch the Sound & Cool off prior to cleaning it and unplug the plug from the wall power outlet. Remove all all food / beverages.
- Be careful during cleaning of the USB/AUX ports at the side of the device. Clean them only with dry cloth. Do not use wet cloth or spray for cleaning of these ports.
- Do not clean the device with spray / liquid and do not place the device in environment where the device may become wet or splashed with moisture. There is a risk of a short circuit.
- Do not use any aggressive or abrasive cleaning agents or solvents.
- Do not scrape off stubborn dirt with hard items.

6.2 Cleaning

Unplug the device. Remove food / beverages and accessories (inserts / partitions) from the device.

 


Mains Plug, USB and AUX ports shall be cleaned only with dry , soft cloth.

Clean surfaces and drawers with soft cloth and neutral cleaning solvent. Do not use hot water. Thoroughly dry device after cleaning.

Clean the gasket of the drawers regularly to make sure that drawers close properly. Use water only for cleaning of the gasket of the

drawers.

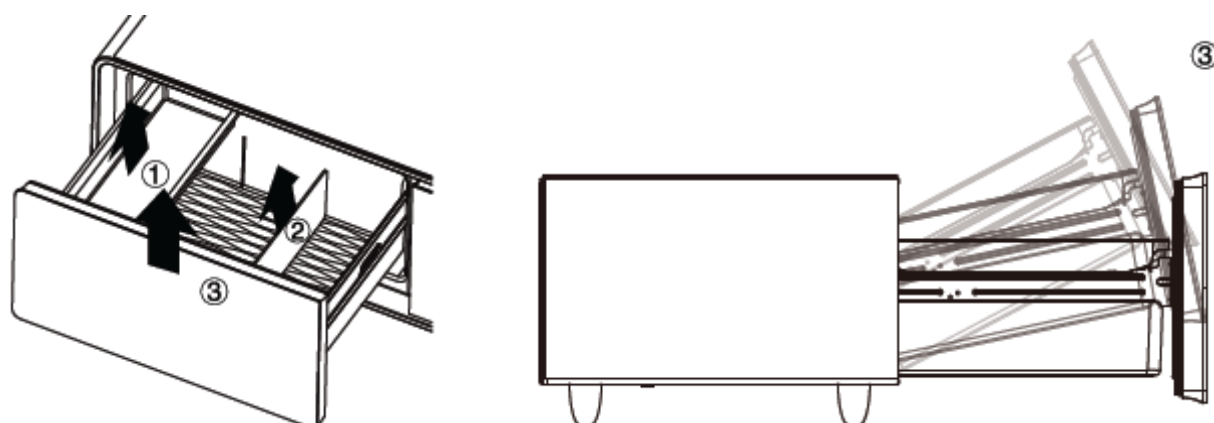

You can remove the drawer for cleanging. Remove inserts and partitions. Move drawer upside and back to remove it. Clean drawer, inserts and partitions with soft cloth.

6.3 Defrost

The device automatically defrosts. Condensated water will be collected in a tray and will automatically evaporate by compressor heat.

6.4 Moving the appliance

Turn off the appliance first and then unplug the unit from the wall outlet.

Remove all content. Shurely tape down all lose items inside your appliance.

Tape drawers shut. Fix the drawer with tape. The appliance may be title by a max angle of 45 °, otherwise the cooling system can be damaged..

Troubleshooting

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages:

6.5 Safety notices

⚠VORSICHT Attention

- ▶ Only qualified electricians, who have been trained by the manufacturer, may carry out any repairs on electrical equipment.
- ▶ Improperly performed repairs can cause considerable dangers for the user and damages to the device.

6.6 Fault indications and rectification of faults

The following table assists in localizing and rectifying minor faults.

Fault	Possible Cause
Device does not operate.	Not plugged in using different voltage. The circuit breaker tripped or a blown fuse.
Your device is not cold enough or it does not reach the adjusted temperature. Compressor does not stop to work.	Check the temperature control setting. External environment may require a higher setting. The door is open too often. The door is not closed completely. The door seal does not seal properly. The device does not have the correct clearance. Device is over filled.
Vibrations.	Check to assure that the device is level.
The device seems to make to much noise	The device is not level. - Components are loose - Device touches the wall
The door will not close properly.	The device is not level. The seal is weak. Device is over filled.

Control panel does not show anything..	Electronic defect. Contact the customer service.
Buttons do not work.	Control panel is damaged.
Compressor will not start	Room temperature is lower than desired temperature.
Dew on the surface of device :	The surface of wine cabinet especially the door appear some frost if item in a damp room. This is due to the moisture in the air coming into contact with the device. Please wipe it away with dry cloth.
Liquid sound	The sound of compressor when starts or stops working. The flowing sound of refrigerant in the refrigeration system. The evaporating sound of refrigerant in the evaporator
Condensation formed inside the cabinet	Under the environment with high level of humidity or the drawer has been left open for a long period or opened frequently, wipe off the drawer and walls and close the drawer as long as possible.

⚠ VORSICHT

Attention

- If you are unable to solve the problem with the steps shown above, please contact Customer Service.

7 Disposal of the Old Device

Old electric and electronic devices frequently still contain valuable materials. However, they also contain damaging substances, which were necessary for their functionality and safety. If these were put in the non-recyclable waste or were handled incorrectly, they could be detrimental to human health and the environment. Therefore, do not put your old device into the non-recyclable waste under any circumstances.



HINWEIS

Please note

- Utilise the collection point, established in your town, to return and recycle old electric and electronic devices. If necessary, contact your town hall, local refuse collection service or your dealer for information.
- Blowing gas inside the unit is flammable. The disposal of this flammable material should be in accordance with national regulations.
- Ensure that your old device is stored safely away from children until it is taken away: Remove the drawer doors, the partitions and the movable inserts in the inner space, so that children cannot be accidentally injured.

8 Guarantee

We provide a 24 month guarantee for this product, commencing from the date of sale, for faults which are attributable to production or material faults.

Your legal guarantee entitlements in accordance with § 439 ff. BGB-E remain unaffected by this. The guarantee does not include damages, which were incurred as a result of improper handling or use, as well as malfunctions which only have a minor effect on the function or the value of the device. Consumables, transit damages, inasmuch as we are not responsible for these, as well as damages, which were incurred as a result of any repairs that were not performed by us, are also excluded from the guarantee entitlements.

This device is designed for use in commercial situations and has the appropriate performance levels. In the event of justified complaints, we will repair the faulty device at our discretion or replace it with a trouble-free device.

Any pending faults must be reported within 14 days of delivery. All further claims are excluded. To enforce a guarantee claim, please contact us prior to returning the device (always provide us with proof of purchase).

9 Technical Data

Name	Sound & Cool
Item No.:	10790
Connection	120 V; 60 Hz
External measurements (W x H x D):	130 cm x 46 cm x 67 cm
Capacity	2 x 65 L
Weight:	57, 3 kg
USB	5V/1A + 5V/2.1A
Power of speakers	60 W
Interfaces	Bluetooth/ AUX 3.5 / USB