

► WIRELESS USING

Wireless microphone using

1. When the noise occurs during use , staccato , or distortion, please replace the battery.
2. After use, please turn off the power switch.
3. When not in use for a long time, please remove the batteries to avoid leakage of battery corrosion of internal parts.
4. When turning on the power switch, such as power indicator does not light to dark, check whether the battery polarity is placed correctly or not.



— 2 —

WARNING: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.