

COOLMUSIC
CHANGE LIFE WITH MUSIC

品牌: COOLMUSIC
名称: 多功能弹唱音箱
制造商: 深圳市酷乐科技有限公司
服务热线: 0755 - 89344156
地址: 深圳市龙岗区园山街道龙腾街28号A栋5楼 邮编: 518115
公司官方网站: www.coolmusic-tech.com




BP - MINI

30 WATT

BATTERY POWERED
PORTABLE AMPLIFIER

PERSONAL MONITOR

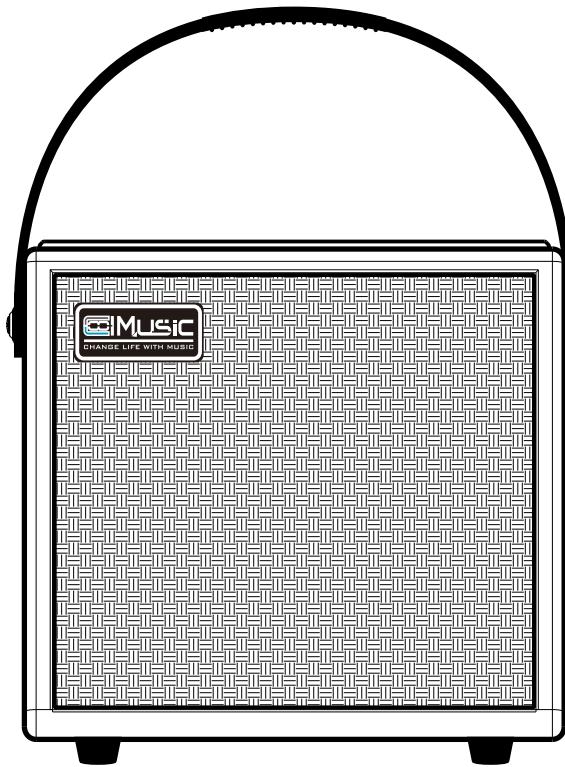

请始终遵循以下指示

⚠ 若您购买的设备内部为锂电池供电，则该产品在长期闲置或者存放时应注意：设备电量低时应尽快为其充电，电池若长期处于低电量状态会降低电池的使用寿命；若您想将设备存放起来，也应先将设备充满电后再存放。

⚠ **WARNING** 这些指示用于提醒使用者，本产品的不当使用可能对您造成人身危险。
⚠ **CAUTION** 这些指示用于提醒使用者，本产品的不当使用可能会导致设备的损坏。

⚠ **WARNING**

- ⇒ 使用本产品前，请先阅读一下指示以及用户手册。
- ⇒ 供电使用前请将本设备的供电接口与带有接地保护的电源插座相连接。
- ⇒ 请勿自行拆开或改动本设备以及适配器的内置部件。
- ⇒ 请使用随机附带的电源适配器或者电源线，附带的电源线或适配器请勿使用于其他的设备。
- ⇒ 使用前先确认设备的额定电压与市电电压是否相符。电压不相符可能导致设备损坏甚至危及人身安全。
- ⇒ 电源线请勿过度扭曲或弯折，也不可以在上面放置重物。否则可能会损坏电源线而造成线路短路。损坏的电线可能造成火灾和有触电的危险！
- ⇒ 请勿将过多的电器与本设备共用一个插座。在使用延长线时，请特别注意您连接在延长线上的所有设备的总功率不可超过延长线所能承受的功率。电源超载会导致导线发热并溶解包覆电线的绝缘物质。
- ⇒ 将电源线的插头插入或拔离插座时，请握手设备电源线的插头部分。
- ⇒ 请避免电源线与各种导线互相缠绕。此外，也请让儿童远离电源线与导线。
- ⇒ 手部潮湿时，请勿拿取本设备的电源线或将电源线的插头插入或拔离插座。
- ⇒ 移动本设备之前，请拔下电源连接线以及所有与本设备相连接的外部设备连接线。
- ⇒ 清洁本设备之前，请关闭电源并从插座上拔下电源线插头。
- ⇒ 若打雷天气发生时，请将电源插头从插座上拔掉。

⚠ **CAUTION**

- ⇒ 请勿将本设备放置在以下场所：

- a 温度过高的场所（例如阳光直射下的封闭车辆中、热输送管附近或发热机器的上方）
- b 潮湿处（例如浴室、洗手间、超市的地面等）
- c 湿气重的地方
- d 直接遭雨淋的地方
- e 尘埃多的地方
- f 有强烈震动的地方

- ⇒ 当发生以下情况时，请立即关闭电源，将插头拔掉：

- a 适配器、电源线或是插头破损
- b 设备冒烟或产生异味
- c 本设备直接遭雨淋（或打湿）
- d 本设备操作不正常或是表现有明显的异样


电力供应

- ⇒ 请勿将本设备与其他由逆变器控制的设备（如冰箱、洗衣机、微波炉或空调）或带有电机的电气设备共用一个电源插座。由于电气设备使用方法不同，产生的电源噪音可能会导致本设备故障或产生噪音。若无法使用独立的电源插座，请在本设备与电源输出口之间安装一个电源噪音滤波器。

放置场所

- ⇒ 本设备可能会干扰收音机或电视机的接收信号。请不要将本设备放在这些接收信号的设备旁边。
- ⇒ 在本设备周围使用无线通讯装置可能会干扰本设备从而产生杂音。
- ⇒ 如果将本设备从一个地方搬到一个温湿度差别很大的地方，机内可能形成水汽（冷凝体），如果此时仍使用本设备则可能导致设备损坏或故障。因此，使用前必须将设备静置一段时间，直至水汽完全蒸发。
- ⇒ 请不要将本设备直接曝晒在阳光下，或放在热源旁边，或放在密闭的车内空间，或其他高温物体旁。过高的温度容易造成机体变形。

Panel

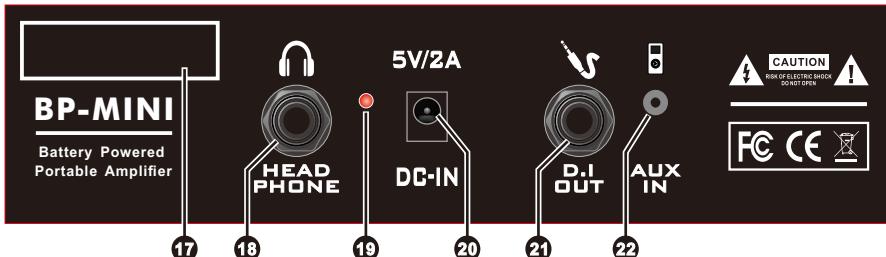

⑯ **Product barcode:**

Display related information of the device;

⑯ **Headphone jack:**

Realize the role of speaker monitoring;

⑯ **Charging indicator:**

The indicator light is red to indicate that it is charging; the indicator light is off to indicate that the battery is fully charged.

⑯ **Charging interface:**

Charging interface: Please use the original power adapter when charging;

⑯ **D.I output :**

Can output the music played by speaker to other music equipment;


⑯ **AUX-IN :**

Used to access mobile audio devices such as mobile phones or MP3;

Technical Parameters

Model	BP - MINI
Rated Output Power	Peak : 30W Rated : 40W
Input Level	-56dBu / 10kΩ
speaker	Woofer 6.5 inches Tweeter 1.5 inch
Frequency Range	20 - 20kHz
Control	POWER : switch VOLUME : Volume knob CHORUS : Chorus effect knob REVERB : Reverb effect knob BASS/TREBLE : Low/mid-high volume knob B.T MODE : Bluetooth control button
Interface	MIC : 6.35mm stereo audio interface GUITAR : 6.35mm mono audio interface PHONE(Live broadcast): 3.5mm 4 section stereo interface DC interface: 5.5-2.1mm jack AUX-IN : 3.5mm stereo audio interface "HEADPHONE / D.I OUT" : 6.35mm stereo audio interface
Size	230(L)×180(W)×200(H)mm
Weight	3.5KG
Adapter	5V/2A

Panel

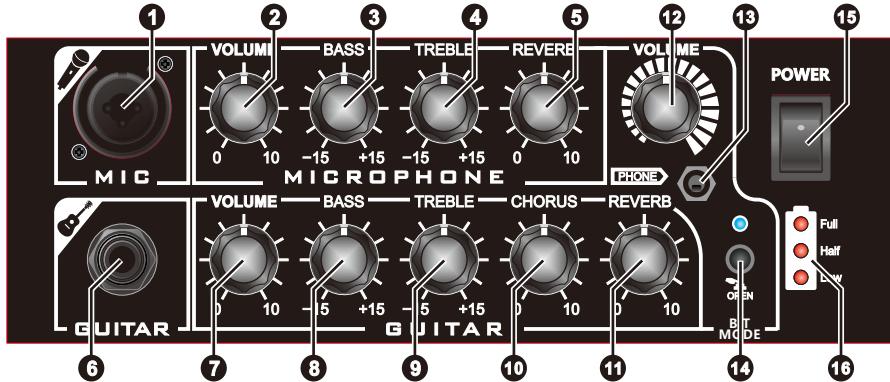

1 MIC :
Used to access microphones and other equipment;

2 Microphone volume :
Adjust the input volume of microphone;

3 Bass:
Adjust the low frequency gain of the MIC;

4 Treble :
Adjust the treble frequency gain of the MIC;

5 Reverb :
Adjust the reverberation effect of the MIC;

6 Guitar:
Used to connect guitars, microphones and other equipment;

7 Guitar volume:
Adjust the input volume of the guitar;

8 Bass:
Adjust the low frequency gain of the guitar;

9 Treble :
Adjust the treble frequency gain of guitar;

10 Chorus :
Adjust the chorus effect of the guitar;

11 Reverb :
Adjust the reverb effect of the guitar;

12 Other channel volume:
Adjust volume of "B.T/PHONE/AUX" etc.;


13 PHONE (live):
After connecting mobile phone, function of "live recording inside" can be realized;

14 B.T:(Use phone to connect the amplifier wirelessly)
Long press this button: 'Turn on/off' B.T function (indicator light flashes with a beep), click after B.T connection: 'play/pause' function;

15 Switch:
Used to control the power 'on/off' ;

16 Power indicator:
Display the remaining power of the device;

面板说明

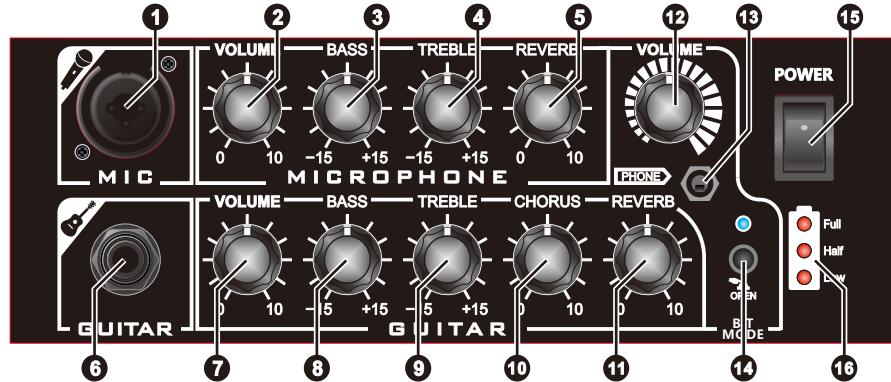

1 麦克风接口:
此接口用于接入麦克风等设备(兼容"6.35mm 或卡农"等音频线);

2 麦克风音量旋钮:
用于调节麦克风的输入音量;

3 低音调节旋钮:
用于调节麦克风输入的低频信号强度;

4 中高音调节旋钮:
用于调节麦克风输入的中高频信号强度;

5 '混响'调节旋钮:
用于调节麦克风输入信号的混响效果强度;

6 吉他接口:
此接口用于接入吉他、话筒等设备;

7 吉他音量旋钮:
用于调节吉他接口的输入音量;

8 低音调节旋钮:
用于调节吉他输入的低频信号强度;

9 中高音调节旋钮:
用于调节吉他输入的中高频信号强度;

10 '合唱'调节旋钮:
用于调节吉他输入信号的合唱效果强度;

11 '混响'调节旋钮:
用于调节吉他输入信号的混响效果强度;


12 其他通道音量调节旋钮:
用于调节 "蓝牙/PHONE/AUX" 等的输入音量;

13 PHONE (直播) 接口:
此接口通过 "4节 3.5mm音频线" 连接手机后可实现 "直播内录" 的功能;

14 蓝牙按键开关:
长按: 打开/关闭蓝牙; 单击: 暂停/播放;

15 电源开关:
用于控制电源 '开启/关闭' ;

16 电量指示灯:
打开电源以后即显示设备的剩余电量;

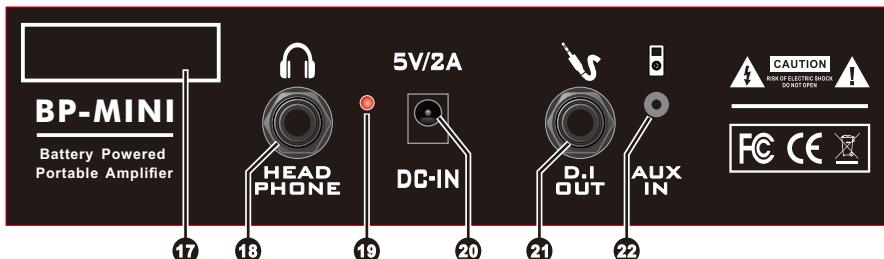

17 产品条码：
用于显示设备生产时的相关信息；

18 耳机接口：
接入耳机以后可达到监听音箱的效果；

19 充电指示灯：
指示灯亮红色表示正在充电；指示灯熄灭表示电量已充满。

20 充电接口：
此接口为音箱的充电接口，充电时请使用原装的电源适配器；

21 D.I 输出接口：
可将音箱所播放的音乐输出到其他音乐设备；

22 AUX - IN 接口：
此接口用于接入手机或MP3等移动音频设备；

技术参数

型号	BP - MINI
额定输出功率	Peak : 30W Rated : 40W
输入电平	-56dBu / 10kΩ
喇叭	低音喇叭 6.5 英寸 高音喇叭 1.5 英寸
频率响应范围	20 - 20kHz
控件	POWER 开关 VOLUME 音量旋钮 CHORUS 合唱效果旋钮 REVERB 混响效果旋钮 BASS/TREBLE 低/中高音量旋钮 B.T MODE 蓝牙控制按钮
接口	MIC 插孔 : 3.5mm立体音频接口 GUITAR 插孔 : 6.35mm单声道音频接口 PHONE (直播) 插孔: 3.5mm 4节立体声输入接口 DC充电接口: 5.5-2.1mm适配器插口 AUX-IN 插孔: 3.5mm立体音频接口 "HEADPHONE / D.I OUT" 插孔: 6.35mm立体音频接口
尺寸	230(长)×180(宽)×200(高)mm
重量	3.5KG
适配器	5V/2A

Please follow the instructions below

⚠ If your device has a built-in battery, you should pay attention to it during long-term storage: charge it as soon as possible when the battery is low, otherwise it will reduce the battery life;

⚠ WARNING : Remind users that improper use can be dangerous or harmful

⚠ CAUTION: Remind users that improper use can cause damage or damage to items.

⚠ WARNING

- ⇒ Before using this product, please read the instructions and user manual.
- ⇒ When using, please connect to a power outlet with grounding protection.
- ⇒ Do not disassemble or modify the built-in components and wiring of this device by yourself.
- ⇒ Please use the supplied adapter or power cord.
- ⇒ Before use, make sure that the rated voltage of the equipment matches the mains voltage. Inconsistent voltage will cause equipment damage.
- ⇒ Do not twist or bend the power cord excessively. This may cause a short circuit!
- ⇒ Do not share too many electrical appliances with this product. Pay special attention to all your equipment, the total power must not exceed the power that the socket can withstand.
- ⇒ When inserting the power cord plug into the socket, hold the power cord plug with your hand.
- ⇒ Please avoid entanglement of power cord with various wires. In addition, keep away from children.
- ⇒ When your hands are wet, do not take the power cord or insert or unplug the power cord plug.
- ⇒ Before moving the device, unplug the power cord and all cables connected to the device.
- ⇒ Before cleaning the device, turn off the power and unplug the power cord from the socket.
- ⇒ If you suspect a lightning strike in your area, please unplug the power plug.

⚠ CAUTION

- ⇒ Do not place this equipment in the following places:
 1. Places with excessive temperature
 2. Humid place
 3. Places with heavy humidity
 4. Places directly exposed to rain
 5. Dusty places
 6. Places with strong vibrations
- ⇒ When the following situations occur, turn off the power immediately and unplug the plug:
 1. Damaged adapter, power cord or plug
 2. Smoke or peculiar smell occurs
 3. The equipment is directly exposed to rain (or wet)
 4. The equipment is not operating normally or has obvious abnormalities

Electricity supply

- ⇒ Do not share the same power socket with other equipment controlled by the inverter. Otherwise, it may cause the device to malfunction or generate noise.

Placement

- ⇒ Do not place this device next to a radio or TV.
- ⇒ Using wireless transceivers near this device may cause interference and noise.
- ⇒ Do not use the machine in a humid environment, otherwise it may cause damage or malfunction of the machine.
- ⇒ Please do not expose the machine to direct sunlight or place it next to a heat source. Too high temperature can easily cause body deformation.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.