




TZ-812

Rechargeable and Waterproof Remote Dog Training Collar Operation Guide


Please read the entire guide before using

1


Components

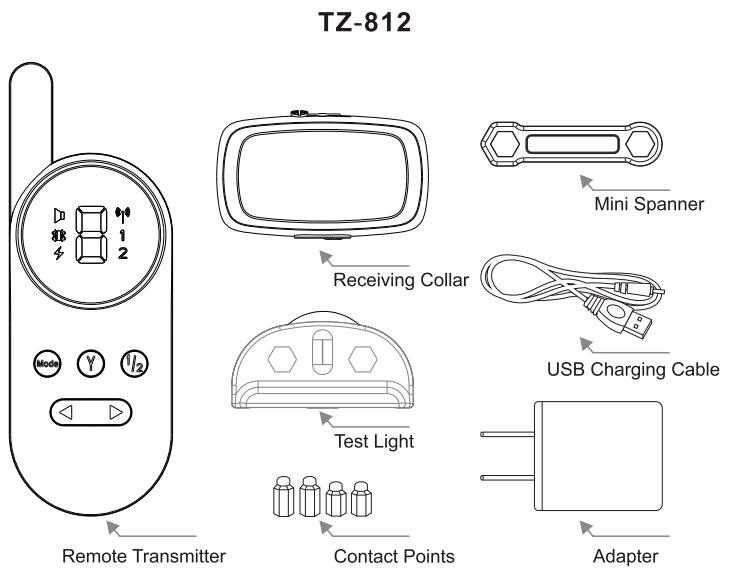

How to install the TPU belt to the Receiver collar

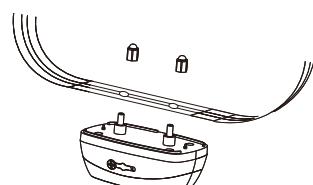

Excess strap can be cut if needed, it does not shred

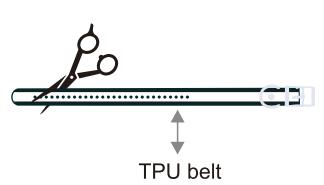

5

Thanks for choosing the Rechargeable and Waterproof Remote Dog Training Collar.
Our mission is to provide you with the safe tools and techniques to train your dog.

Contents


- 2 Features
- 3 How Does the Rechargeable and Waterproof Training Collar Work
- 4 Precautions
- 5 Components
- 6 Key Definition
- 8 Operation Guide
- Step 1 Preparing the Remote Transmitter
- Step 2 Preparing the Receiving Collar
- Step 3 Encoding the Remote Transmitter and Receiving Collar
- Step 4 Testing the Rechargeable and Waterproof Training Collar
- Step 5 Fitting the Receiving Collar to your dog
- 12 Frequently Asked Questions
- 14 General Tips for Training Your Dog
- 15 Common Weights of Different Dog Breeds

Features

1. Rechargeable Remote Transmitter
2. Rechargeable and Waterproof Receiving Collar
3. 1000 feet remote control range between Remote Transmitter and Receiving Collar.
4. Beep Mode activates a correcting tone on the Receiving Collar
5. Adjustable vibration intensity level from 1-9 level
6. Adjustable static shock intensity level from 1-9 level (optional)

2

Key Definition

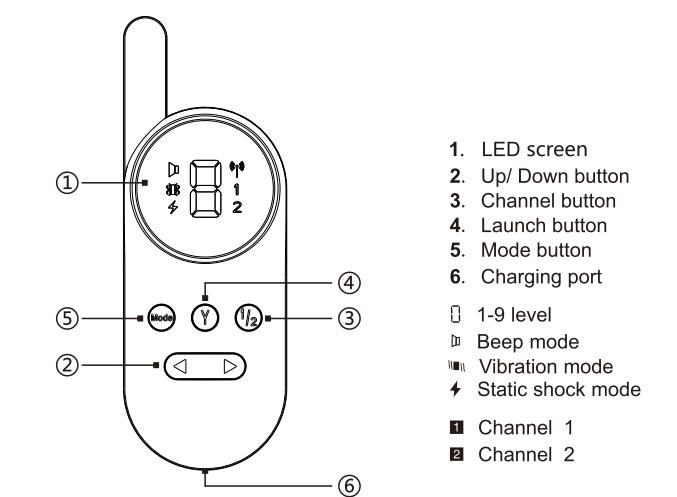

1. LED Screen:

- Beep mode: When this symbol is displayed, press the Y button to activate a Beep tone on the Receiving Collar.
- Vibration Mode: when this symbol is displayed, press the Y button to activate Vibration. Use the Up/ Down buttons to adjust the intensity of the vibration from 1 to 9.
- Static Shock Mode: when this symbol is displayed, press the Y button to activate Static Shock. Use the Up/ Down buttons to adjust the intensity of the shock from 1 to 9.
- Channel 1: select this channel to encode the transmitter and the Receiving Collar 1.
- Channel 2: select this channel to encode the transmitter and the Receiving Collar 2.

6

7. Power saving modes:
 - The Receiving Collar will go into Standby Mode if it's idle for more than 5 mins. Any movements will activate the Receiving Collar.
 - The Transmitter will go into Standby Mode (will be light off with 30s, will be light off with 1min). Press any button to re-activate it from Standby mode.
8. The Remote Transmitter can be used to control up to 2 Receiving Collars.
9. 2 pairs of metal contacts (1 short and 1 long) are included to suit the length of your dog's hair.

How does the Rechargeable and Waterproof Dog Training Collar Work

The Rechargeable and Waterproof Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs. This system allows you to control your dog within a range up to 1000 feet. At the press of a button, the Remote Transmitter sends signal to the Receiving Collar and activates a Beep, a Vibration or a Static Shock correction output. By using the Training Collar properly, you can correct much of your dog's undesired behavior and teach basic and advanced obedience commands.

Important: the Training Collar has an effective range up to 1000 feet. Hold the Remote Transmitter horizontally away from your body to achieve the optimum range. Terrain features, weather, vegetation, transmission from other radio devices and other factors may affect the range of the Remote Transmitter.

3

Precautions

DO NOT use this product for aggressive dogs or vicious animals.

Risk of skin damage.

It's important to fit the collar properly. A collar that is fitted too tightly or worn for too long may harm your dog's skin. This condition, which ranges from redness to pressure ulcers, is commonly known as bed sores.

CAUTION

- Do not let your dog wear the collar for more than 12 hours per 24-hour period.
- If possible, gently reposition the collar on your dog's neck every 1 or 2 hours.
- Never attach a lead to the Receiver Collar, as this would cause excessive pressure on the contact points.
- When using a separate collar to connect a leash, please ensure that it does not put excessive pressure on the electronic collar.
- Examine your dog's neck daily for signs of chafing or soreness.
- If a rash or sore is found, stop using the collar till the injured skin has been healed.
- If the condition persists for more than 48 hours, consult your veterinarian.
- If possible, please use the Beep Mode or Vibration Mode at first, then can try Static shock function.

Please ensure that you charge both the Receiving collar and the Remote Transmitter before using!

To extend the battery life of this product, if you do not intend to use it for a long period of time, please charge them per month.

4

Operation Guide

Step 1 Preparing the Remote Transmitter:

1. Charging the Remote Transmitter
2. Plug the USB Charging Cable into the Charging port.
3. Plug the Adapter into a standard outlet.
4. The number in LCD screen will be lighting circularly when charging.
5. The LED screen will show as - once its fully charged with 2.5 hours. Remove the USB Charging Cable.

Low battery indicator: The LED screen will show as P and flash 30seconds, then transmitter will be turned off automatically.

How to use the Remote Transmitter

1. Press any button to activate it.
2. Use the Mode button to cycle through different modes. The LED screen will display which mode is currently activated (, ,).
3. Press the Up/Down () buttons to set the intensity of the vibration or shock.
4. Select different channels for 1 or 2 Receiving Collars.


Power Saving Mode: the Remote Transmitter will go into Standby Mode if it is idle for 1 min. The LED screen on the Remote Transmitter will not display anything in this case(will be light off with 30s, will be light off with 1min), press any button to re-activate it.

Step 2 Preparing the Receiving Collar:

1. Charging the Receiving Collar
2. Remove the rubber cover and plug the USB Charging Cable into the charging port.
3. The red LED will keep lighting when the Receiving Collar is charging.
4. The green LED will be lighting once it's fully charged with 1.5 hours.
5. Remove the Charging Cable, and put back the rubber cover.

Low battery indicator: The red LED will be flash with 30seconds, then Receiving Collar will be turned off automatically.

8

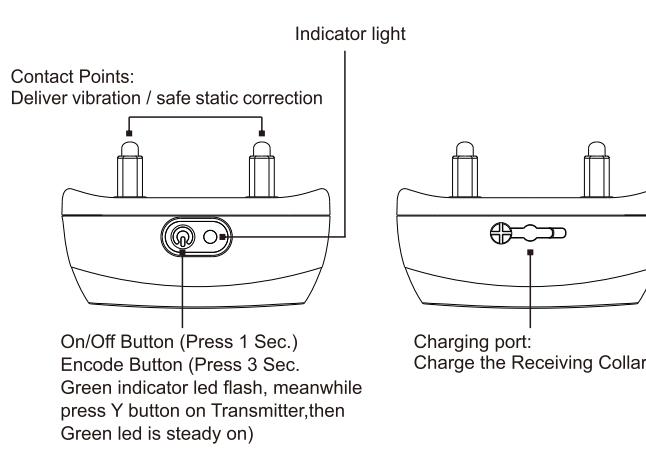

7

How to use the Receiving Collar:

Press the On/Off button to turn the Receiving Collar on. The green LED will illuminate to confirm that the Receiving Collar is ON.

Power Saving Mode: The Receiving Collar will go into Standby Mode if it is idle for more than 5 mins. Any movements will activate the Receiving Collar. If the Receiving Collar does not be activated when you press the Y button on Transmitter, and the Green LED on receiving collar is not on, then gently shake the Receiving Collar, the Receiving Collar will be activated and the Green LED light will illuminate.

Step 3 Encoding the Remote Transmitter and the Receiving Collar:

1. Press any button to activate the Remote Transmitter.
2. Press the  to choose either channel 1 or 2.
3. Press the  with 3sec on the receiving collar, when the Green LED flash, press the  on the Transmitter simultaneously, then Green LED on receiving collar will be steady on. Encode successfully.
4. Repeat steps 2-4 to encode the Receiving Collar 2.

Please wait at least 10 seconds after you encode Receiving Collar 1, choose another channel for Receiving Collar 2.

Note: Most of the Rechargeable and Waterproof Training Collars have already been encoded before leaving the factory. If so, just press any button on the transmitter to activate, then press the  with 1sec on receiving collar to turn on it, after that, you can test the function refer to step 4. (Page 9)



Step 4 Testing the Rechargeable and Waterproof Training Collar:

Testing the Static Shock Function

The static impulse generated by the Receiving Collar cannot be seen by naked eyes. Test whether the Static Shock Function works by using the following procedure:



9

- Remove the Test Light from the package and connect it to the contact points on the receiving collar.
- Press the "Mode" button on Remote Transmitter to select Shock mode. The intensity of the Static Shock can be adjusted by pressing Up/Down button() from level 1 to 9. Press the launch (Y) button on the Remote Transmitter.
- If the Test Light flashes, the Static Shock Function is working correctly.

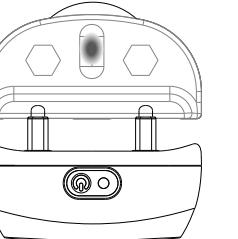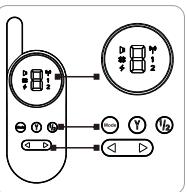



Testing the Vibration Function

- Press the "Mode" button on Remote Transmitter to select Vibration mode. The intensity of the vibration can be adjusted by pressing Up/Down button() from level 1 to 9.
- Press the launch (Y) button on the Remote Transmitter. If the Receiving Collar vibrates, the Vibration Function is working correctly.

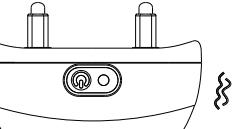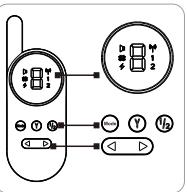

Step 5 Fitting the Receiving Collar to your dog:

Center the Contact Points under your dog's neck(A).

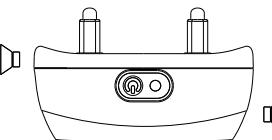
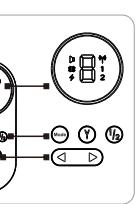


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

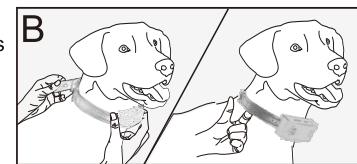
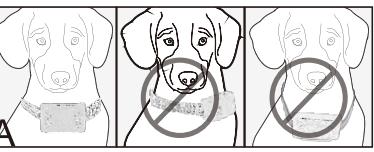


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

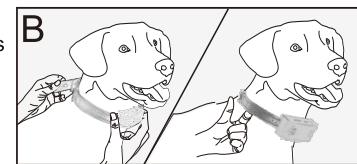
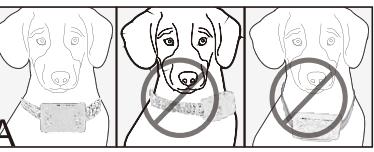


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

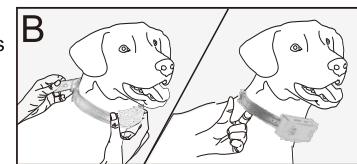
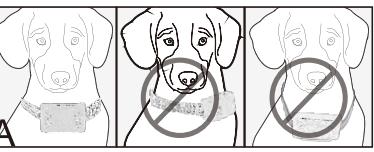


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

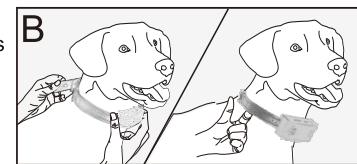
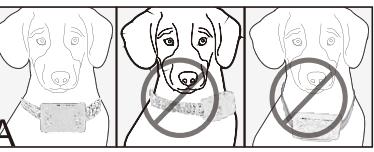


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

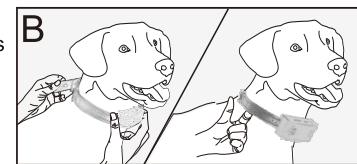
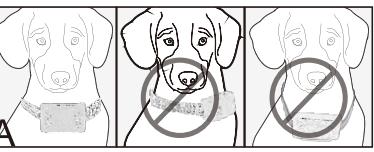


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

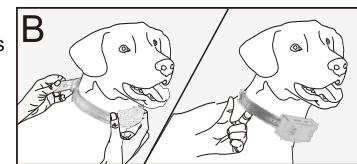
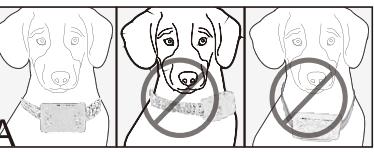


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

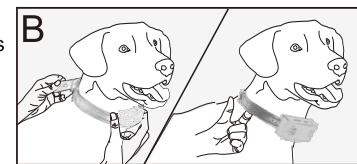
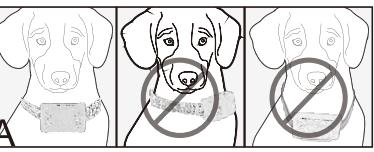


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

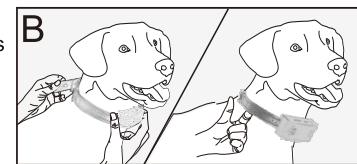
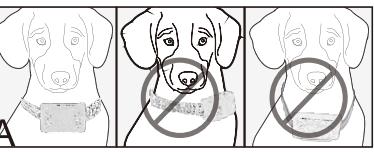


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

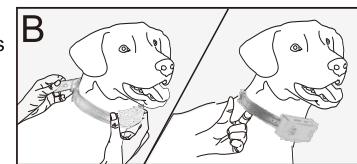
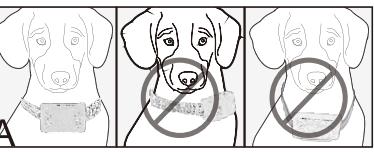


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

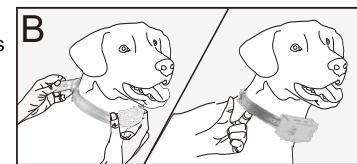
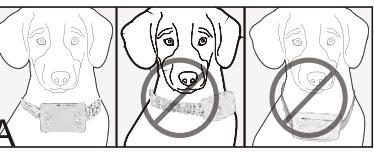


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

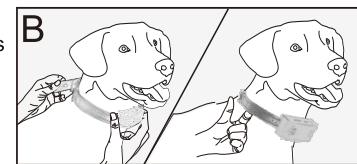
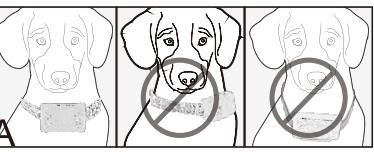


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

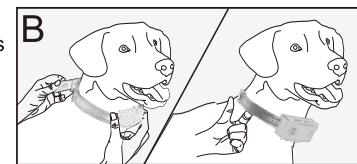
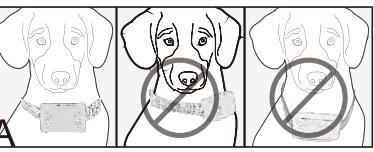


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

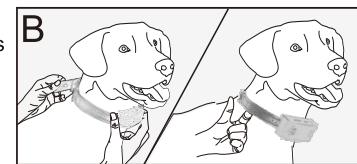
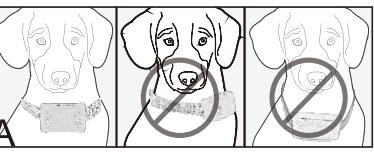


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

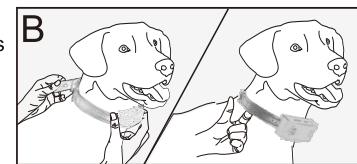
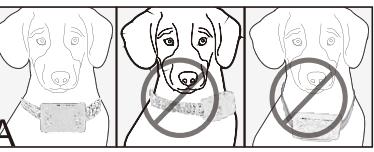


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

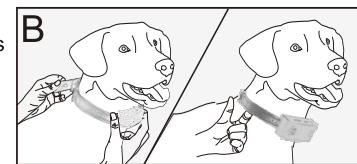
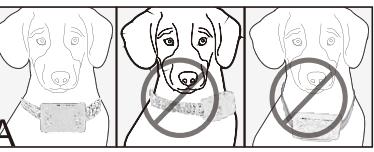


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

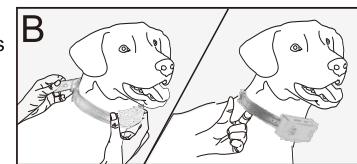
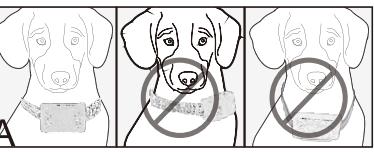


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

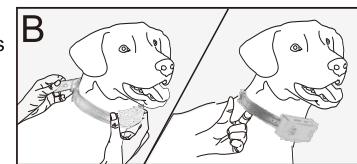
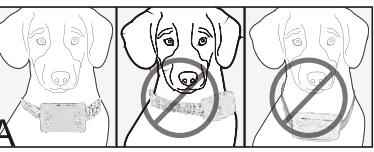


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

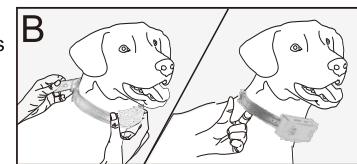
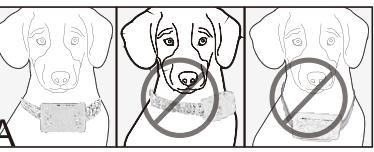


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

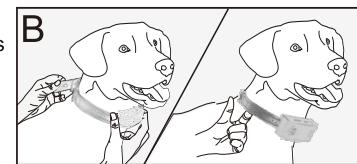
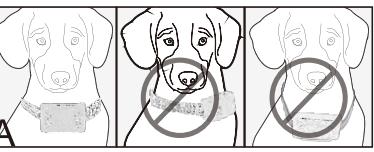


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

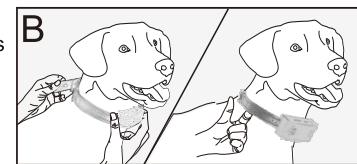
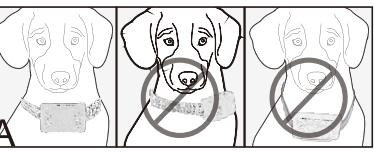


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

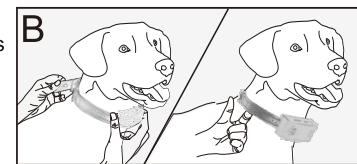
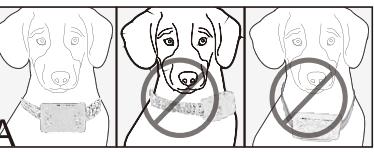


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

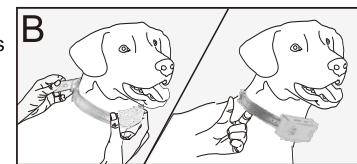
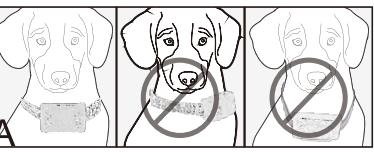


Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).

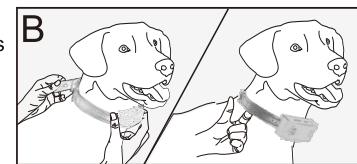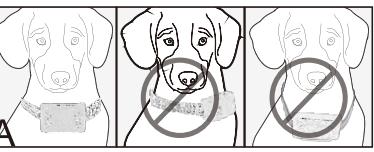

Step

5

Fitting the Receiving Collar to your dog:

1. Center the Contact Points under your dog's neck(A).