 




Gaming Chair




RCA to 3.5mm Mini Adapter



3.5mm Mini Cable

#### CONNECTION GUIDE FOR GAMING CHAIR(S)

##### ■ BATTERY INSTALLATION

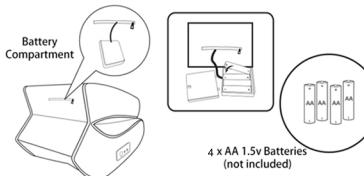


Locate the battery compartment in the back pocket of the chair, the pocket is only accessible when the chair is folded in half.

- Unzip the pocket and pull out the battery compartment. With a screw driver unscrew the screws located on the both sides of the battery compartment. Slide the covers off.
- Place 2 AA batteries on each side of the battery compartment, according to the polarity diagram inside the compartment. Four batteries need to be used(batteries are not included).
- Slide and screw the covers back onto the compartment. Place the compartment into the back pocket and close the pocket.


##### ■ PAIRING THE GAMING CHAIR WITH BLUETOOTH DEVICES

- Place the chair and Bluetooth device so that they are no further than 30 feet apart. Power on the chair you will hear "Your Bluetooth device is ready to pair" and the power LED is flashing. Once you have activated Bluetooth on your device, select the pairing name "Sylvania SCH205-HP" from the list. Once paired successfully, you will hear "Your Bluetooth device is paired successfully" and the power LED stop flashing. You can now start to use the speaker.
- Once you have paired the chair with a device, the chair will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.
- The chair will attempt to automatically connect to the last device it was paired with when the Bluetooth is turned on. If you want to pair it with a new device, please turn OFF your last Bluetooth device then use your new device to search and select the pairing name.


##### ■ GAME CONSOLES

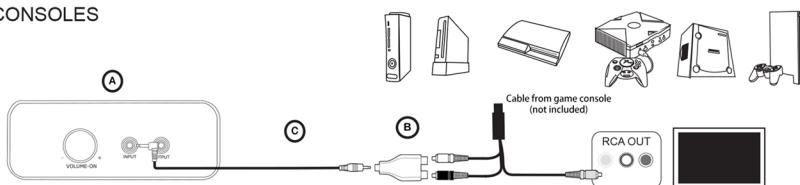


##### ■ MULTI-PLAYER

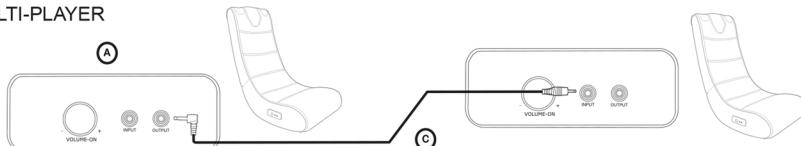

##### ■ TV, DVD, RECEIVER

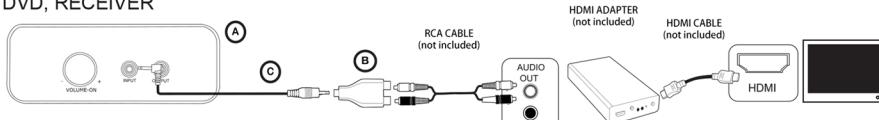

##### ■ HANDHELD / iPOD / MP3

 

##### ■ CONNECT TO HEADSET



##### CAUTION:

- Read instructions completely before use.
- Indoor use only. DO NOT expose to direct sunlight, moisture, or extreme temperatures.
- Adult supervision is required for set-up.
- DO NOT use on slippery or uneven flooring.
- NOT INTENDED FOR CHILDREN UNDER 12.
- DO NOT use this product on hardwood floors as the chair may cause scratching.
- DO NOT mix old and new batteries. DO NOT mix alkaline, standard(carbon-zinc) or rechargeable(nickel-cadmium) batteries.
- Excessive use of audio equipment at high volume may lead to hearing loss. Listen responsibly and use common sense.
- DO NOT wash or soak the unit with water. If the cover gets wet, remove cords, turn off, and do not use until totally dry.
- To avoid injury or death from electrical shock, NEVER open the electrical cabinet or remove the cover. Only the battery compartment should be accessed.
- Keep hands clear from the folding seam when opening the gaming chair.

**WARNING:** Use caution and pay attention to your surroundings while using the Gaming Chair. Use caution when rocking back and forth. Keep hands and feet clear of the back outer edges of the gaming chair while it is in use.

##### PRODUCT SPECIFICATIONS:

- Product size: W43 x D80 x H80(cm) (opened size)
- Product net weight: 7.7(kg)
- Cover material: 100% polyurethane fabric
- Filling material: 100% polyurethane foam
- Power supply: 4 x AA batteries(not included)
- Blue-tooth version: 5.0
- Blue-tooth operating distance: 10 meters
- Speaker output power: 2 x 2w
- Input voltage: DC 6v
- Rated power: 6w

##### FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.