55mm

Please refer to the actual unit!

PROSCAN™ IS A REGISTERED TRADEMARK

OF TECHNICOLOR USA INC.

AND USED UNDER LICENSE

TO CURTIS INTERNATIONAL LTD

PROSCAN BLUETOOTH SPEAKER MODEL NO: PSP1435-ASST INSTRUCTION MANUAL 75mm This pictures is only provided for reference.

Safety Instructions

•Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids

 
- Do not use the unit if it has been dropped or damaged in anyway.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- •Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
- •Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children
- This product is not a toyDo not use abrasive cleaning solvents to clean
- To minimize the risk of fire or electrical shock, a void operating in wet conditions such as rain or humidity
 Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire
- Never immerse the unit in water or any other liquid for cleaning purposes

Bluetooth Speaker Micro USB charging cable 3.5mm Aux in cable Instruction Manual

Instruction:

Contents

1.On / off button 2.Previous track 3.Next track 4.Pause / Play 5.Aux in port 6.TF card port 7.Indicator 8.Micro USB charging port



Instructions (How to use the wireless mode)

- Turn on the speaker by pressing the on/off button (1), the bluetooth mode will be on automatically
- The indicator light (7) now flashes blue
- Open the Bluetooth menu on your wireless device (phone, tablet,laptop, i.e.) and select " Pro PSP1435"
- Pair the device
- Play music

Instructions (How to use the TF-card mode)

- Turn on the speaker by pressing the on/off button(1)

- Insert the TF-card into the TF card slot (6)and the music will start playing automatically Instructions (How to use the AUX IN mode)

- Turn on the speaker by pressing the on/off button (1);
- Insert one of the 3.5mm jack into the 3.5mm Aux in slot (5) and insert another one into your device.

Instrunctions (How to use the Handsfree caling function)

- Short-press the button(4) to answer/end a call.
- Long press the button(4) to reject an incoming call
- Press twice the button(4) to redial the last
phonenumber.

Instructions (How to charge the speaker)

- Insert the Micro USB cable into the micro charging port (8)
- Insert the USB-A side into a 5V USB charger or other power source
- During the charging process, a red indicator light wil remain on, and the light will be off when fully charged.

Specifications:

Bluetooth version	5.0
Bluetooth range	10 meter(max)
Max output power	3W
Frequency response	80 Hz-16KHz
Signal to noise ratio	≥60 dB
Battery type	Rechargeable LI-on battery
Battery capacity	500 mAh
Charging time	About 2-3 hours
Working time	About 2-3 hours

Attention/ Danger !:

- Too avoid hearing damage, limit the time you use this sound source at high volume and set the volume to a safe level. Prolonged exposure to high volumes can cause hearing damage.

Precautions:

- Only charge the speaker with a 5V/1A charger.-Handle with care and avoid falling on the ground.-Don't place heavy objects on the item.
- Children should be supervised while operating the item.- Working temperature is between 0 °C-25° °C.
- Don't use the speakers with wet hands

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Regrient or relocate the receiving antenna.

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit

- different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option, however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability of fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or province do not allow limitations on implied warranties or special, incidental, or consequential damages, so the

foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE. Please have the following information available when you contact the Support

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

For service assistance and product information, please call: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com