

Model#:ED-505

Portable Speaker

USER GUIDE

BASS

BOOM

POWER

COLORS

LIGHTS



INSTRUCTION MANUAL

***The picture is only provided for reference. Please refer to actual the unit!**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Accessories

Speaker Unit x1
Instruction Manual x1
Adapter x1
Remote Control x1

Specification:

5.5" +5.5" woofer,
2" tweeter
Battery:7.4V/5,400mA
Power:32W RMS
3.5mm Aux-in
TWS function: Wireless connection, up to 2pcs speakers playing together to enable sound to be double
USB/Micro SD Card play; FM Radio, Bluetooth connect
Support USB version: USB2.0, USB3.0, up to 64GB storage.
Support Micro SD card up to 64GB storage.
Microphone inputx2
BASS/Treble/Microphone Volume/Echo control

 
Product Dimension:25x24.2x59.5cm
Product net weight:5.8KG

Play time: 3.5 hours at 100% volume
Charging time:6 hours

Matters need attention:

Keep the speaker far away from flame ignition source, water-drop, water-splash.
It is strictly prohibited to open the speaker without professional guidance.

Top panel operation

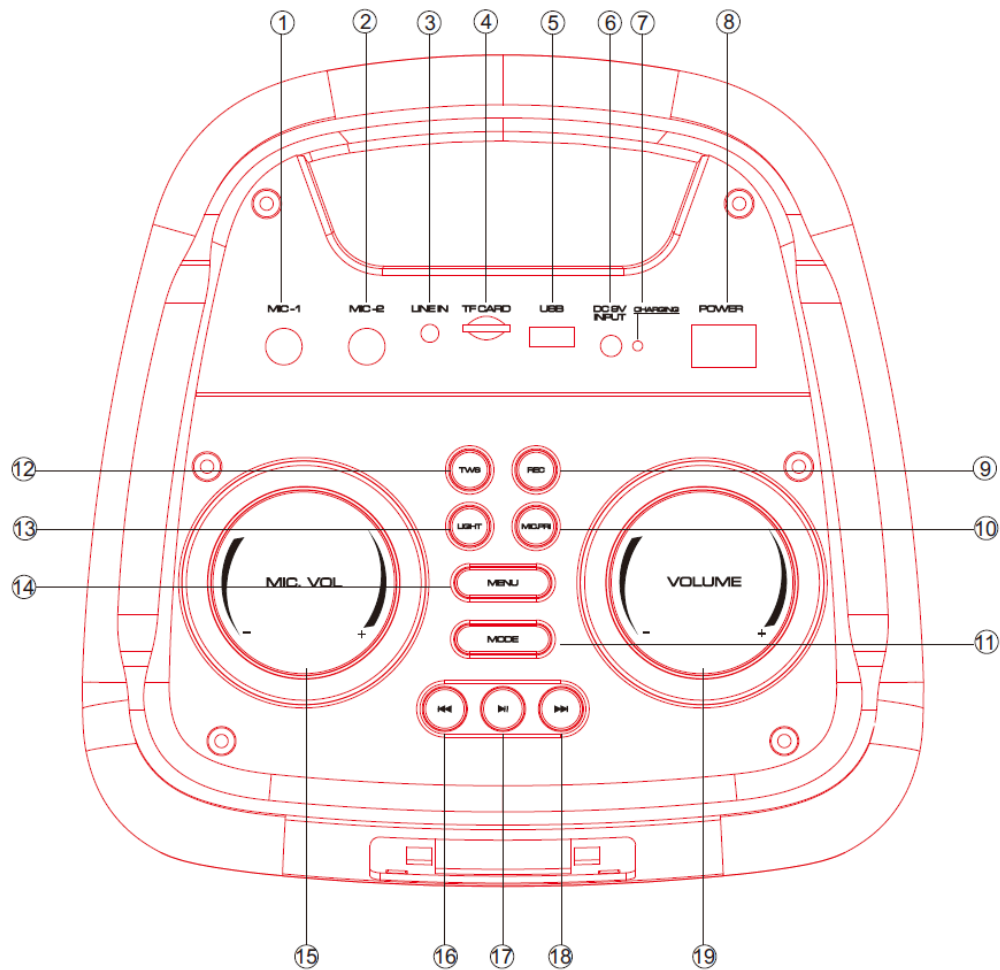


- 1:Microphone Input
- 2:Microphone Input
- 3:Aux-in(3.5mm)
- 4:TF/Micro SD Card input
- 5:USB Play back
- 6:DC 9V input(charging slot)
- 7:Charging indicator(red-low power/charging, green-full)
- 8:Power on/off
- 9:Short press to Record songs from microphone to USB/TF, press again to play recording, long press again to delete recording
- 10:Microphone priority(when playing USB/TF and press this button, the microphone volume will override songs in USB/TF)
- 11:MODE switch
- 12:TWS function(check last part of user manual to see operation)
- 13:Light effect switch and on/off.
- 14:MENU(Bass/Treble/MIC volume/MIC bass/MIC treble/MIC echo),long press this button to restore factory settings
- 15:MIC volume
- 16:Short press to get previous song, long press to fast backward

17:Short press to play/pause under USB/TF/BT, and press once to scan all stations and store automatically in FM mode.

18: Short press to get next song, long press to fast forward

19:Main Volume.

 Remote control

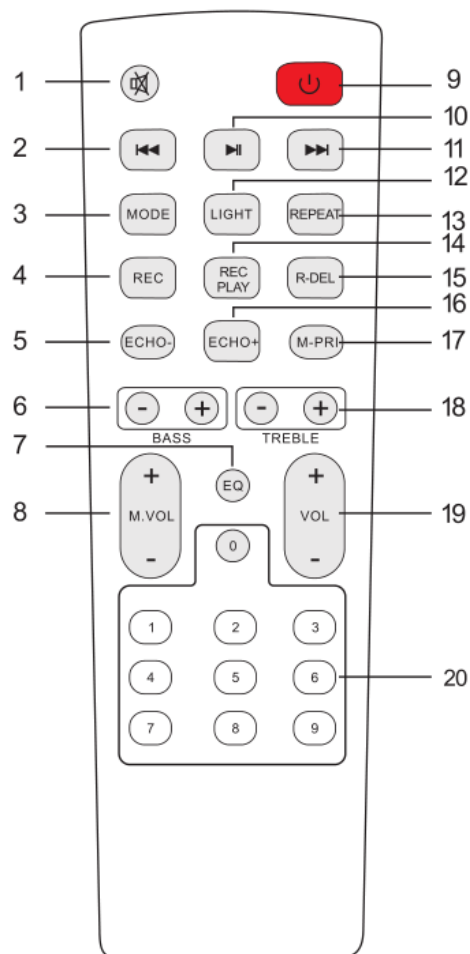

1.Mute

Available to be mute at any mode.

2.Previous Song

Under USB/TF card mode - previous song.

Under BT connection mode- previous song.

3.Mode

Press shortly to skip to Wireless BT/LINE IN/USB/TF /FM mode.

4.Record function

Under USB mode, press the "REC" button to record

5. Echo-

Press to decrease the volume in any mode.

6.BASS+/-

Press to increase or decrease the bass.

7.EQ function

Press to switch between the different EQ settings.

8. Microphone Volume+/-

Press to increase or decrease the microphone volume.

9. Stand by

10.Pause&Play

Pause/Play and press once to scan all stations and store automatically in FM mode.

11.Next song

Under USB/TF card mode - next song.

Under BT connection mode- next song.

12.Light mode

Light effect switch and on/off

13.Repeat function

Press to repeat one song or repeat all songs.

In Wireless BT mode, this button has no function.

14.Record play

In USB mode, press to play the record.

15.Record delete

In USB mode, press to delete the record.

16.Echo+

Press to increase the Echo in any mode.

17.Microphone priority

When the Microphone is in use, press once to take priority over the music program, press again to turn off this function.

18.Treble+/-

Press to increase or decrease the Echo in any mode.

19.Main Volume

20.Number buttons

Under USB/TF mode to choose songs.

In other modes, these buttons have no functions.

OPERATING INSTRUCTIONS




● Wireless BT Pairing Mode:

Press MODE or Blue button on the unit or the remote control until BT is selected.

1. Put the cell phone within 10 meters;

2. Activate the BT features on your cell phone so that the cell phone starts to search for the BT device. Please refer to the users' manual for details

3. Select the correct model No. **(ED-505)** The device found by the cell phone;

4. Shortly press PLAY/PAUSE button  to play or pause music. Short press " " or " "


key to select the previous or next track.


● LINE IN MODE

Press the MODE button on the unit or the remote control until the LINE is selected. Play the music of the device connected to the LINE input.

● USB /TF CARD Mode :

1. After start-up, press mode button to select 'USB or TF card' mode, or insert the USB or TF card in this speaker, the unit will play the songs automatically.

2. Press “” key shortly to pause or play.

3. Shortly press “” key to the previous song.

4. Shortly press “” key to the next song

● FM Mode

- Turn on the power and press the MODE button repeatedly to select the FM function (the frequency is displayed on the display).
- Press the play button to activate the automatic memorization (the tuner searches for stations available and memorizes automatically). The number of memorized stations depends on the reception in your area.
- Use the next/previous buttons to listen to the memorized stations.
- To select a memorized station directly, press the corresponding numeric key on the remote control.

 
● TWS Mode

1. Turn on these 2 speakers together, press TWS button on top panels of one speaker, speaker display will show 'BLUE'.
2. Turn on your Bluetooth devices, and put these Bluetooth devices near the speaker within 10 meters.
3. Search the pairing name (ED-505) from your Bluetooth devices, and tap to connect it.

4. Press TWS button on the other speaker, this speaker display will show 'BLUE' and keep blinking, you will hear 'ding dong' after both speakers connected successfully, and 'BLUE' on display will stop blinking .
5. Now you can play songs from your Bluetooth devices.
6. Long press TWS button from any device to disconnect TWS function.

Note:

The speaker connect to your Bluetooth devices that means that it is Host speaker.
The other speaker is assistant speaker.

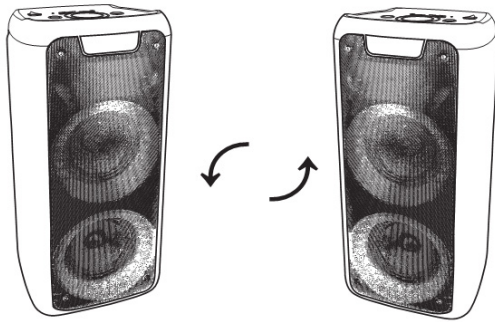

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter