

## About the Guide

- This quick start guide is for reference only. Minor difference might be found in user interface.
- All the design and software here are subject to change without prior written notice.
- All trademarks and registered trademarks mentioned are the properties of their respective owners.
- Please visit our website or contact your local service engineer for more information.
- If there is any uncertainty or controversy, please refer to our final explanation.

## Support

- Support Email: support@ucfer.com
- FAQ: Scan the QR code below



## Operating With Ucfer App

### Step 1

Scan the following QR code or search “Ucfer” in Google Play or App Store to download and install Ucfer App.



### Step 2

Run Ucfer App, and then register an account for first use.

### Step 3

Connect the camera to power source with the power adapter.

### Step 4

Wait for booting to be finished, and then the camera indicator flashes with green light.


### Step 5

Connect your smart phone to your Wi-Fi network, and make sure your smartphone is connected to Wi-Fi network with 2.4 GHz band, and then do the following operations to finish adding camera.

**Note:** • If you have more than one camera, do step 5 to add them one by one.  
• If the Wi-Fi network changed or the indicator status goes wrong, reset the camera, and then do step 5 to add it again.

## Installing Camera

**Note:** Make sure the mounting surface is strong enough to hold at least three times of the device weight.

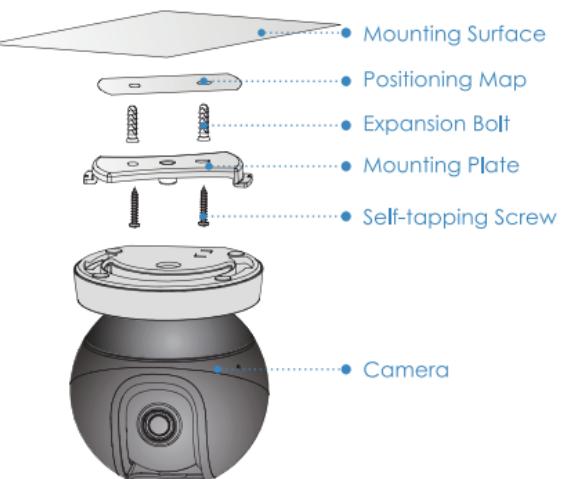

**Step1** Drill screw holes on the mounting surface as the mounting plate shows, and then put in the expansion bolts.

**Step2** Attach the mounting plate to the mounting surface with the self-tapping screws.

**Step3** Attach the camera to the mounting plate, then power it up, and then, adjust the lens to the ideal angle.

# Ucfers

Your safer home

Version 1.0

## Packing List



Camera ×1



Power Cable ×1



 
Power Adapter ×1



QSG ×1



Screw Package ×1





Mounting Plate ×1



Positioning Map ×1

## Camera Introduction

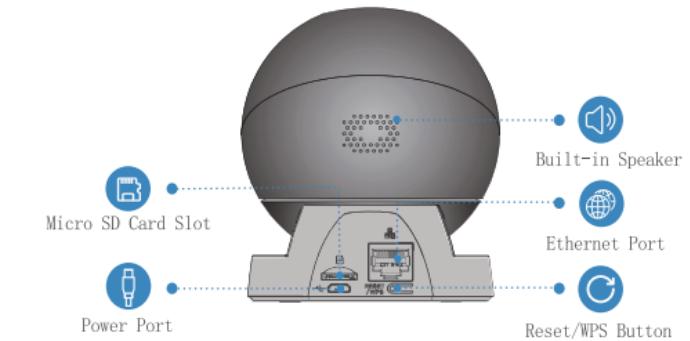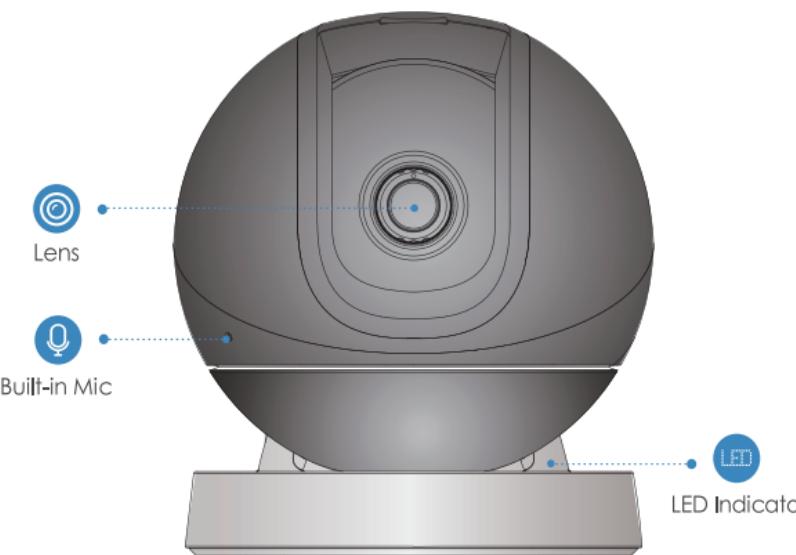

**Note:** Press the Reset/WPS button to enable WPS.

Press and hold the Reset/WPS button for 10 s to reset the camera.

The pattern of the LED indicator is included in the following table.

LED Indicator Status	Device Status
Off	• Powered off/LED turned off ● Rebooting after reset
Red light on	● Booting ● Device malfunction
Green light flashing	Waiting for network
Green light on	Operating properly
Red light flashing	Network connection failed
Green and Red light flashing alternately	Firmware updating