



User Manual



Read me first

- Please read this manual before operating your mobile phone, and keep it for future reference.
- The descriptions in this manual are based on the default settings.
- Images and screenshots used in this manual may differ from the actual product.
- Available features and additional services may vary by device, software or service provider.
- Our company is not liable for performance issues caused by third-party applications.

Assembling

Unpack

Check your product box for the following items.

- Mobile phone
- User manual
- Adapter

You can purchase additional accessories from your local retailer.

Charge the battery

Before using the device for the first time, you must charge the battery.

- You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
- Battery full icon is shown when finished if your device is off.

WARNING

Use only original batteries and chargers. Unapproved chargers or cables can cause batteries to explode or damage your device.

Install the SIM card

You need to insert a SIM card to use the Phone function. To install the SIM card, follow the instructions below.

- Make sure that the card's gold contacts face into the device.
- Push the SIM card into the slot.

Install the memory card

To store additional multimedia files, you need insert a memory card.

- Insert a memory card with the gold contacts facing downwards.
- Push the memory card into the slot.

Tap icon to activate or deactivate wireless connection features and other settings.

Wi-Fi: Activate or deactivate the Wi-Fi connection.

Bluetooth: Activate or deactivate the Bluetooth connection.

Notifications: Activate or deactivate the notification feature.

Flashlight: Activate or deactivate the Flashlight.

Auto-rotate screen: Activate or deactivate the auto rotation feature.

Battery Saver: Activate or deactivate the Battery Saver.

Brightness: Adjust the basic brightness level of the display to lighter or darker.

Getting started

- Turn your device on, reboot and off
- To turn on your device, press and hold the power key.

- To reboot your device, press and hold the power key, select "reboot".
- To turn off your device, press and hold the power key, select "power off".

Switch to flight mode

To use only your device's non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode: Tap Settings Network & Internet / Advanced / Airplane mode from application list to turn on flight mode.

Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

Indicator icons

Open WiFi Available	Flight Mode Activated
WiFi Connected	New E-mail
Signal Strength	New Text or Multimedia Message
BT Connected	Call in Progress
Uploading Data	Missed Call
Downloading Data	Call on Hold
Connected to Pc	Call Diverting Activated
Alarm Activated	Battery Power Level
Music Being Played	Don't Disturb
Auto-Rotate	Location

Notification panel

Pull down to open the top of the notification bar to show the 6 users commonly used shortcut switch, support click on the switch, and long press to enter the corresponding settings. If you continue to pull down the notification bar to display all the quick switch, fast switch in the lower right corner of page will display a "Edit" button, click to add / delete custom shortcut switch, or drag the sort.

Tap icon to activate or deactivate wireless connection features and other settings.

Wi-Fi: Activate or deactivate the Wi-Fi connection.

Bluetooth: Activate or deactivate the Bluetooth connection.

Notifications: Activate or deactivate the notification feature.

Flashlight: Activate or deactivate the Flashlight.

Auto-rotate screen: Activate or deactivate the auto rotation feature.

Battery Saver: Activate or deactivate the Battery Saver.

Brightness: Adjust the basic brightness level of the display to lighter or darker.

Settings: Access Settings application.

Auto rotation

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto-rotate screen, then tap it to Off.

Lock & unlock the screen

- Slide to unlock the screen.
- To lock the screen manually, press Power key.

Customize your device

To customize your device according to your preferences, tap Settings from application list or notification panel.

Manage applications

To manage the applications installed on your device, tap Settings/Apps & notifications.

- To uninstall an application, select an item and tap UNINSTALL, tap OK to confirm.
- To stop or change the settings of an application, select an item and tap the option you need.

Security

You can protect your device and data by setting screen lock or encrypting your mobile phone.

Set a screen lock

To set a screen lock, tap Settings/Security & location/Screen lock from application list.

- None: Deactivate the screen lock.
- Swipe: Slide to unlock the screen.
- Pattern: Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.

- PIN: Enter a numeric PIN to unlock. When prompted, enter the PIN to unlock the screen.
- Password: Enter a passcode to unlock. When prompted, enter the passcode to unlock the screen.

Screen time-out

Select Settings/Display/Advanced/Sleep from application list, you can set the time before the screen times out and goes into lock mode. (you have not entered any characters or made other selections).

Set up the fingerprint

Fingerprint: Want to use your fingerprint to unlock the screen or confirmation of purchase, you need to:

- set the standby screen lock mode;
- and add your fingerprint;

ATTENTION: In addition to using fingerprint unlock their devices, you can also set the equipment before startup requires the user to unlock pattern, to further protect the equipment. Equipment starts, to answer the phone, receiving a message or notice (including alarm clock). This can be in to protect the data on the equipment after the

Dial pad touch tones

Settings/sound/Advanced/Dial pad tones You can open or close the Dial pad tones.

Voice mail

device is lost or stolen.

Display size

You can set it Settings/Display/Advanced/Display size

Data saver

You can set it Settings/Network & Internet/Data usage/Data saver

Quick Switch

You can switch applications by simply double clicking the "Recents" button

Reset mobile phone

If FDN mode is activated, your device will restrict outgoing calls, except for the numbers stored in the FDN list.

Quick responses

Quick response is a feature to reject the call with the predefined messages. Tap one of the pre-written messages to be displayed when you want the call to be rejected, then tap OK.

Call forwarding

Call diverting is a network feature to send incoming calls to another number that you specify.

Call waiting

If call waiting is activated, the network notifies you of a new incoming call while you have a call in progress or you can make a new call during a call.

Contacts

Tap Contacts from application list to access contacts.

- All>List all your contacts saved in the device memory and SIM cards.
- Favorites>List the contacts that you have set as favorites or the contacts that you have sent message to or dialed.

Add new contact

- Access Contact number.
- Click 
- Enter necessary Contact name.
- Click 

Edit a contact

- To edit a contact, select and click the contact you want to change.
- Click the edit icon at the upper right.
- Change necessary fields.
- Click 

Call settings

To change call settings, tap the option button at the lower Right below the dial-up interface.

Import/Export contacts

1. Import from the SIM card

To copy the contacts from the SIM card, click the option button at the upper left and then select Settings/Import/COPY CONTACTS FROM select USIM/click NEXT/COPY CONTACTS TO select Phone contact/click NEXT, select contacts, and then click OK.

2. Import from MEMORY card

To import contact files (in vcf format) from a memory card to your device, tap the option button at the upper left and then select Import/ COPY CONTACTS FROM select MEMORY card/click NEXT/COPY CONTACTS TO select Phone contact/click NEXT, select contacts, and then click OK, choose vCard

files, and then click OK.

Export to MEMORY card

To export contacts from your device to a memory card, tap the option button at the upper left and then select Export/Export contacts select Export to vcf file/selected MEMORY card/and then click SAVE Export to MEMORY card.

Search for contacts

- Click  at the upper right from contact list screen, enter the desired information, then your device shows the result.

Messaging

Learn to create and send a text or multimedia message, and view or manage messages that you have sent or received.

View messages

- Click Messaging from application list.
- Click the message to view the detailed information.

Create and send SMS

- Click  enter NEW MESSAGE.
- In Type name or number field, enter the recipient's mobile phone number manually. If you enter more than one number, separate them with a comma.
- In Type test message field, enter the text of the message.
- Click Send to send the message.

Create and send MMS

Multimedia message can include pictures, sound and text.

- Click  enter NEW MESSAGE.
- In Type name or number field, enter the recipient's mobile phone number manually. If you enter more than one number, separate them with a comma.
3. In Type test message field, enter the text of the message.

Import/Export contacts

- Pictures:** Insert image.
- Capture picture:** Capture new picture and insert the picture.
- Videos:** Insert video clip.
- Capture video:** Capture new video clip and insert the video clip.

- Audio:** Insert sound clip.
- Record audio:** Record sound clip and insert the sound clip.
- Slideshow:** Add more than one slide.

- Contact:** Insert contacts
- Calendar:** Insert Calendar

- 4. In Type test message field, enter the text of the message.**
- 5. Click Send to send the Multimedia message.**

Email

To receive and send mail, you must have a remote mailbox service. This service may be offered by a service provider. Your device is compliant with popular Internet



standards for POP3/IMAP/Exchange.
Before you can send or receive mail on your device, you need to set up an email account and define the email settings correctly. You can define more than 1 mailbox.

Set up your email

1. Click **Email** from application list.
2. You can use mailbox guide to set up your mailbox, tap **Next** until it's done.
3. If you need to add another email account, tap the option button at the upper left/**Settings/Add account**, then set up the email account with the mailbox guide.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one you want to retrieve messages from.

Delete your email account

Click **Settings** from application list/**Users & accounts**/Click on the email address Click the "REMOVE ACCOUNT" button.

Create and send email

1. Open **Email** application.
2. Click the write button.
3. In **To** field, enter the recipient's email addresses manually and separate them with a comma. Add more recipients by tapping **Cc/Bcc**.
4. Click  to choose attachments that you want to insert.
5. Enter the subject and the text.
6. Click **SEND** button to send the email.

Web

Browser
Tap Browser from application list to access to the web.

- Browser webpages**
1. Select **Browser** to launch a specified homepage.
 2. To access a specific webpage, select the URL input field, enter the web address of the webpage, and select **Go**.

Set homepage

1. Tap the option button  at the upper right.
2. Select **Settings/General/Set homepage**.

3. Enter the web address of the desired webpage.

Add bookmarks

While navigating a website, click  Select "Save to bookmarks" to Save bookmarks and easily access it later.

View bookmarks and history

Tap the option button  at the upper right/select "Bookmarks/History" to open the bookmark list and the recent history. click a bookmark or any entry to display the webpage.

Customize browser

To make adjustments in your browser settings, click the option button  at the upper right, and then select **Settings**.

Entertainment

Camera

With the camera function, you can capture photos and take videos.

Capture a photo

1. Open the application list and select **Camera**.
2. Before taking a picture, you need to know some settings.

Place two fingers on the screen and spread them apart or move fingers closer together to zoom in or zoom out.



Front and Rear Camera Switch



Smile Mode



Panorama for Landscape Photo

3. Aim the lens at the subject and tap  to take a photo. The photo is saved automatically to the folder DCIM.
4. Select the image viewer icon at the lower right to view the pictures.

Record a video

1. Open the application list and select **Camera**. Tap  to change to video mode.
2. Tap  to start recording. The length of the video recording is restricted by the available space on your storage.
3. Tap  to stop recording. The video is saved automatically to the folder DCIM.

4. After recording videos, select the image viewer icon at the lower right to view the recorded videos.

Tools

Calendar

With the **Calendar** feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the calendar, tap **Calendar** from application list.

1. To create an event, tap the option button at the upper right and then select **New event**.

- Fill in the fields, and set category, date, time & an alarm.
- After you finish, select **DONE**.

2. You can view calendar in different views, Day, Week, Month and All.

3. To delete an entry, tap the event to open it, tap the option button at the upper right and then select **Delete**, select **OK**.

Wi-Fi

With Wi-Fi, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

Activate the Wi-Fi feature

From application list, tap **Clock**, and then select .

1. Tap  to add alarm.
2. Tap the numeric pad to set alarm time, and then select **AM** or **PM**, when

you are finished, tap **OK**.

- Tap the time to change alarm time.
- 2. Set repeat cycle, alarm ringtone, Vibrate, and edit Label message, tap **OK** after finished.
- 3. Tap "DISMISS" to shut down the alarm, and tap "SNOOZE", then the alarm will stop ringing for a few minutes.
- 4. Tap the Arrow of one alarm and click  to Delete this alarm.

Bluetooth

With bluetooth, you can share music, pictures, video, contacts with another phone. You can use bluetooth headset phone or listening to music.

Activate the bluetooth feature

From application list, tap **Settings/Connected devices**/Pair new device.

Scan and connect to other Bluetooth devices

1. The device automatically search for other Bluetooth devices.
2. Select a device and pair.

Note:

1. Some files formats are not supported depending on the software of the device.
2. Some files may not play properly depending on how they are encoded.

Sound Recorder

With Recorder, you can record a voice memo. From application list, tap **Sound Recorder**.

1. To record a voice memo, tap .
2. To stop the recording, tap .
3. To listen to a voice recording that you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

Connectivity

USB Connection

With the **Calendar** feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the calendar, tap **Calendar** from application list.

1. If you want to transfer files from or to device, insert a memory card into the device.

2. With a USB cable, connect your device to a PC.
3. Open the notification panel, Use USB to select **Transfer files**.
4. Open the folder to view files.
5. Copy files from the PC to the device memory or memory card.

Operating environment

When connecting to other device, read its user guide for detailed safety instructions.

1. Do not connect incompatible products.
2. Do not place your device in the air bag deployment area.
3. Use the device only in its normal operating positions as explained in the product documentation.
4. Always switch off your device when its use is prohibited or when it may cause interference and danger.

available Wi-Fi connection.

2. Select a network.
3. Enter a password for the network (if necessary).
4. Select Connect.

Areas with posted regulations

Switch off your device when any regulations posted in these areas instruct you to do so.

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Do not use or store the device in dusty, dirty areas.

Do not store the device in hot or cold areas.

Do not store your device near magnetic fields.

Do not store your device with such metal objects as coins, keys and necklace.

Do not drop your device or cause impacts to your device.

WARNING

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

RF Exposure Information:

- This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> for search for FCC ID:2ATQ1W1 to gain further information include SAR Values.

• This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


• Consult the dealer or an experienced radio/TV technician for help.

• Do not use the device with the environment which below minimum 10 or over maximum 50, the device may not work.

• Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• Ad Hoc function is supported but not able to operate on non-US frequencies.

• Google, Android, Google Play and other marks are trademarks of Google LLC.

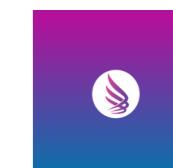

Wings

wingsmobile.net