

BH15

User Manual


FCC ID:2ATRA-BH15

1.Package contents

- BH15 wireless headphone
- Aux cable(Without microphone, only for listening, not for phone call or voice chat)
- Charging cable (Only for charging, not for data transmission)
- User manual

2.Overview


- Structure

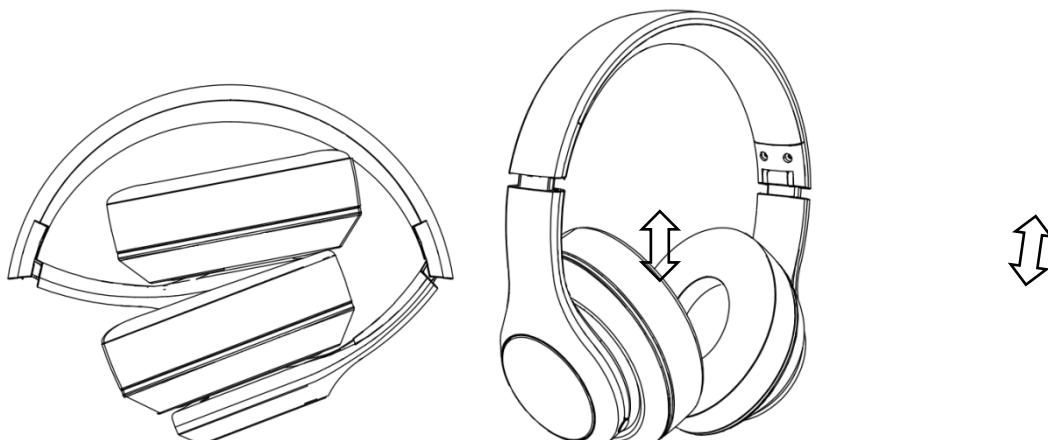

Foldable design for portability

Stretchable design for comfortable wear

- Operation panel

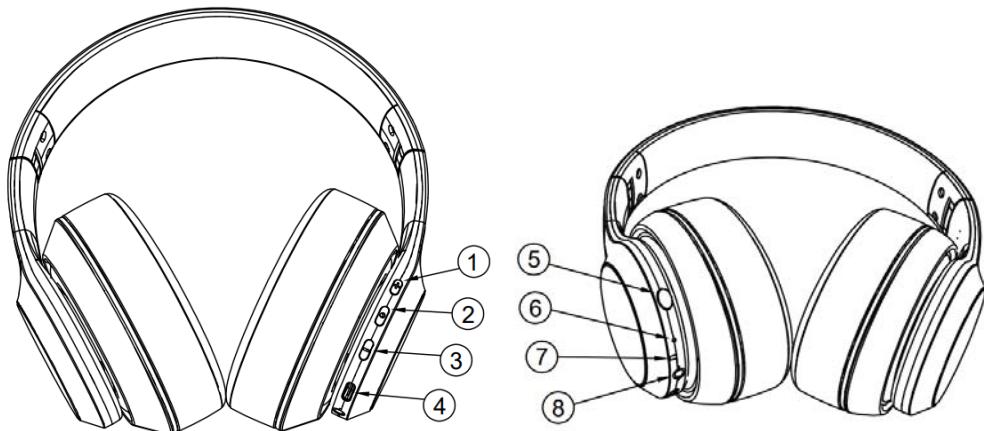

- ① Volume +
- ② Play/Pause
- ③ Volume -
- ④ Charging port (USB Type-C)
- ⑤ Power
- ⑥ Microphone
- ⑦ LED Indicator
- ⑧ AUX (3.5mm audio jack)

3. Operation guide

3.1 Wireless mode

- Charging:

Plug in the charging cable to the ④Charging port, the ⑦LED Indicator will be red when charging and will be off while full charged.

- Turn on:

Press the ⑤Power button for 3 seconds, the ⑦LED Indicator will flash red and blue alternately, with voice prompt “power on”

- Connect to device:

Turn on Bluetooth on your device then click “BH15” on the Bluetooth list. The device will connect with the headphone with voice prompt “connected” on headphone. Once the headphone has been successfully connected with your device, it will automatically reconnect to your device when you turn on the headphone and the device’s Bluetooth next time.

- Play music:

Play music on your device, Press ②Play/Pause to pause or play music. Press ①Volume+ to increase volume and ③Volume- to decrease volume. Press ①Volume+ for 1 second to skip to next track, press ③Volume- for 1 second to skip to previous track.

- Gaming mode: Press **⑤Power** twice to enter gaming mode or exist gaming mode with a corresponding voice prompt.

 Gaming mode brings powerful bass and clear footsteps.

- Phone Call:

Press **②Play/Pause** to pick up incoming call or press **②Play/Pause** for 1 second to reject incoming call. Press **①Volume+** to increase volume and **③Volume-** to decrease volume.

Press **②Play/Pause** to hang up call when the call ends.

- Turn off: Press the **⑥Power** button for 3 seconds after use, the **⑦LED Indicator** will present red light for 2 seconds then off, with voice prompt “power off”

3.2 Wired mode

- Use the AUX cable to connect the **⑧AUX** of the headphone with your device's audio jack.
- Attention:
 -  The microphone and the all buttons of the headphone can not be enabled in wired mode.
 -  If you plug in the AUX cable to the headphone in wireless mode, the headphone will be switched to wired mode automatically. If you need to return to wireless mode, please unplug the AUX cable from the headphone and turn on the headphone again.

4. Attentions

- If the headphone present voice prompt “battery low”, please charge the headphone.
- Please charge the headphone every 3 months.
- Do not use headphone with high volume for a long time.
- Keep the headphone away from liquid or fire. Do not use if the headphone is wet.
- Avoid violent bumping.
- The headphone contains battery, If you need to discard the headphone, please follow local laws or regulations.

5. Specifications

- Wireless frequency: 2.4GHz~2.483GHz
- Wireless range: 10 meters
- Speaker driver: $\phi 40$ mm dynamic / 32Ω
- Battery capacity: 400 mAh Li-polymer
- Play time: 40 hours at 80% volume
- Input: DC 5V / 0.3A
- Charging time: 1.5~2 hours
- Speaker Sensitivity: $115\text{dB}\pm3\text{dB}$ @ 1KHz

- Microphone Sensitivity: -43dB±3dB@1KHz

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.