 


User Manual

 


Wireless Earbuds

Package Includes

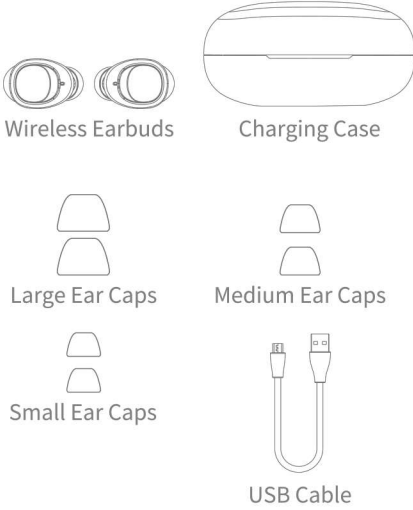

Product Introduction

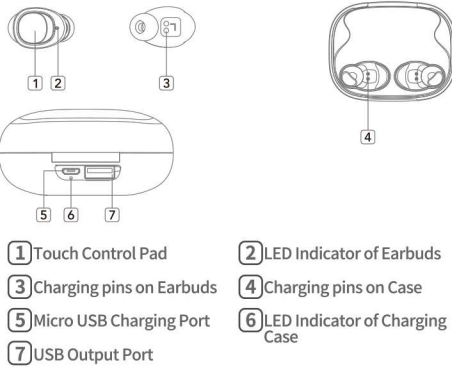


How to Wear



Quick Guide

 First use:

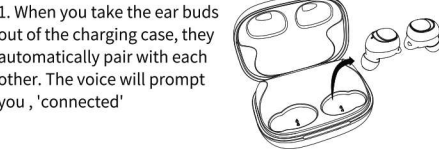

2. Enable Bluetooth on your phone or device and search for “F16-R” or “F16-L” to connect either one. The voice will prompt you “Pairing Successful” , then “Connected” will follow when pairing is successful.

After connecting either L/R, Android or Apple device will prompt a pairing request. Select ‘Pair’ , the pairing procedure will be complete.

Bluetooth pairing Request

“Headset” Would like to pair with your iPhone

Cancel

Pair

Quick Guide

Second Use

When you remove the Earbuds from the Charging Case, they will automatically connect to your phone or device. If the Earbuds do not connect automatically, you will need to click the previous connection record and click connect.

Note: If Bluetooth cannot find the Earbuds or the pairing is not successful, please put the Earbuds back in the Charging Case and reset the Earbuds. If you encounter any problems during the use of the Earbuds, resetting the Earbuds will solve it.

Resetting Step

 
1. Turn on the Bluetooth of your device and remove previous Earbuds pairing history. Then turn Bluetooth “Off” .
2. Put the Earbuds into the charging case. Quick tap the touch control pad on each Earbud 3 times until the white indicator light flashes once.
3. Turn on Bluetooth again and re-pair like the first use.

Power On

The Earbuds will automatically turn on once they have been taken out of the charging case and a voice will say “Power on”. The LED will flash white on Earbuds.

Power Off

1. Put the two Earbuds into the Charging Case and they will turn off automatically.

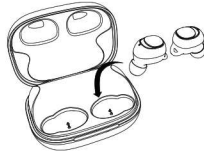


2. Turn off the Bluetooth on your phone and the Earbuds will turn off within 5 minutes.

Mono Mode

Either Right or Left Earbuds can perform as a mono wireless Earbuds. Pick up either Right or Left Earbud from the Charging Case, it will automatically power on and enter into pairing mode. Turn on your Bluetooth device, search and select “F16-L” or “F16-R” to connect.

Note: To enter Mono mode, one of the Earbuds need to remain in the Charging Case

 Control

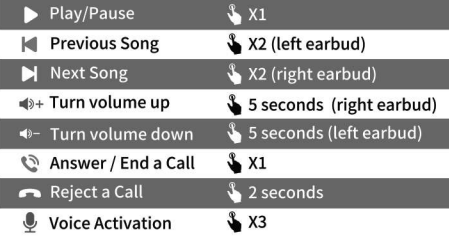

Play/Pause: Tap the Touch control pad once

Previous Song: Double-Tap the touch pad on left Earbud

Next Song: Double-Tap the touch pad on right Earbud

Turn volume up: Long-press the right earbud for 5 seconds

Turn volume down: Long-press the left earbud for 5 seconds

Answer / End a Call: Tap the Touch control pad once

Reject a Call: Press the touch pad for 2 seconds

Voice Activation: Quick tap the touch pad 3 times

How to Charge

1. Earbuds

When the Earbuds battery is low, the LED will illuminate in red and a voice will say “Battery Low”


Return the Earbuds back to the charging case, the case will charge the Earbuds automatically. The LED of the Earbuds will be illuminate in red while charging. The LED of the Earbuds will turn off once fully charged.

2. Charging Case

The charging case can be charged via Micro USB and its LED indicator will indicate the battery level status.


LED indicator of Charging Case while being Charging	Battery Percentage
Flash Once in 2 Seconds	0-25%
Flash Twice in 2 Seconds	25-50%
Flash Three Times in 2 Seconds	50-75%
Flash Four Times in 2 Seconds	75-100%

 How to Charge

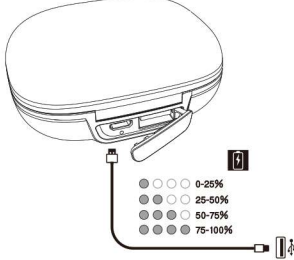

3. Charge other devices

 The charging case has a built-in 2200mAh capacity battery that can charge your phone 1-2 times.

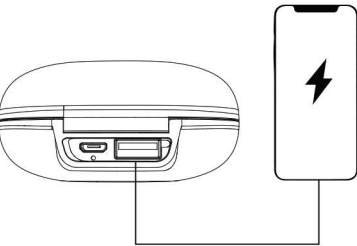

Troubleshooting

Problems	Possible Causes	Solutions
Can't turn on	Earbuds may have low battery level	Return them back to the case and charge
Earbuds don't charge or LED Indicator light does not turn on	The battery level of the charging case is too low, Or, the charging pins between Earbuds and Charging Case is not connected properly.	Charge the Charging Case for 2 hours and then return the Earbuds back to the Charging Case to charge them. Ensure the charging pins are connected.
Pairing failure	/	Follow directions to reset your earbuds
Left and Right earbuds do not synchronize	/	Follow directions to reset your earbuds
Other problems	/	Please contact this email: support@ofusho.com

Technical Specifications

Earbuds	
Wireless Version	V5.0
Chip	Qualcomm QCC 3020
Support Profile	HSP, HFP, A2DP, AVRCP
Transmission Range	33m without Obstacles
Frequency Response Range	20Hz -40kHz
Compatibility	Most Smartphones, Tablets and Bluetooth Device
Earbuds Battery	60mAh
Charging Case Battery	2200mAh
Output	5V/1A
Earbuds Working Time	6-8H
Earbuds Charging Time	1H - 1.5H
Case Charging Time	2H

Safety Tips

1. Please read this manual carefully before using the Earbuds for the first time
2. Keep the Earbuds away from children or pets to avoid accidental ingestion.
3. Don't use the Earbuds at a high volume for long periods which may cause hearing injury.
4. Don't use output larger than 5V 1A charger as it may cause battery damage.
5. Please contact technical support via email at support@ofusho.com if you have any problems with the Earbuds

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Thank you for Choosing OFUSHO

OFUSHO Wireless Earbuds