
LASER SWEEPER ROBOT

Operation Instructions

(Please read the instruction carefully before use and keep it well)

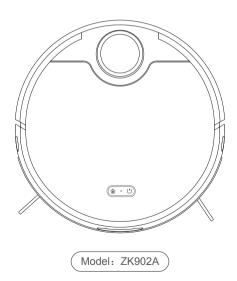

() Content

•	Machine and accessories	01
•	Product introduction ·····	02
•	Precautions before using	08
•	Quick instruction	09
•	Product maintenance ·····	11
•	Product parameters	13
•	Voice prompts and trouble-shooting	14
•	FAQ	16
•	Safety information	17

() Machine and accessories


The following product and accessories will be found after opening the package, please check carefully. (The following pictures are for your reference, and they are subject to the actual product received.)

Machine Charging stand High efficiency filter	X1 X1 X1			
Side brush	X2	Machine	Charging stand	High efficiency filter
Power adapter	X1			
Instruction	X1	N N	a A	\wedge
* Cleaning brush	X1			
* Dust box	X1			
 Water tank Mop 	X1			
 Component 	X1	Side brush	Power adapter	Instruction
 Single suction port component 	X1			
		Water tank	Mop component	Single suction port component

^{*}The accessories are already installed on the machine.

[•]The accessories are optional for the customer.

Keys on the machine

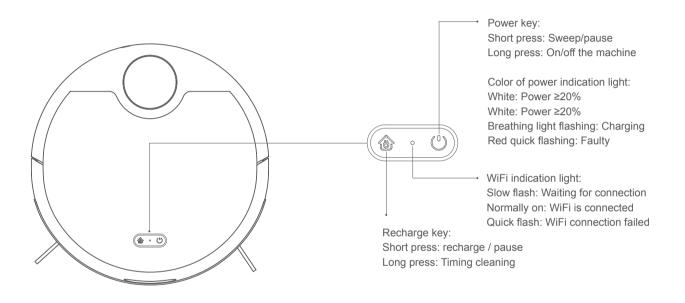


() Product introduction

Front of machine

Exhaust pot Laser radar Radar collision senso Surface lid Alignment sensor Collision buffer Collision sensor-Infrared sensor-


Rear of machine

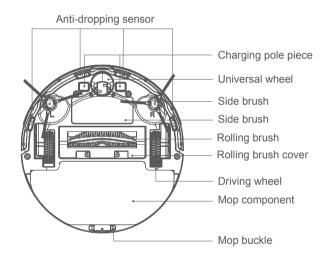

• Please clean the sensors by mop to keep them clear always.

() Product introduction

Machine Dust box

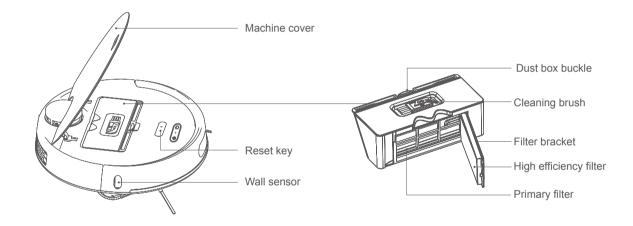


UProduct introduction and usage

How to use the dust box and HEPA filter

1 Fetch out the dust box

Attentions: Do not break off the snap lock of dust box in cast of gracture.

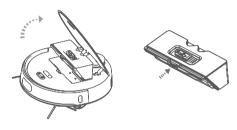

- 2. Open the lid and empty the dust.
- 3. Open the filter holder on the dust box and fetch out the HEPA filter.





4.Always clean the dust box and filter with a cleaning brush, and wash the dust box and primary filter with water.





5. Assemble the dust box and filter into the robot after completed dried.







 Please clean thr filter regularly and replace it every 6 -12 months to ensure the clean effect well.

() Product introduction

Water tank

Mop component

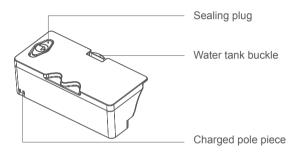

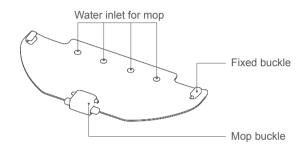

Suction port component

