


# Media Player Box

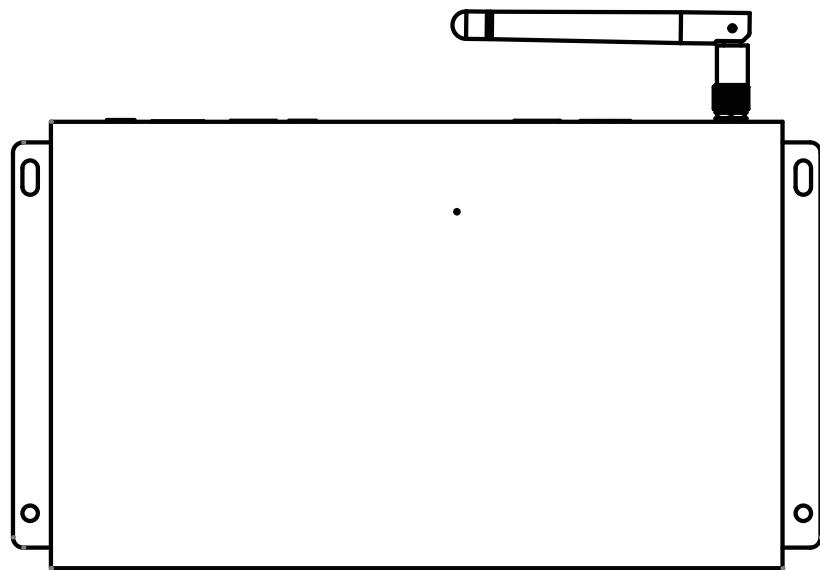

User Manual

# Contents

FCC Warning.....	2
FCC.....	2
Package Contents.....	3
Features.....	4
Exterior Components.....	5
Remote control.....	6
Installation instructions.....	7
Main Menu.....	8
Power On/ Off.....	8
Access to The Application.....	9
Wireless Internet.....	9
Install APK.....	10
Uninstall APK.....	11
Date Transmission.....	12
Factory Reset.....	13
Specifications.....	13

## FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


## FCC

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.




# Package Contents


Please make sure all of the following are present when you unpack your  
MEDIA PLAYER BOX

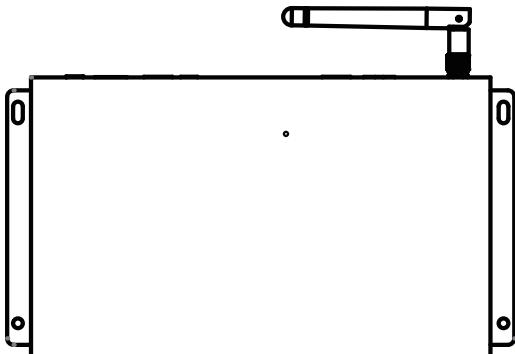


MEDIA PLAYER BOX

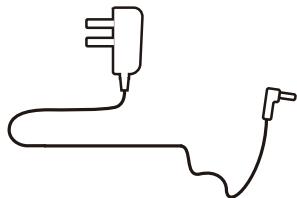

1x  
Power adapter

 

1x  
Remote control

 

5x  
With wall plug






5x  
M4x3.0 (Silver)

## Features


- Dual-core A72+quad-core A53,1.8G,RK3399
- RAM 2GB
- Internal memory 16GB
- Android 7.1
- Wi-Fi 802.11b/g/n
- Bluetooth 4.0
- Card slot/Micro USB OTG/USB 3.0/USB host 2.0 X 2
- HDMI output,max 3840x2160
- RJ45 ethernet
- 3.5mm earphone
- Wall mounting
- Adapter,12V/1A

# Exterior Components

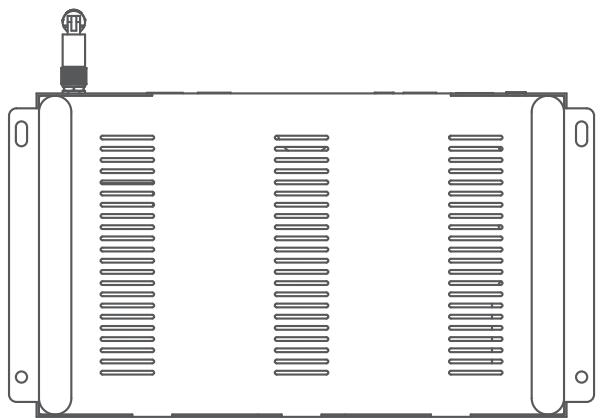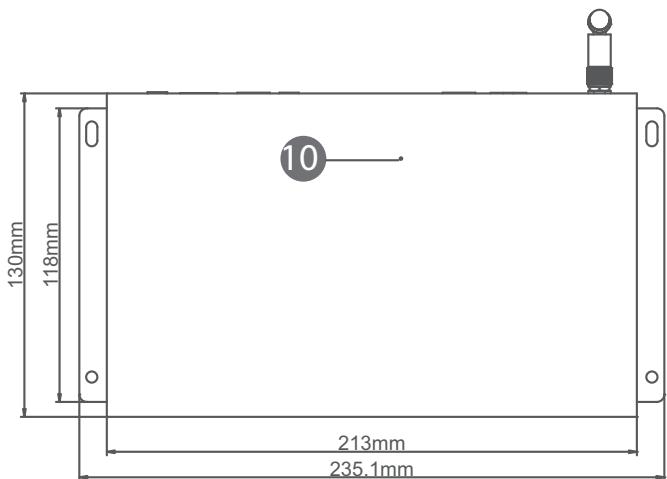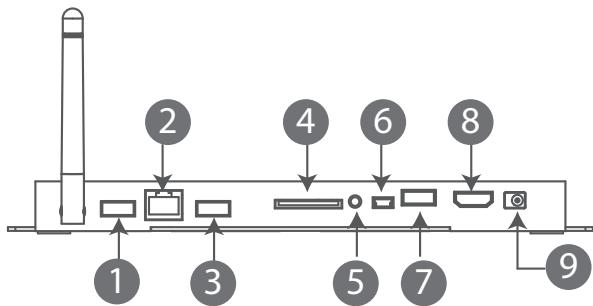


No	Function	No	Function
1	USB 2.0 host	7	USB 3.0 host
2	LAN	8	HDMI output
3	Serial port	9	DC in power supply port
4	SD card	10	Recovery key
5	3.5mm audio jack	11	Infrared Sensor
6	Mimi USB OTG	12	Light sensor

# Remote control

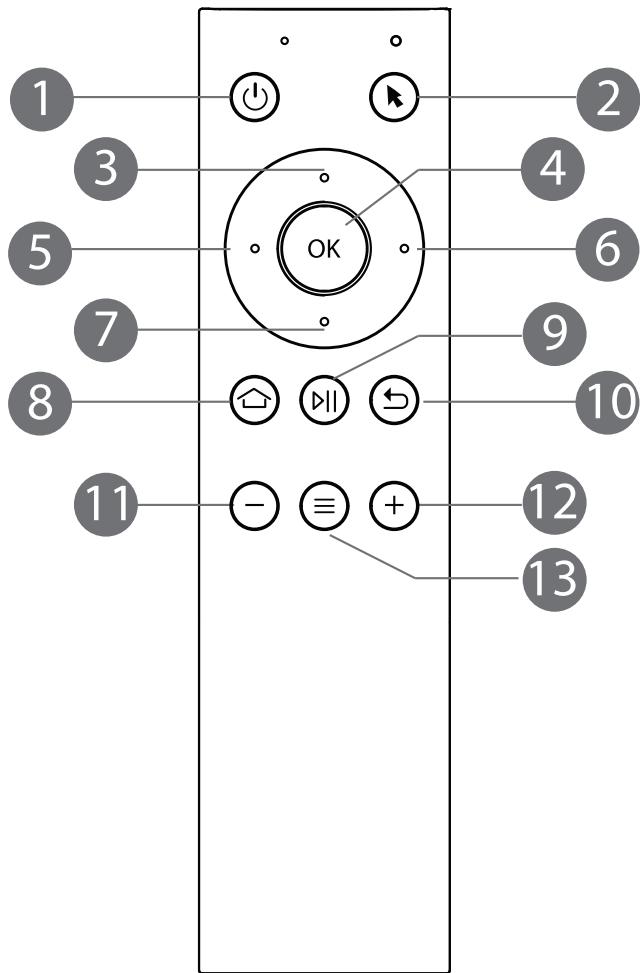


No	Function	No	Function
1	On / Off	8	Home
2	Settings	9	Play/pause
3	Up	10	Back
4	Down	11	Volume Down
5	Left	12	Volume Up
6	Right	13	TAB
7	Enter/ Play / Pause		

# Installation instructions

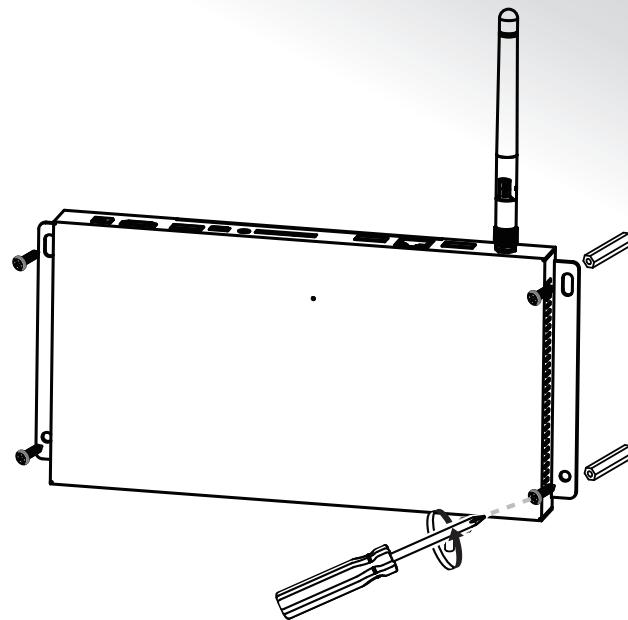


1. Install the wall mount kit on wall and screw in

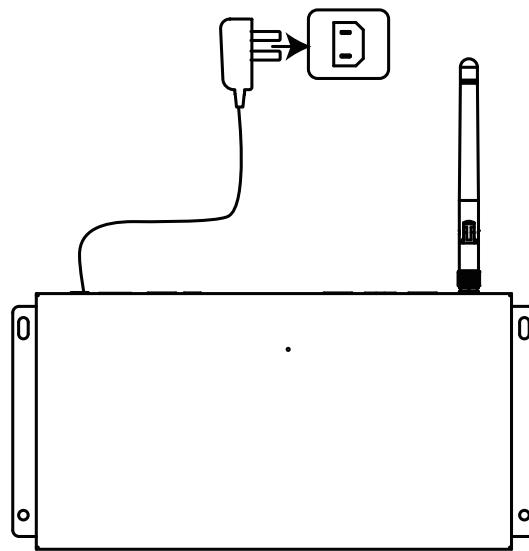

2. Put the power charge into socket and the device will start up.


# Main Menu

- 1)Insert the power lead into the DC socket, and then insert the other end into the power socket.
- 2)Turn on the product by holding the power button for 3 seconds.
- 3)Screen will show the starting logo.
- 4)Wait for about 30 seconds and enter into main interface.

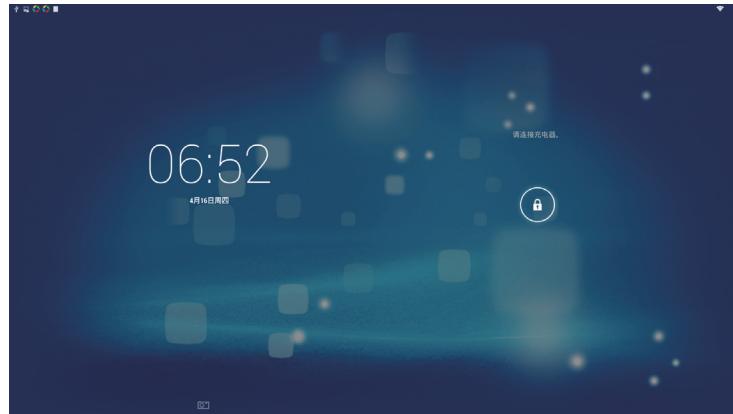


## Power On/ Off

- 1)Power on: turn on the device by holding the power button for 3 seconds when the product power off.
- 2)Power off: holding the power button for 3 seconds and click ok to power off when the product at working status.
- 3)Short press power button for sleep or awake the product when the product standby.

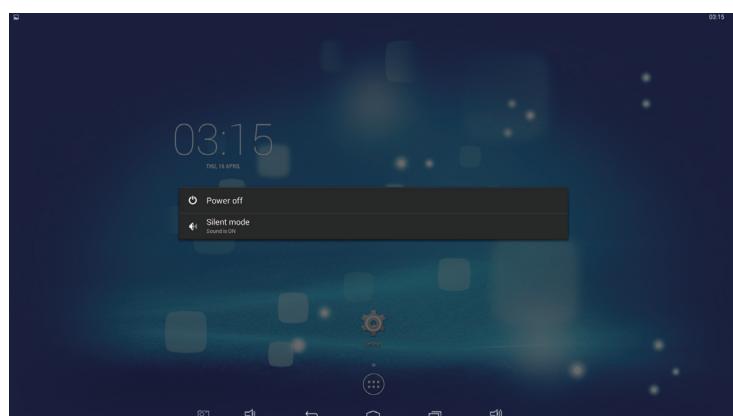

# Access to The Application

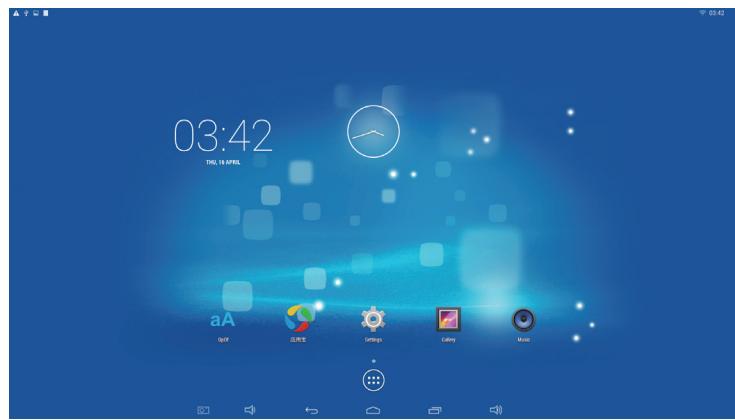

- 1)In the main menu, click  icon to go to APPS menu screen.
- 2)Slide the screen leftward/rightward fast, switch to the other menu screen.
- 3)Click the apps icon to enter into apps click the "RETURN" icon, return to previous page, click the "HOME" icon return to the main menu.



## Wireless Internet


- 1)Enter into the settings and turn on the Wi-Fi, connect to the available networks.
- 2)Enter into the APPS and click the 'browser', then you will get into the google homepage.
- 3)You can input the website on the top that you like, or you can search the interesting news and videos by the google search.

# Install APK

- 1) Copy the file of APK format to your device or SD card.
- 2) Click the  that in APPS, then you will enter into the 'APK Installer', select 'install', as the following picture:




- 3) Click the APK which you want to install, as the following pictures:

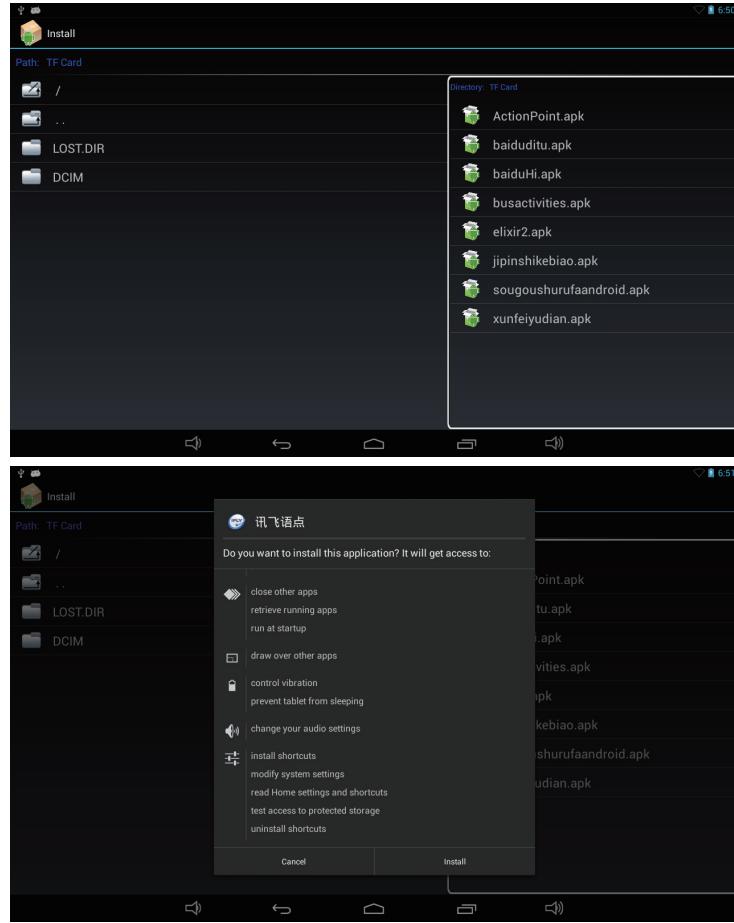


After installing the APK, you can click the APK icon in the apps to enjoy the application.

# Uninstall APK

1) Click the 'settings' in the APPS, enter into 'settings''APPS''DOWNLOADED', select which application would you want to uninstall, as the following picture:

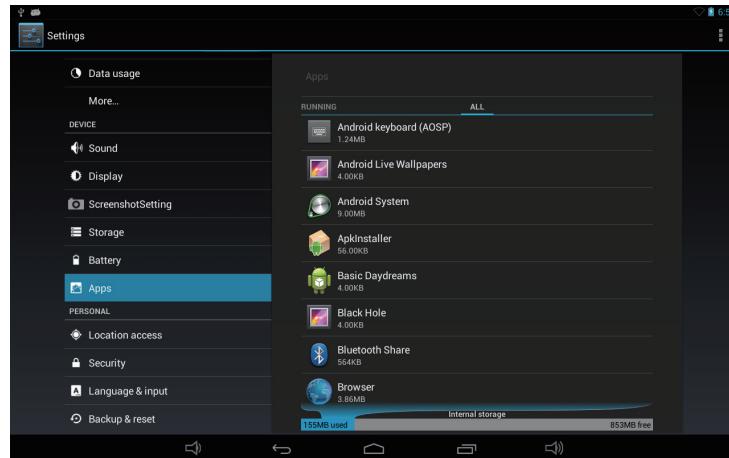


2) Select and click the Uninstall button to uninstall this application, as the following picture:

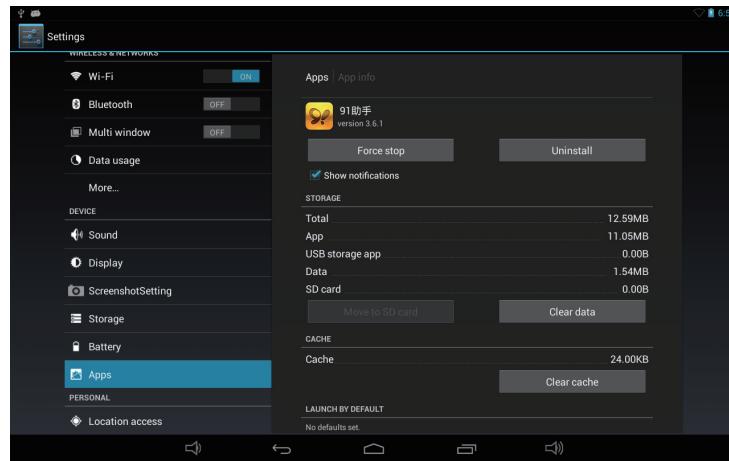


# Date Transmission

Connecting PC and device by using USB cable, USB icon  will be appeared on the upper left side of status bar, it refers to USB has been connected. As follows:

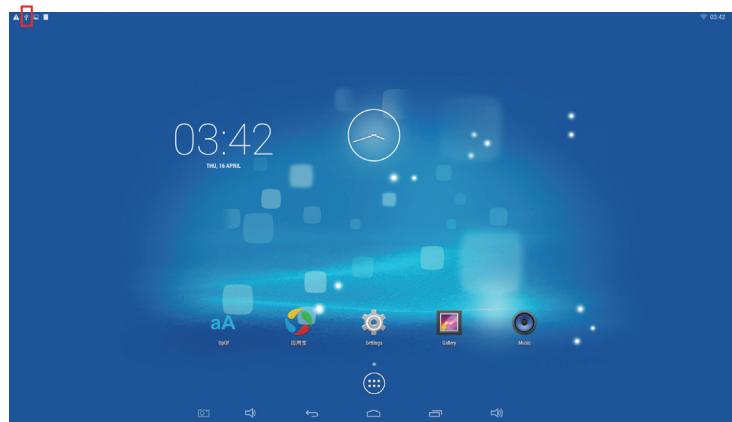

When the operation menu appeared, click “USB connected”:

Click “Turn on USB storage” on prompted window:

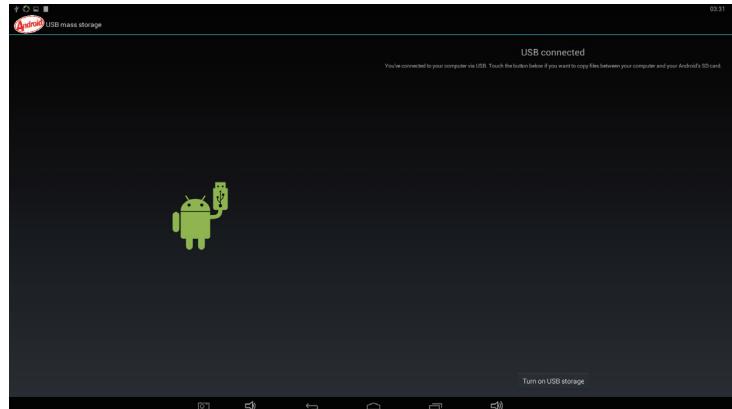


At this time, you can find device storage card and SD card (if the card has been plugged in) in my computer list.

After data transmission, click “Turn off USB storage”, and then it will quit the data transmission state.


# Factory Reset

If your device has been contracted the virus, or worked unexpectedly by installing third-party applications, then you can erase all data from your device via reset tablet.

Operation: click 'Settings' 'Backup & reset' 'factory data reset', then click the 'reset tablet' and 'erase everything', as the following picture:

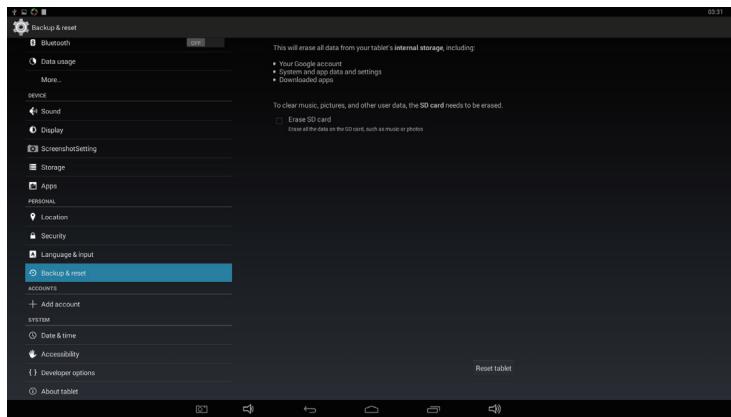

## Specifications:

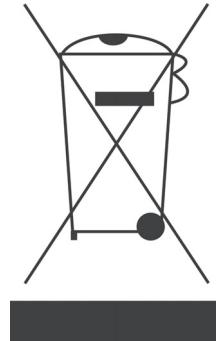

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed of at the end of its life separately from your household waste.

There are separate collection systems for recycling in your country. For more information, please contact the local authority or your retailer where you purchased the product.