 


5 INCH 1080P FULL HD Baby Monitor

 
User Manual

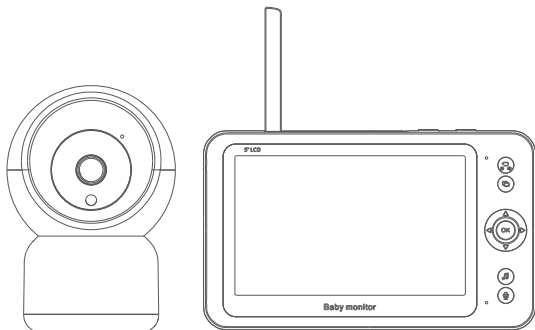


1.What's Included:




*1

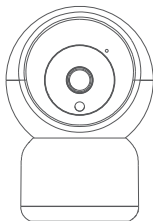


*1

 


*1

 

*2

 

*1

 

*1



*1

1.1: Camera*1

1.2: LCD Monitor*1

1.3: Mounting Bracket*1

1.4: Power Adaptor*2

 
 
1.5: Type-C Cable*1

1.6: Micro USB Cable*1

1.7: Screws*1

1.8: User Manual*1

2.Key and Interface Introduction

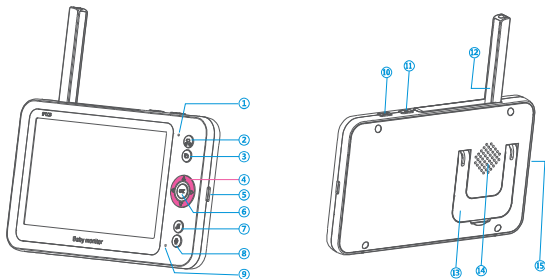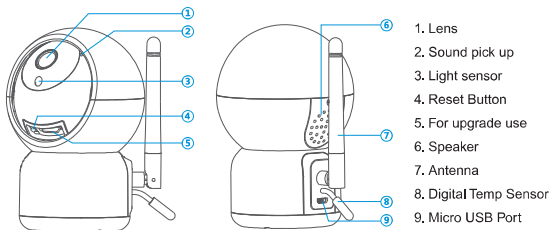

- ① Indicator Led : When the monitor is working the Led shows green, When Charging the led is red after fully charged it will turn to green.
- ② Back Button: ①In Monitoring Mode press the button to enter volume and brightness settings. (Ref to Pic 1) ②In Main Menu press the button to back to Previous menu.
- ③ Camera Switch Button: Press the button to switch camera from one to the next .
- ④ Direction Button: ①In Monitoring Mode the button could control the Pan and Tilt of the camera. ②In main menu the button could select direction.
- ⑤ Type-C Charging Port.
- ⑥ OK button: Press the to enter menu and confirm on settings .
- ⑦ Lullaby Button: Press to play the lullabies and press again to pause then press again to play the next lullaby.

- ⑧ Talk Button: Press to talk while live audio off, press again to turn on live audio while talk function stop.
- ⑨ Mic
- ⑩ Sound Detection (VOX) Button: Press to open sound detection (On the display will show ) Press again to turn off sound detection(On the display  will disappear)
- ⑪ Power On/Off Button: Long press to turn on/off the unit ,short press to enter standby mode.
- ⑫ External Antenna: Put the antenna up the signal will reach the best state.
- ⑬ Bracket
- ⑭ Speaker
- ⑮ TF Card Port

Please insert the TF card when the monitor is off and it will remind to format the TF card when the first time . Press OK to format then the monitor will enter auto record mode.



Pic 1

3. Status Introduction



 
 
- ① Signal
- ② Battery
- ③ Temperature
- ④ Time
- ⑤ The camera now working
- ⑥ Sound
- ⑦ Speaker (when show the icon you can talk to the camera)
- ⑧ Sound Alarm (when show this icon means sound alarm is open)

4. Connect the camera to the Monitor

4.1: Power on the camera about 3-5 s the camera will say “power on system starting up” and start to work.

4.2: Long Press the power on/off button to turn on the unit. (Tips: Kindly make sure the monitor is fully charged before connection when use for the first time)

4.3: After camera and monitor ready wait about 10S the picture will show on the monitor then could start to use the baby monitor .

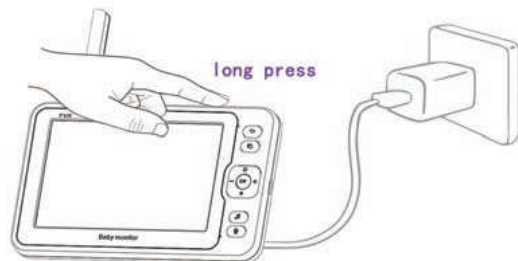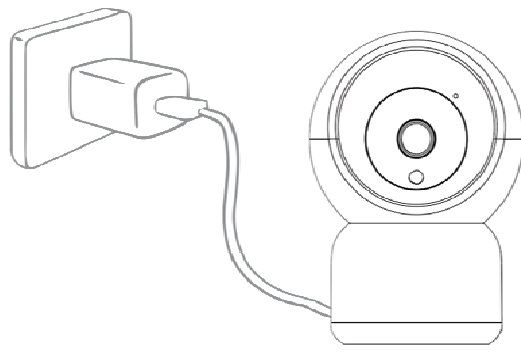



5. Add new camera

5.1: Enter the main menu and choose camera ()→choose channel→Double press OK button to start matching →Configuring (Pic 2)→Connected (Pic 3)


5.2: If can't add the camera successfully please check if the camera is powered . If camera already been powered then please reset the camera and add the camera again according to step 4.1.

  5.3: If need to connect 4 cameras then add from CH1 to CH4. Choose the channel when add cameras to the related channel.Move to the channel you want to view and press OK to switch the channel view. In preview left corner will show the channel now displaying.()

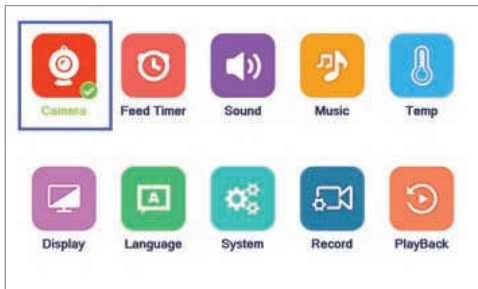

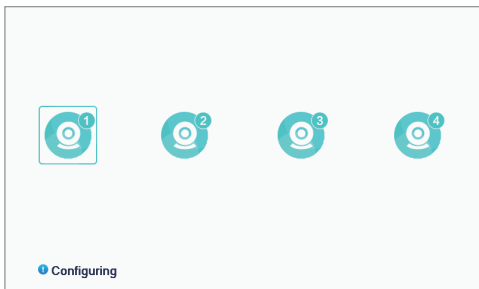

Pic 2

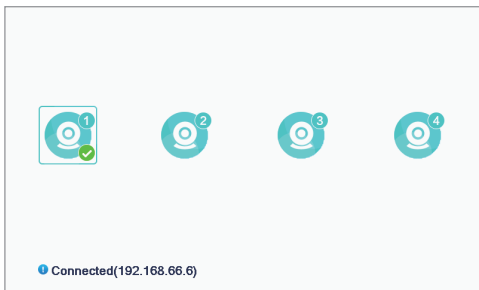 



Pic 3

6.Feed Timer Setting

6.1: Enter the menu to set up Feed timer()---up and down to select time left and right choose single time/ recycle/turn on or off the clock.

6.2: After set the feed timer you can choose single time or recycle.

  6.3: If you don't need feed timer function please close the clock.

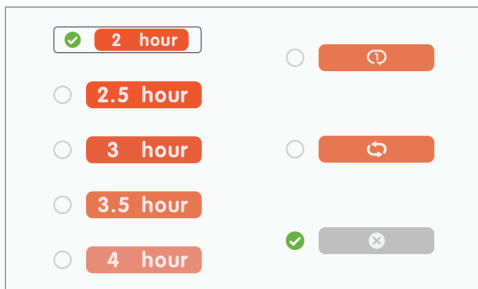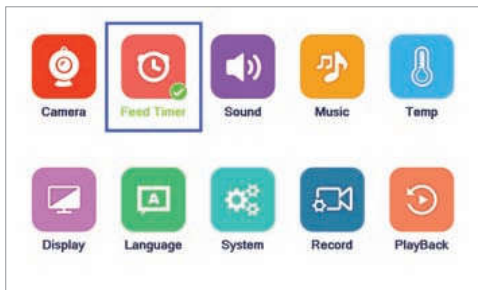


7. Sound Detection

7.1: Press OK button to enter the main menu and choose Sound detection()
There are low/medium/high/optional.

7.2: Press VOX button on the top will turn on press again to turn off.

7.3: When the camera detected the DB range over the settings the LCD screen will

 lighten up and show the  icon in the middle of the screen(Pic 4) .There will be an alarm sound like di di about 30S, if the camera keep detected sound over settings it will send alarm sound continuously . Press any button on the monitor to stop the sound alarm.

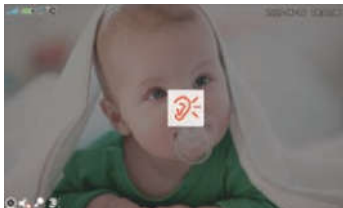



Pic 4

8.Play the lullaby

8.1: Enter the main menu and choose the lullaby icon ()could select No.1-No.6 lullabies .During the play the lullaby the information will show on the left corner of the screen.

8.2: Name of the lullaby:

  - ① Castle in the Sky
- ② Grave of the Fireflies
- ③ Passive
- ④ Spirited Away
- ⑤ Street of sea
- ⑥ The Love That Transcends Time

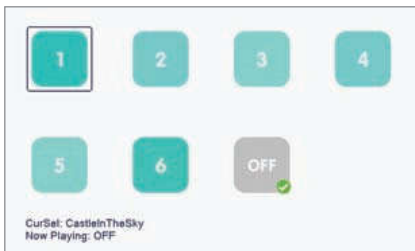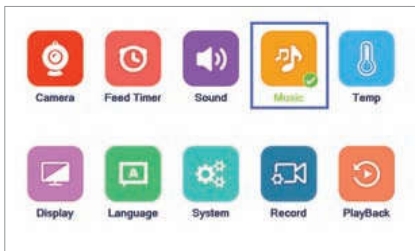


9. Temperature Detection Alarm

9.1: Temperature alarm setting could be (°C) or (°F) according to actual usage.

9.2: The default temperature is 18-30°C once the temperature lower or higher than the range will send alarm.

9.3: When the temperature alarm been triggered the LCD monitor will turn on and

 show the icon() and send di di alarm sound. The sound(Pic 5). The sound will last for 30s. If the temperature over the range continuously the monitor will keep send alarm sound , press any button to stop

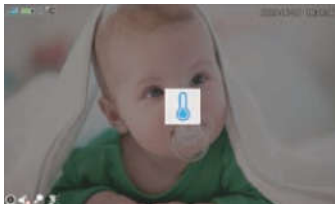



Pic 5

10. Display Settings

10.1: The display settings have Dormant/ LUMI

10.2: Dormant mode default 30S() / 60S() / 90S() / ALWAYS ON() could adjust according to actual usage.

  10.3: Brightness value 20() / 50() / 90() / Customize(). After LCD off live audio off two way audio still works. When LCD on then live audio on .

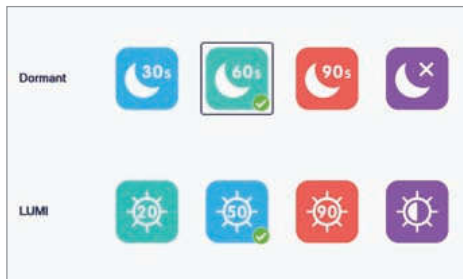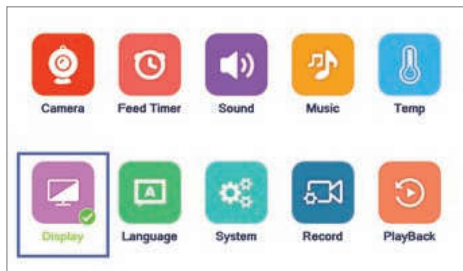


11. Language Settings

11.1: The device support 8 language

ENGLISH//JAPANESE/CHINESE/PORTUGUESE/ITALIAN/FRENCH/SPANISH/
GERMANY default is ENGLISH


11.2: Could adjust the language according to your request.After confirm the language please power off the monitor and restart .When connect the camera it will change to the language same as the monitor .

 Tips: When changing the language please make sure the camera is powered on .

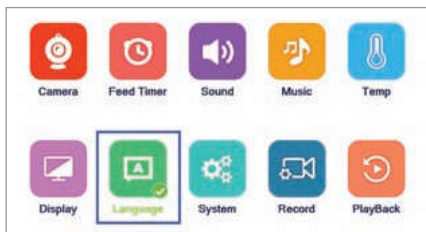

12. System Settings


 
12.1: Time & Date ()setting: System Time/Date Format/Separator/Time Format could set according to actual usage

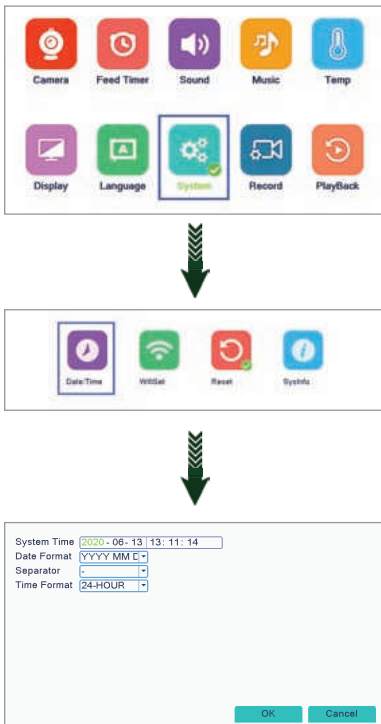

The diagram illustrates the steps to access the System Time & Date settings:

- From the main settings menu, select the **System** icon (indicated by a blue border and a green checkmark).
- In the subsequent menu, select the **Date/Time** icon (indicated by a blue border).
- The settings screen displays the following configuration options:
 - System Time:
 - Date Format:
 - Separator:
 - Time Format:
- At the bottom right, there are **OK** and **Cancel** buttons.

  12.2: Wireless settings(): Region and channel have been set please do not change on that.

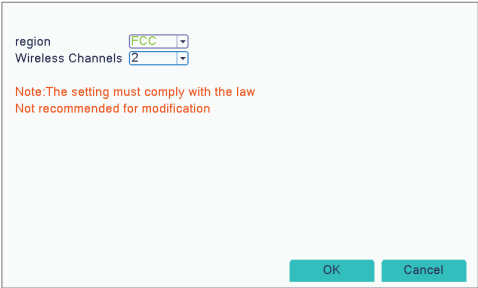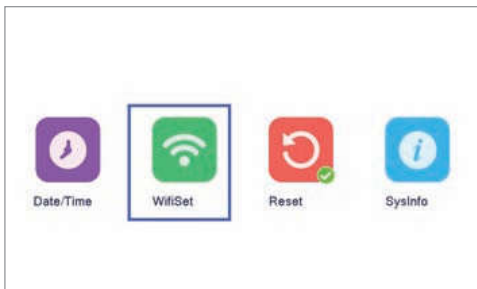

The image shows a settings screen with two dropdown menus. The first is labeled 'region' and has 'FCC' selected. The second is labeled 'Wireless Channels' and has '2' selected. Below the menus is a note in orange text: 'Note: The setting must comply with the law' and 'Not recommended for modification'. At the bottom right are two buttons: 'OK' and 'Cancel'.

 
 
region

Wireless Channels

Note: The setting must comply with the law
Not recommended for modification


OK Cancel

12.3: Back to factory settings() . Not suggest to use normally please contact the seller for assistant if have to.

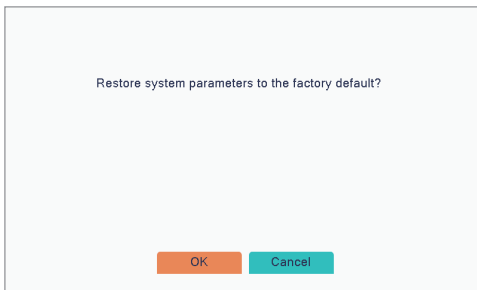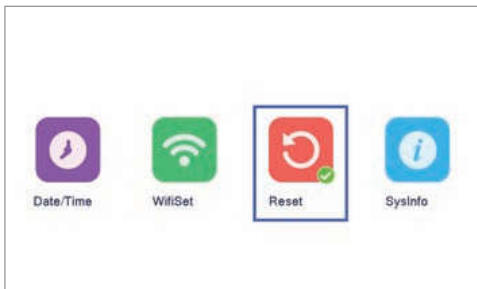

12.4: Version Information()

 The version information subject to the actual situation

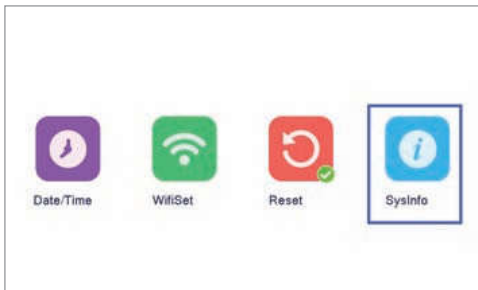

```
System      XM530_BMS50X20-WVGA_16M_20200612
Build Date  2020-06-12 10:50:12
MAC         00-01-02-03-04-00
Serial Number 697af20a2af6a047
```

 
 
13. Video Recording

13.1: Enter the main menu and select the record icon () The record file can choose 0.5Hr/1Hr/2Hr (Means how long to pack to one file)

13.2: If don't need to record could choose OFF.

13.3: Please adjust the date and time to the right local one before record.



13.4: Please insert the TF card when the monitor is off and it will remind to format the TF card when the first time . Press OK to format then the monitor will enter auto record mode.

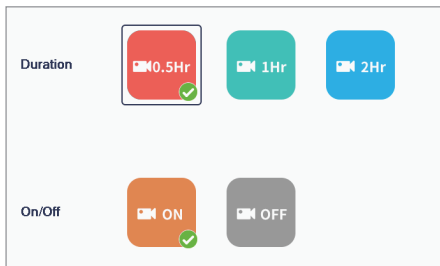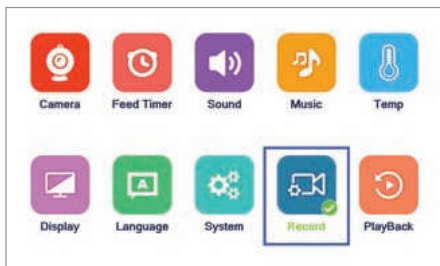

14.Video Playback

14.1: Enter the menu and select the playback icon ()and click  to pick up the time of the video you want to play.

  14.2: The camera resolution is 1920*1080 while due to limited system resources the playback resolution is 800*480.


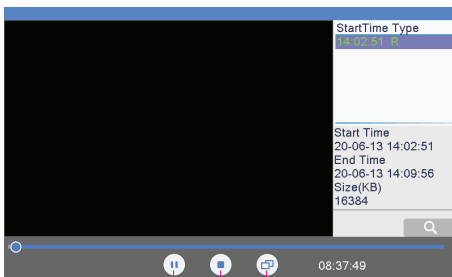
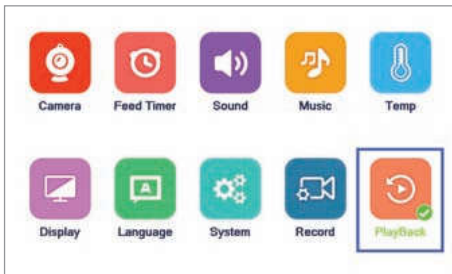


Play

Pause

Full Screen

   15. Installation Steps

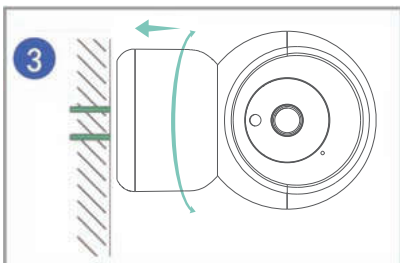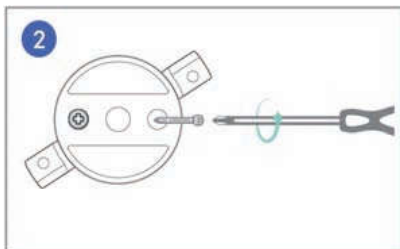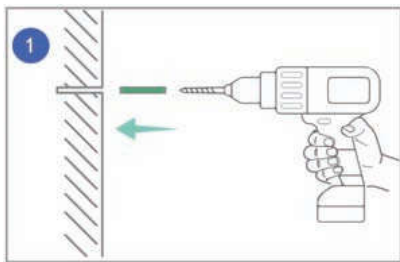

Questions and Answers:

Q: The LCD monitor didn't show the camera ?

A: ❶ Please check if the camera is powered on .

❷ If camera is powered on please reset the camera to factory settings and add the camera according to steps 4.1.

Q: There is annoying sound when use the talk function in near distance?

A: When the camera and monitor is within 2meter distance there might be some noise which is a normal Physical phenomena. You can adjust the monitor volume down or keep the camera and monitor from longer distance.

Q:The monitor battery drains fast?

A: ❶ If you don't open the Dormant mode and the monitor will works all the time so the battery will run faster. Suggest to use Dormant mode with 30S or 60S to save battery.

❷ The brightness of the monitor maybe too much high could lower down the brightness to expand the standby time.

Q:The transfer distance between the camera and monitor not far?

A: In an open environment the camera and monitor could transfer as far as 300meters .While for indoor use in case of interference the transfer distance will be influenced like too many walls and wireless electronic devices .

After-sales instructions:

1. Please refer to the actual product all the instructions are for reference only.
2. Product may updates in future without notice .
3. The manual contains the introduction of the basic functions of the product please operate by yourself.
4. If there is any problem when using the product please contact the supplier in time.
5. We have tried our best to ensure the completeness and accuracy of the content in the manual, but some data may still be stored with the actual products. In case of deviation, if you have any questions or disputes, please refer to the company's final explanation.

FCC Caution.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*RF warning for Baby Camera:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

*RF warning for Baby Monitor :

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.