


BATTERY RECHARGABLE




USB or microSD or MMC Card Operation

- Insert a USB or microSD or MMC card memory device into the corresponding slot to play mp3 files automatically.
- Press Play/Pause Button to pause or play the music.
- During music playing, press Previous or Next Button to play the previous or next song.

TROUBLESHOOTING:

Problem	Solution
1. Unable to turn on the speaker	Make sure the battery is charged. Turn the On/Off/Volume Dial clockwise until it clicks to turn on the unit. The Power Button on the remote control will not work if the unit is not turned on using the On/Off/Volume Dial.
2. Unable to connect to Bluetooth-enabled device	Make sure that the device is in Bluetooth Mode, and is within 10 meters from the speaker. Ensure that neither the speaker nor the device is connected via Bluetooth to any other device.
3. No sound heard	Ensure that the correct mode has been selected. The volume is at its lowest, try increasing the volume.
4. The speaker has no response	Please power off and try again.
5. Remote control is not working	Turn the On/Off/Volume Dial clockwise until it clicks to turn on the unit. The Power Button on the remote control will not work if the unit is not turned on using the On/Off/Volume Dial. Ensure that the remote control sensor is not blocked by anything. Try changing the batteries.



Model: AUD-X712

Instruction Manual


3

PARTY EVERYWHERE!

210mm

142mm

IMPORTANT SAFETY INSTRUCTIONS



**Warning:** To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not dismantle. Refer all servicing to qualified service personnel.

1. Please read all of the instructions carefully and retain for future reference.

2. When using electrical appliances, basic safety precautions should always be followed.

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

4. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.

5. Any repairs must be done by qualified service personnel. There are no user-serviceable parts inside. Do not attempt to repair by yourself.

6. Keep the unit away from sharp edges that could cause damage.

7. Keep the unit free from dust and away from heat sources, direct sunlight, humidity, water or other liquids.

8. Do not immerse the unit in water or other liquids.

9. Do not operate the unit if it has been exposed to water, moisture or any other liquid in order to prevent electric shock, explosion and/or injury to yourself and damage to the unit.

10. Do not use the unit for anything other than its intended use.


11. Do not store the unit in direct sunlight or in high humidity conditions.

12. Do not insert foreign objects into any opening on the unit.

13. Do not play music at excessive volume levels as this can cause hearing loss or damage the unit.


14. Keep the unit away from flammable materials.

Follow all instructions and take notice of all warnings to reduce the risk of fire or fire or electric shock. This appliance is intended for household use only.




CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN!




CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that the should read and adhere to.

Battery Instructions

1. Rechargeable batteries should only be charged under adult supervision.

2. Do not throw in fire, crush, puncture, dismantle or otherwise damage the batteries.

3. Do not expose batteries to heat or fire as they may explode.

4. Do not dispose of batteries in your household waste. Contact your local council for information on disposal or recycling.

IN THE BOX

Upon opening the package, please check for the following items:

1 x Karaoke Speaker

1 x Remote Control

1 x Cable or Adapter for charging

1 x Instruction Manual

1 x Wired MIC

PRODUCT OVERVIEW

Control Panel

1. Volume Dial or Button

• Rotate the dial left or right to adjust volume. Or press to adjust the Volume.

2. Input Button

• Press repeatedly to switch between USB or microSD or MMC card, AUX, BT and FM modes.

3. USB Input

• Connect your USB devices to this slot to play music with MP3-format on USB mode.

4. Aux Input

• 3.5mm jack connector for input from mobile phone, tablet, PC etc.

5. Microphone Input

• 6.3mm(1/4") jack for connecting microphone.

6. Play/Pause/scan/LED:

• Press to pause playback of a music track. Press again to resume playback of a music track. / To program radio stations, press the scan button when the speaker is on radio mode. The speaker will then scan and save the available radio stations into pre-set memory positions. / Press above 3 seconds for all lights to be on or off.

7. Previous Button:

• Press to play the previous music track or previous radio station.

8. Next Button

• Press to play the next music track or next radio station.

Remote Control

The remote control requires 1 x button battery (included). Please ensure correct polarities when replacing battery. **IMPORTANT:** The remote control buttons will be active only if the unit is turned on using the On/Off/Volume Dial.

1. Power Button:

Press to turn on the unit or switch to standby.

2. Mode Button:

Press repeatedly to switch between USB, AUX, BT and FM radio modes.

3. Mute Button:

Press to mute/unmute sound.

4. Next Button:

Press to play the next music track or next radio station.

5. Previous Button:

Press to play the previous music track or previous radio station.

6. Play/Pause Button:

Press to pause playback of a music track. Press again to resume playback.

7. Volume – Button:

Press to decrease volume.

8. Volume + Button:

Press to increase volume.

9. Equaliser Button:

Press repeatedly to switch between the different equaliser modes.

10. LED Button:

Press for all lights to be on or off.

11. Scan Button:

In FM mode, press to start autoscans. The available FM channels will be saved to preset memory positions.

12. Number Buttons:

Use to input track number in USB mode/Use to input preset channel positions in FM mode.

OPERATION INSTRUCTIONS

Bluetooth Operation

• Place the speaker within 10 metres of the Bluetooth enabled device.

• Press the input button on control panel of the speaker or on the remote to choose the bluetooth mode on control panel of the speaker or on the remote.

• Enable Bluetooth function on your Bluetooth enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices.

• Now you can play music from the Bluetooth device on the speaker.

Auxiliary Line-in (AUX) Operation

• Use a 3.5mm auxiliary audio cable to connect your external device's (e.g. mp3 player) 'Line Out' port to the Aux input port on the speaker.

• Press Mode Button to switch to AUX mode.

• Turn on your external device and start playback.

FM Radio Operation

• Press Mode Button to switch to FM mode

• Press the Play/Pause/Scan Button to start auto scan of available channels. The available FM channels will be saved to preset memory positions.

• Press the Play/Pause/Scan Button again to pause autoscans.

• Once the channels have been stored, press the Previous or Next Button to select the previous or next channel.

• If you know the channel position, you can also enter it directly using the remote control number buttons.

1

2

## FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.