
BLUETOOTH CONNECTION DESCRIPTION

Turn on the power, switch the input to bluetooth, and the display will display "BLUE" and hear the sound. Open the bluetooth device to connect and turn on the bluetooth switch and see "AUD-X770" connect to him. there will be a sound prompt after the connection is successful.

Under the Bluetooth status of the same model, the two devices can simultaneously open the Bluetooth mode interconnection. As soon as one of them switches to the other input or turns off, it will automatically disconnect the Bluetooth interconnect.

UNPACKING ARTICLE

1. AUD-X770 host.....1 PCS.
2. Power cord.....1PCS.
3. Remote control.....1PCS.
4. Audio line.....1PCS.
5. Microphone.....1PCS.

PARAMETER DESCRIPTION

1. Output power.....25W.
2. Battery.....3.7C3600mAh.
3. Input sensitivity.....450±50MV.
4. Signal to noise ratio.....75dB.
5. Input voltageDC 5V.

Matters needing attention

- 1- Read these instructions thoroughly before using this item.
- 2- Keep these instructions for future reference.
- 3- Heed all warnings.
- 4- Follow all instructions.
- 5- WARNING: To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids.
- 6- Clean only with a dry cloth.
- 7- Do not store or operate this product near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- 8- Unplug the unit during lightning storms or when unused for long periods of time.
- 9- When wiring this unit and all other equipment used in connection to this unit make sure that all of your equipment is turned OFF.
- 10- Before placing, installing, rigging, or suspending any product, inspect all hardware, suspension, cabinets, transducers, brackets and associated equipment for damage. Any missing, corroded, or non-load rated component could significantly reduce the strength of the installation, placement or array. Any such condition severely reduces the safety of the installation and should be immediately corrected. Use only hardware which is rated for the loading conditions of the installation and any possible short-term, unexpected overloading. Never exceed the rating of the hardware or equipment.
- 11- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been .


Instruction

SPEAKER




BEFORE USING PLEASE READ THIS MANUAL CAREFULLY

Rear panel description

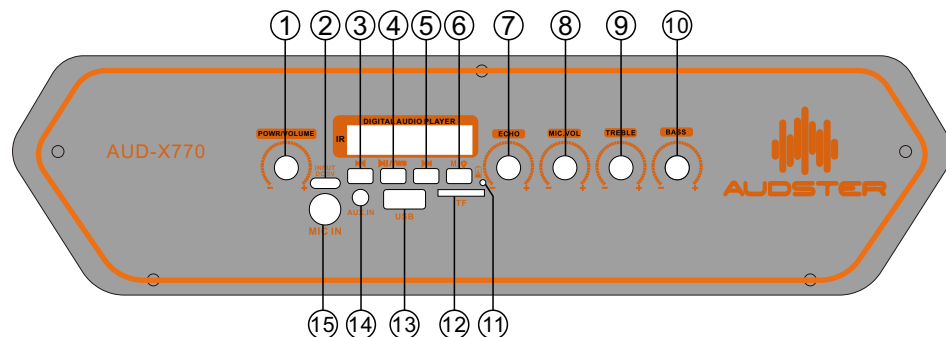

1. Power switch
Master volume adjustment
2. DC 5V input
3. Previous song
4. PLAY/PAUSE/TWS
5. NEXT song
6. Mode selection
LED Model
7. MIC ECHO
8. MIC volume
9. TREBLE
10. BASS
11. Charging indicator
12. TF input jack
13. USB input jack
14. LINE input
15. Wired Mic. input jack

REMOTE CONTROL DESCRIPTION

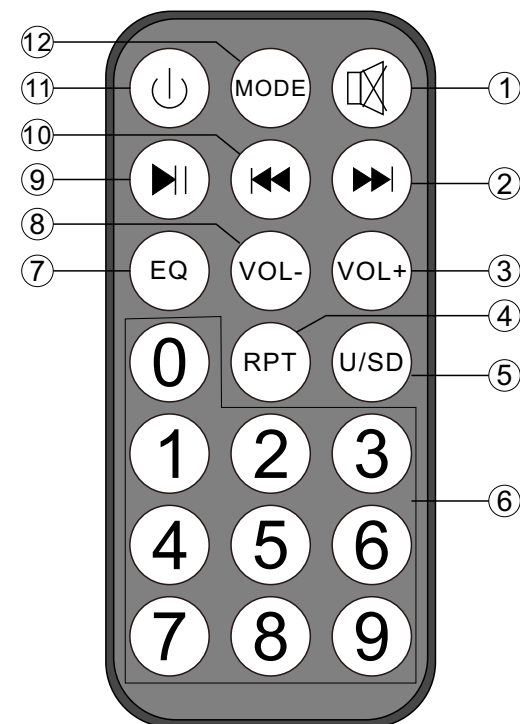

- | | |
|------------------|--------------------|
| 1. Mute on/off | 7. Equalization |
| 2. Next song | 8. Volume- |
| 3. Volume+ | 9. Pause/Play |
| 4. Repeat | 10. Previous song |
| 5. USB/SD switch | 11. Power on/off |
| 6. Program | 12. Mode selection |

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.