

S0 Instruction Manual

directory


S0 Instruction Manual	1
1. Product schematic diagram.....	2
2. Screen.....	3
2.1 Screen display.....	3
2.2 Device indicator status	3
2.3 Turn on the device.....	4
3. APP	4
3.1 Download the APP	4
3.2 Register an account.....	4
3.3 Login	5
3.4 Add equipment	5
3.5 Wifi manual network distribution.....	8
3.6 Parameter Settings.....	11

1. Product schematic



2. screen

2.1 Screen display

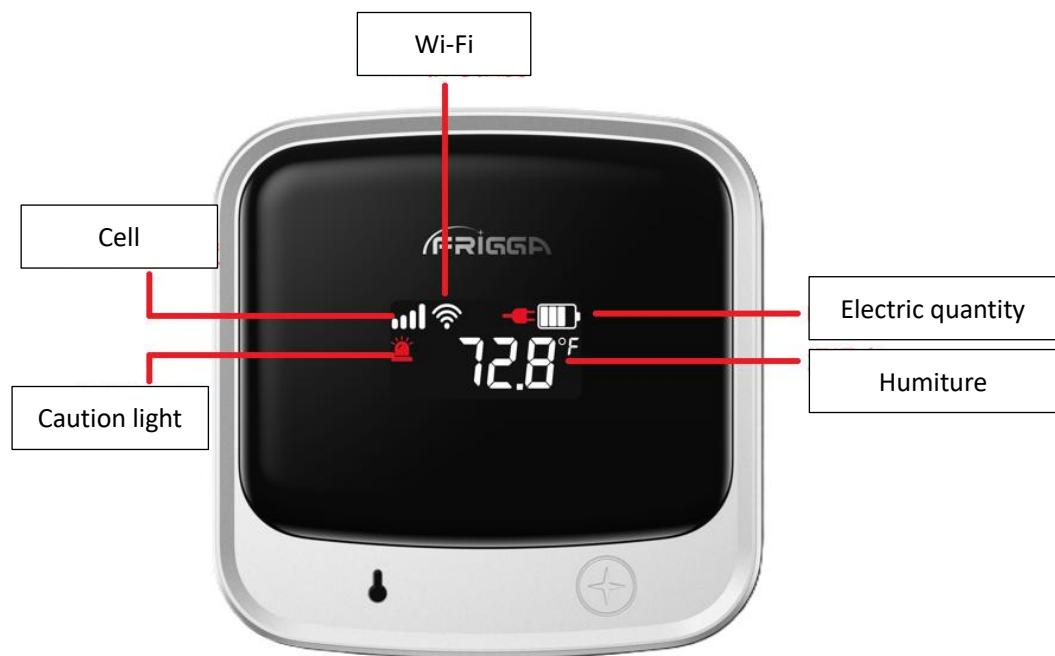

2.2 Device indicator status

Device status	Indicator status
The device is charging	The green light is always on
Fully charged	The blue light is always on
Wi-Fi network	The blue light flashes
Over threshold	The red light 30S flashes once for 10 minutes
Internet connection failed	The red light flashes 5 times

2.3 Turn on the device

Long press 5S to turn on, and there will be a voice prompt Welcome to Frigga Smart life when it is turned on, and enter the automatic network distribution mode


3. APP

3.1 Download the APP

1. Scan the QR code to download (to be added after launch)
2. For iPhone, search for Frigga SmartLife download in the App Store


3.2 Register an account

Select Sign Up and follow the prompts to register an account

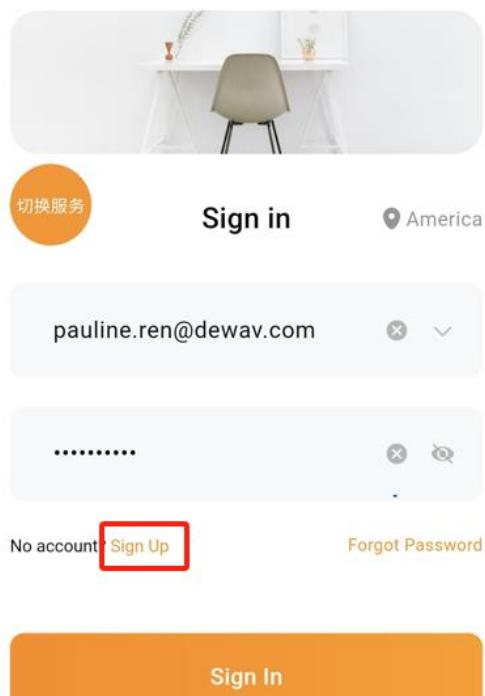

3.3 Login

Check the agreement and log in with your registered account

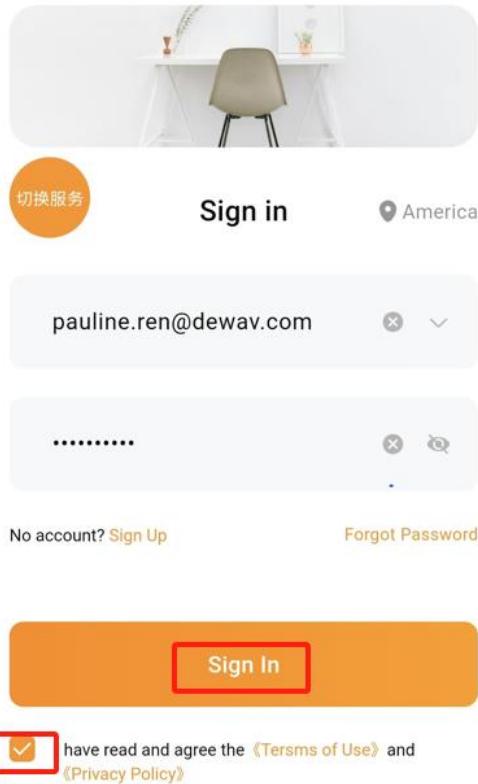


3.4 Add equipment

(1) Click "+" in the upper right corner and select Add Device



After selecting it, you will enter the search device mode, as shown in the image below

Nearby Devices

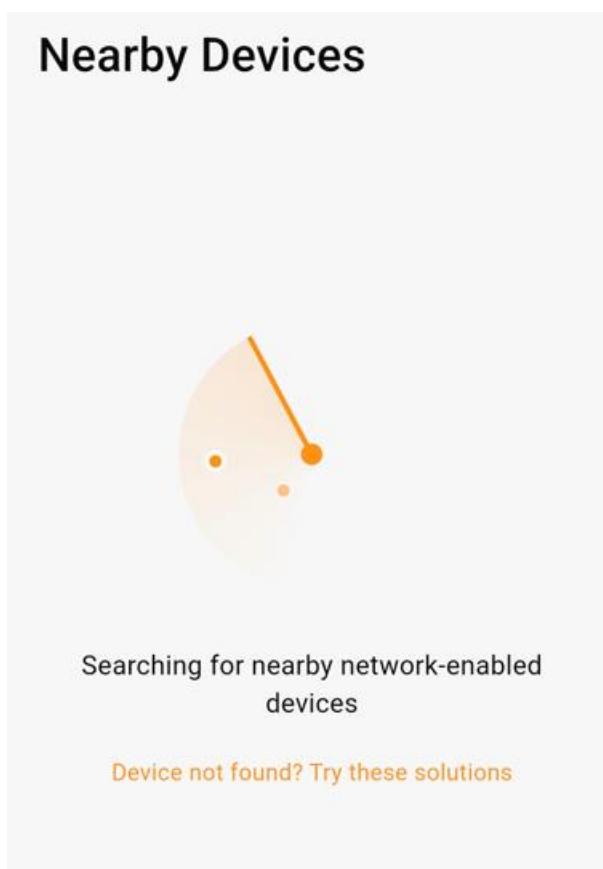

(2) Long press the device button 5S to enter the distribution network mode


When entering network configuration mode, there will be a voice prompt (Start wifi connection), the wifi icon will flash on the screen, and the indicator light will flash blue

(3) The mobile app will display the searched devices, as shown in the figure below



After selecting the device, you will be taken to the configuration interface, as shown in the figure below

On this interface, select the corresponding network and enter the password to complete the network configuration

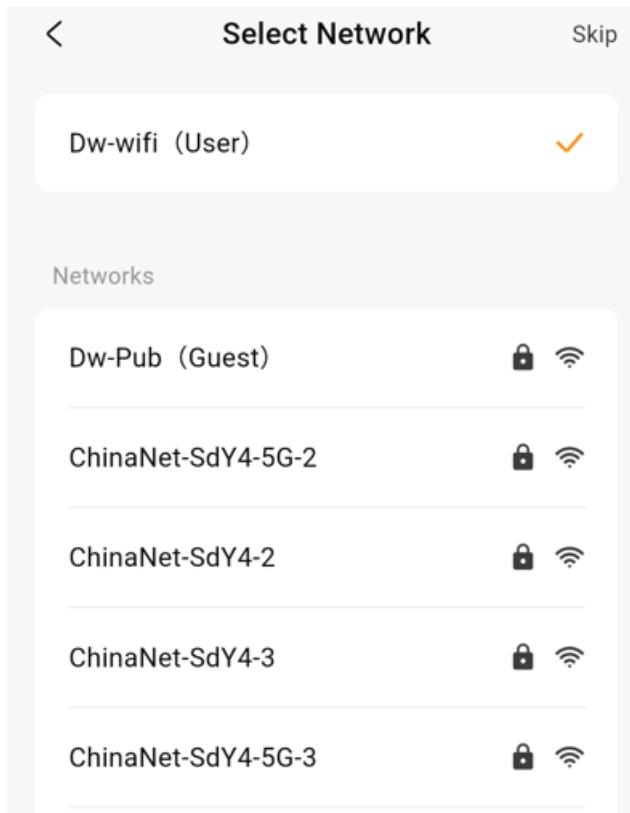


3.5 Wifi manual network distribution


Click the Settings icon



Go to the settings interface and click WiFi Network

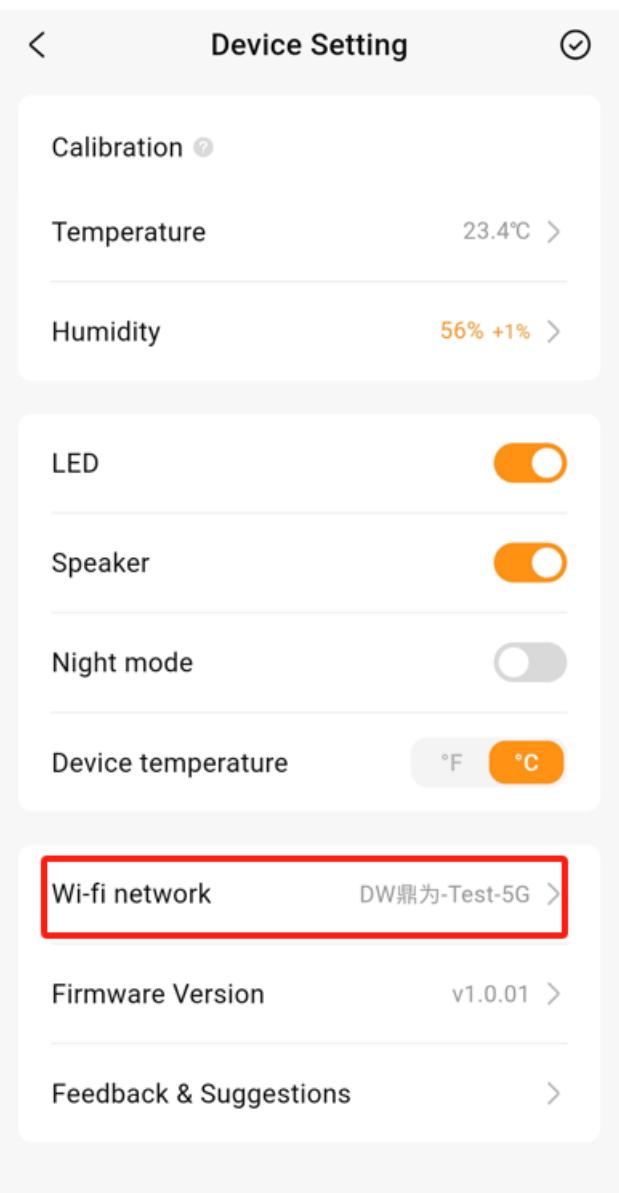


On this interface, select the corresponding network and enter the password to complete the network configuration

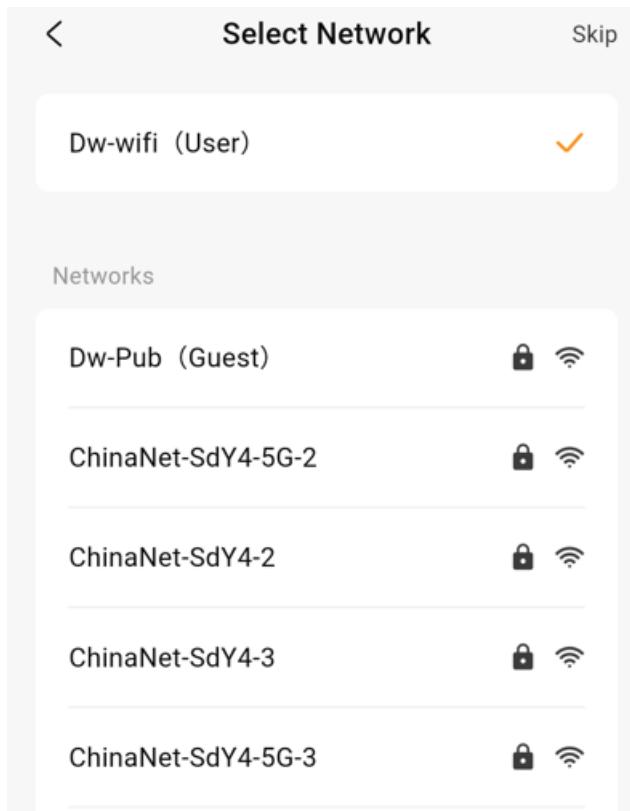

3.6 Parameter Settings

Click the settings icon to enter the settings interface to complete the device setup

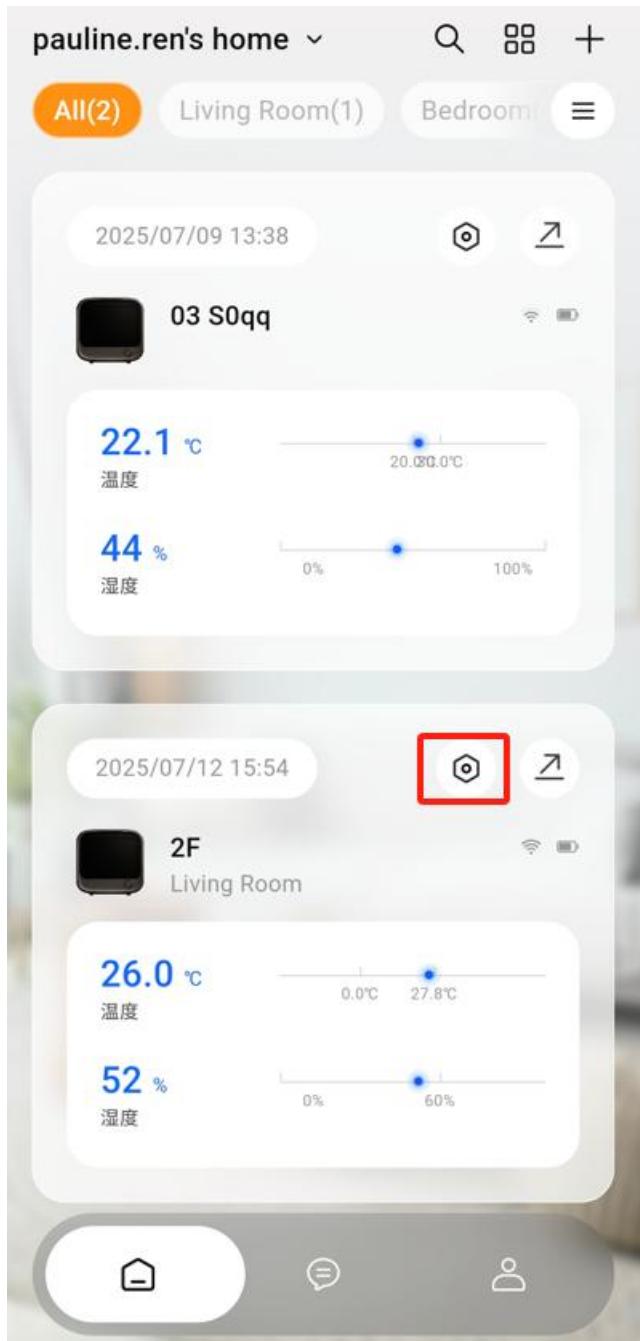

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

To maintain compliance with FCC'S RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm between the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.