

Live Lids Wi Fi User Guide

FCC ID:2ATX8LLWIFI

Model Name:LL WiFi

Turn on the device:

- 1) Press and hold the function button for 5 seconds.
- 2) Wait for start-up logo.
- 3) Photos will begin to play automatically after start-up.

Play/Pause photo display:

- 1) Quickly press and release function button.
- 2) On screen icon will indicate Play or Pause and disappear after a few seconds.

Turn on Wi-Fi Hotspot:

- 1) From photo playing, double-press function button.
- 2) Wait for Wi-Fi hotspot to turn on.

Turn off Wi-Fi Hotspot:

- 1) From Wi-Fi hotspot screen, single-press or double-press function button.
- 2) Wait for Wi-Fi hotspot to turn off.
- 3) Photo play will resume.

Turn off device:

- 1) From photo playing mode, press and hold function button until shut-down logo appears.
- 2) Release function button.
- 3) Wait for device to shut-down and the screen turns off.

Charge Li-Ion battery:

- 1) Connect Live Lids USB-DC charging cable to standard USB charger with at least 1 amp output current.
- 2) Plug USB charger to working wall socket.
- 3) Connect DC Jack end of charging cable to DC Jack on the snapback.
- 4) Observe the charge indicator LED.
 - OFF – Cable not connected or no power
 - Flashing – Battery is charging
 - Solid – Battery is full (no longer charging)

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.