


## 7-TROUBLE SHOOTING

Symptoms	Possible Problem	Solution
No Function Light and/or No Sound	1.Electrical cord is not connected	Insert the plug into electric outlet
	2.Speaker power button is not turned on	Turn on the power switch
	3.Volume is not loud	Long press CH+ to increase the volume
Function Light on but No Sound	1.Media cables are not connected correctly	Turn off the power, check the input cables to ensure proper audio cables are connected to relevant input plugs
	2.Audio signal is not transmitted to Speaker	Check all audio input signals to the speaker
If the problem still exists, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the speaker cover as this will Void the Speaker Warranty.		

## WARNING

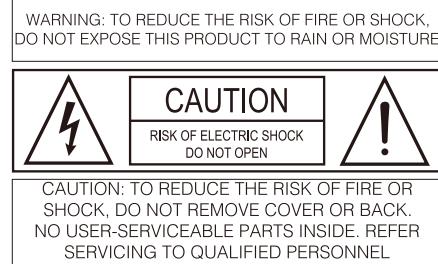

The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons

### NOTES:

Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside.

### Package Contents:

- 1 Speaker
- 1 Stand
- 1 Remote control
- 1 Microphone
- 1 DC9V 1.5A adapter
- 1 Aux cable
- 1 User Manual
- 1 Warranty card

\* Product may differ slightly from picture shown

\* Specifications are subject to change without notice.

\* All Trademarks and trade names belong to their respective owners.



## PROFESSIONAL MULTI MEDIA SPEAKER KARAOKE SYSTEM

JET 15

## USER MANUAL



PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATION THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE

AC110-220V 50/60Hz  
MADE IN CHINA


## 1-IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instruction, meanwhile, please observe all the indications about safe operating, these safety and operating instructions should be kept in condition of construction.




1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock. Attention: This set applies to AC 100V~240V/50Hz~60Hz power supply. Use standard power supply. Pls be sure for the correct power supply before use it.

## 2-CONTROL PANEL FUNCTIONS

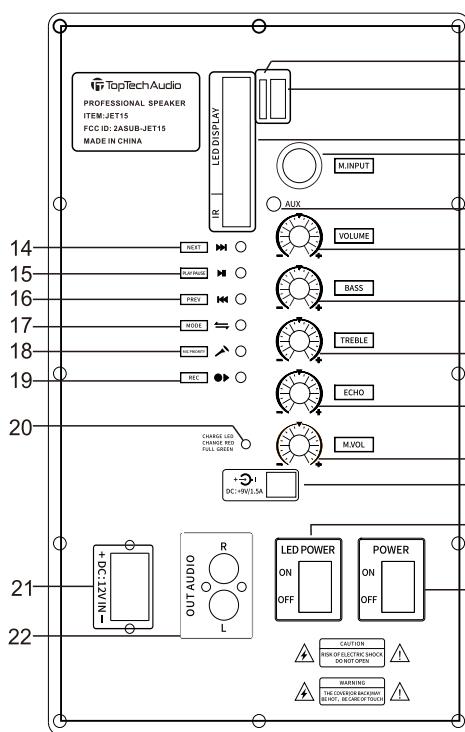

- 1-**MEMORY DEVICE**: Memory device 1
- 2-**MEMORY DEVICE**: Memory device 2
- 3-**LED DISPLAY**: LED display
- 4-**MIC. IN**: Microphone input slot
- 5-**AUX IN**: AUX input
- 6-**VOLUME**: Master volume adjustment
- 7-**BASS**: Bass volume adjustment
- 8-**TREBLE**: Treble volume adjustment
- 9-**ECHO**: Echo volume adjustment
- 10-**M. VOL.**: Microphone volume adjustment
- 11-**DC 9V1.5A**: DC input for charging
- 12-**LED POWER**: Led power on/off
- 13-**POWER**: Power switch
- 14-**▶**: Next song/channel
- 15-**⏸**: Pause/Play/Search for FM signals
- 16-**⏮**: Previous song/channel
- 17-**MODE**: Mode transfer
- 18-**MIC. PRI.**: Microphone priority function
- 19-**REC.**: Recording function
- 20-**DC12V IN**: External DC 12V input
- 21-**AUDIO OUTPUT**: Audio output

## 3-REMOTE CONTROL FUNCTIONS

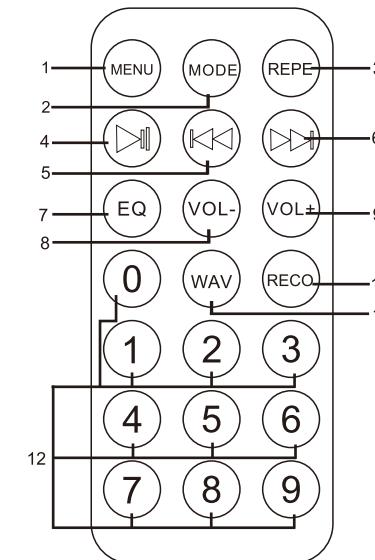

1. MENU-Switches the volume options
2. Mode - Switches the Media Input Mode FM/Line
3. REPE - Press this button to repeat the current track
4. **▶** Play/Pause
5. **⏮** Previous Track/Volume down
6. **⏭** Next Track/Volume up
7. EQ - Choose from several Equalizer presets.
8. VOL-volume down.
9. VOL+ Volume up.
10. RECO - Press to Start recording audio function.
11. WAV - Press this button to transfer songs into available format
12. Number Keypad to directly select the Media Track.

## 4-WIRED MICROPHONE INSTRUCTIONS

- 1-Plug in the wired microphone(included).
- 2-Adjust the microphone volume knob MIC VOL for proper volume.
- 3-Adjust the echo depth to the proper position.
- 4-Now you can start using your microphone.

## 5-BLUETOOTH CONNECTION

You can connect your compatible wireless devices such as a cellphone, computer etc., to listen to your audio tracks from this speaker. Press the MODE button on the speaker, or press the MODE button on the remote control to enter bluetooth mode, indicated on the LED display. Using the native controls on your device, select "JET 15" in your settings to pair, and once successful, you will hear a sound of notice on the speaker.

## 6-CHARGING THE SPEAKER

- 1-Full recharge takes 8-12 hours
- 2-Please use the supplied charging cable to charge the speaker .
- 3-When you are using your unit while it is plugged to an external power source, be sure the battery switch is ON.
- 4-To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out.

Not charging your unit right away can affect the performance of the battery.

#### Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Guangzhou Yingxing audio facilities Co., Ltd may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.