

A	图示			成型尺寸	80*120 mm	标签类	± 0.5mm	PE袋类	0~200mm ± 2mm
	——	裁切线		刀模尺寸	L*W*H mm	说明书类	± 1mm		20~500mm ± 3mm
	——	压线		展开尺寸	480*120 mm	EPE类	+5mm/-3mm	模具成型类 (EPS/纸塑等)	>500mm ± 5mm
	----	反压线							
	——	齿刀线 x/x mm							
	=====	开槽		公差（无特殊说明下）	纸箱类	单瓦楞 ± 3mm 双瓦楞 ± 5mm	外尺寸：0~400mm ± 2mm		
⊗⊗⊗	粘合区域	400~600mm ± 3mm							
									> 600mm ± 4mm
									腔体尺寸：+2/-0mm

B										
C										
D										

F										
C										
D										

F										
C										
D										

F										
C										
D										


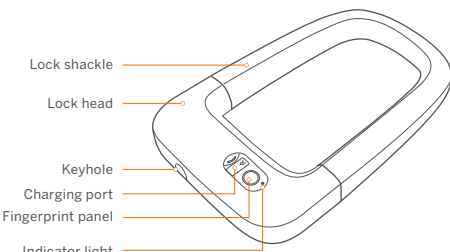

 







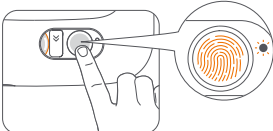

F										
C										
D										

F										
C										
D										

F										
C										
D										

F										
C										
D										

F										
C										
D										

<div>Segway Bluetooth Fingerprint U-Lock</div> <div>User Manual</div> <div></div> <div>Before using the product, please read the manual carefully and keep it for future reference.</div>	<div>Product Overview</div> <div>When using for the first time, you can use any fingerprint to unlock. Please follow the steps below.</div> <div><div><div><div>Lock shackle</div><div>Lock head</div><div>Keyhole</div><div>Charging port</div><div>Fingerprint panel</div><div>Indicator light</div></div><div></div></div><div><div>Accessories:</div><div><div>USB cable × 1</div><div>Spans key × 2</div><div>User manual × 1</div></div><div><div>* Please keep the spans keys in a safe place. Segway does not sell or provide replacement keys.</div><div>The pictures in this manual are for illustration purposes only. The actual product, app features and interface may differ.</div></div></div></div>	<div>First Use</div> <div>When using for the first time, you can use any fingerprint to unlock. Please follow the steps below.</div> <div><div><div><div>1 Remove the protective cover from the fingerprint panel.</div><div></div></div><div><div>2 Press the fingerprint panel until you hear a long beep and the indicator light turns blue.</div><div></div></div><div><div></div><div>After unlocking, please follow the instructions to activate the lock and register your fingerprints.</div></div></div></div>	<div>App Activation</div> <div><div><div></div><div>Segway-Ninebot App</div></div><div>Scan the QR code above to install the Segway Ninebot app (referred to as "the app" in this manual). Follow the prompts to activate the fingerprint lock and complete owner authentication. Keep your phone close to the lock to ensure Bluetooth signal.</div><div><div>1 After installing the app, please register or log in.</div><div></div></div><div><div>2 Tap "Search Device" to find and connect your fingerprint lock.</div><div>After connection is successful, the indicator light turns yellow, and you will hear one beep.</div><div></div></div><div>3 Follow the prompts to complete product activation and owner authentication.</div></div>	<div>Registering a Fingerprint</div> <div>Open the app and go to the fingerprint lock main page. Go to "Fingerprint Management" &gt; "Add New Fingerprint" and follow the prompts.</div> <div><div><div></div><div><div>Blue light on + one beep</div><div>Red light on + two beeps</div></div></div><div>After a fingerprint has been successfully registered 6 times, it can be used to open the lock. The indicator light will turn blue and you will hear a long beep.</div><div><div>* When registering your fingerprint, make sure to fully cover the fingerprint sensor with your finger at different angles.</div><div>* Make sure your fingers are clean and dry.</div></div></div> <div><div>NOTE:</div><div><div>1 You can add, delete, and name the fingerprints, and view unlocking history in the app.</div><div>2 If the fingerprint lock does not respond, check its battery level in the app. If the indicator light flashes red and beeps continuously, please charge the device soon.</div><div>3 Before giving away or resetting the fingerprint lock, tap the "⚙️" icon on the fingerprint lock interface, and then tap "Device Settings" &gt; "Restore Factory Settings" to clear all records.</div></div></div> <div><div></div><div>www.segway.com</div></div>
--	--	--	--	--