

Excelvan

TABLET PC
User Manual

Attention

1. Desk

1.1 Touch panel

1.2 POWER

1.3 BACK

1.4 MIC

1.5 Volume +/Volume-

1.6 Earphone jack

1.7 Video output interface

1.8 TF card

1.9 Micro USB

1.10 DC adapter

1.11 Recovery

2. First use

2.1 Battery management and charge

2.2 Connection with PC

3. Equipment operation interface

3.1 Description of main interface

3.2 Description of status bar

3.3 How to use the touch panel

4. Basic Functions

4.1 Silent mode/Volume/Notification ringtone/Audible selection/Screen lock sounds

4.2 Application

4.3 Storage

4.4 Language & keyboard

4.5 Date & time settings

5. Installing and Managing Applications

5.1 App installer

6. FAQs

6.1 Why won't my device open?

6.2 Why can't I copy files and or play music etc?

7. Battery

Attention:

This handbook contains important information on how to use your device correctly and safely. Please ensure you read the handbook thoroughly before using your tablet.

- Ensure your tablet is not exposed to high temperatures, moisture or dust as this may damage the device.
- Avoid placing the tablet in high temperature environments such as in a car window during summer.

- Avoid any form of violent contact with the device such as drops or knocks. This could cause damage to the TFT displayscreen.
- Please choose the appropriate volume to avoid conditions such as tinnitus. DO NOT use the headphones at an excessively loud volume.
- Please charge in the following circumstances;
 - A. The battery power icon shows no power.
 - B. The system automatically shuts down.
 - C. There is no response from the user interface.
 - D. The device shows red icons in the top right hand corner of the screen.
- During an ongoing process such as uploading or downloading files, avoid suddenly powering off the device as this could cause an application error.
- If memory is erased due to damage or during repairs, the company shall not be held liable. Please follow the user manual to ensure you operate the device properly.
- DO NOT disassemble the product. Avoid using substances such as alcohol, thinner or benzene to clean the product.
- Always use the device in accordance with local laws and regulations.
- DO NOT use the device when driving or walking down the street.
- USB connectivity is for data transmission.
- The company reserves the right to improve the product specification and design. The company reserves the right to update information about the product without prior notice.
- This tablet is not waterproof.

【Note】 All pictures in this manual are for reference only.

1. Desk:

1.1 Touch panel

7" 8" 10.1" (screen size options)

Operating the touch panel: Drag your finger across the screen and click to select an icon.

1.2 POWER

Startup: Long Press and hold the power button. The system will then enter the main interface.

Shutdown: Long press the power button on the main interface. The system will show a "power off" option. Click "ok" to safely shut down.

Lock screen: Short press power button to lock or unlock the screen.

Note :

1. When out of battery, the system will shut down automatically.
2. If turned off unsafely, your device will restart and scan and restore the disk. This may take longer than a regular start up.

1.3 BACK

Short Press BACK button “ ” to return to the last interface.

1.4 MIC

Recording

1.5 Volume+ /Volume- can be pressed accordingly to change the volume.

1.6 Earphone jack

3.5mm Standard earphone jack

1.7 TF card

TF-CARD slot: external T-FLASH card

1.8 Micro USB

Micro USB jack: Connect to the computer for data transmission, charging and external connection of USB flash drives.

1.9 DC Adapter

For charging your tablet battery.

1.10 Recovery

Upgrade firmware if tablet crashes.

2.First use

2.1 Battery management and charging;

When using for the first time, please fully charge the battery via the adapter or USB interface. When using for the second time, please ensure your device has about 6 hours of battery life. After that you just need 4 hours to charge.

Note: You MUST use the standard adapter to charge the built-in polymer battery. See specifications below:

(Input: AC110~240v 50/60Hz/Max: 180MA/Output:DC 5.0~5.5V/1.5A-2.0A).

Note:

1. Lack of use for a long period of time can cause harm to your device. Ensure you charge and use the battery at least once per month.
2. After shut down due to low battery, connect to a USB port or a DC adaptor. The device will remind users of low battery. When powering on the device after charging, users need some time to enter into the main menu interface.
3. Device will charge more quickly in standby mode. Power consumption of device and screen will cause device to charge more slowly.
4. Connection with PC
Connect the device to a PC via USB and users will see the pop up USB connection

window. Click “turn on USB storage” to connect to PC. In load mode, you can copy and delete files on your device or on a memory card.

3.Equipment operation interface

3.1 Main interface description:

After start up, you will enter the main interface.

In the main interface, you can:

Manage main interface software icons by long pressing an icon for 3 seconds.

Delete icons by long pressing for 3 second. Drag the icons to the top left corner. Appear “remove” and the icon will be deleted.

Long press the screen and you will see the operation instruction on the home screen.

3.2 Status bar description:

The status bar on the top of the main interface display shows USB connection status and battery charge icons, current time etc.

3.3 Using the touch panel:

The device is equipped with a 7” touch screen. Following a description of the main touch screen area is a description of how to use the touch screen.

Regardless of the interface on the screen, users can go back to main screen by pressing the soft key on the bottom left corner of the main screen.

Note: The main screen soft key functions as the machine menu. In different browsers (file, music, video, pictures etc), you can shift and drag the scroll bar and move up and down.

In the main interface, you can touch the icons to open the Apps.

4.Equipment basic set

Setting: Click setting icons  to enter the setting interface.

4.1 Silent mode/Volume/Notification ringtone/Audible selection/Screen lock sounds

4.2Application

Manage applications

Unknown sources: Click “Unknown Sources” then click “OK”.

Manage application: Manage and uninstall application.

【Note】 : Please close any USB connections when upgrading the firmware.

Uninstalling applications

1. Enter “setting”>”Applications”>”Manage application” and users will see the installed programs list.
2. Click the programs you want to uninstall and you will enter the following interface.
3. Click “Uninstall” then you can delete the application.

4.3 Storage

Remove TF card to view the available storage space.

【Note】 : Please touch the “delete SD card” option to safely remove SD card.

4.4 Language & keyboard

Setting: (language) text input and automatic error correction options

Select language: 54 languages available

Note: Android system can support 54 languages. Main menu interface only supports 14.

Show suggestions: Display suggested words while typing.

Auto-complete: Space bar and punctuation automatically insert highlighted word.

4.5 Date & time setting

Set date/Set time/Select time zone/Select date format in “setting icon”

Setting—System—Date&Time

5.Apps install and manage

5.1 App installer

This device can support 3rd party Android APPs. Most Apps can be installed in the network and copied to NAND FLASH or SDcard.

Click the “App installer” icon to install, manage and exit Apps.

Install: Click install, enter App, install interface separately for internal memory disk or SD card.

Select the APP you would like to install, click it to install, go back to the main menu and you will see the installed app you just selected.

Note: Some APPs must be installed by memory card. Downloaded 3rd party APPs may not be installed properly on the device.

Manage; click manage and enter third party interface. Click the “install” icon to enter the action interface.

146.FAQs

6.1 Why won't my device open?

1. Check the battery power.
2. Connect the adaptor first then check again.
3. If you still can't open after charging, please contact the supplier.

6.2 Why can't I copy files and or play music etc?

1. Please check the connection between the device and the computer.
2. Check whether storage space on the device is already full.
3. Check whether the USB cable is broken.
4. Check whether the USB cable has been disconnected.

7. Battery

Material Plastic

Model Q738

Voltage 3,7V

Capacity 3500mAh

Power 12,95Wh

FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.