



tonies®

Setup Guide



Nice to
meet you!



OPEN
HERE





Welcome to the Tonie-Universe

Hi! I'm Playtime Puppy, one of the many Tonies compatible with your new Toniebox. Before you begin, I will walk you through a simple connection process. Your Toniebox will be up and running in no time!



Setting up your Toniebox is easy! You will need:

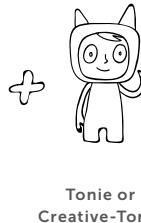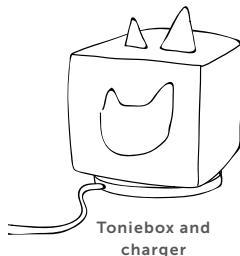

Wireless network




Access to the internet



Tip: You need to keep the Toniebox within close range of your Wi-Fi signal during setup. The better the connection, the sooner you can start listening!

Set up your Toniebox and start listening

Before you can use your new Toniebox, you must first set it up. You'll need a smartphone, tablet or computer to get started.

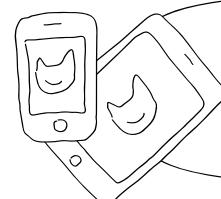

Download the free **mytonies** app and follow the step-by-step guide to set up your Toniebox.



You can also visit
my.tonies.com/setup-toniebox



You can always access your Tonies and Toniebox settings through your free Tonie-Account.



Find additional answers, instructions and video tutorials at:
support.tonies.com

KEEP GOING



FAVORITE CHILDREN'S SONGS

Hi! I'm **Playtime Puppy**.
I like to sing songs
that get you moving
and grooving!



Playtime Songs

Here's a list of songs we can sing together:

The Wheels on the Bus

If You're Happy and You Know It

The Muffin Man

Jack Be Nimble

Itsy Bitsy Spider

Rain, Rain, Go Away

Baby Shark

Let's Get Ready

Old MacDonald Had a Farm

Mary Had a Little Lamb

All the Little Raindrops

Down by the Bay

Jack and Jill

Clean Up Song

Bingo

Hot Cross Buns

One Potato, Two Potato

Pat-a-Cake

It's Raining, It's Pouring

The Alphabet Song

Miss Polly

I Wanna Be Clean/Hygiene Song

The Ants Go Marching

I Know an Old Lady (Who Swallowed a Fly)

Hickory Dickory Dock

I Had a Little Nut Tree

Row, Row, Row Your Boat

I'm Growing Up

Skip to My Lou

Peter Piper

I'm a Little Teapot

Oats, Peas, Beans, and Barley Grow

Head, Shoulders, Knees, and Toes

Skidamarink


Running time: approx. 45 minutes

The Toniebox makes listening **easy.**

Using the Toniebox is so simple:


How to turn your Toniebox on

Pinch one of the ears with your thumb and forefinger or place the box on its charging station.

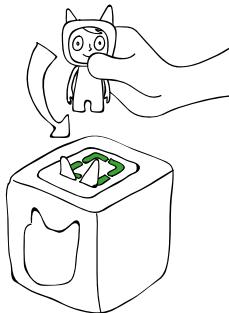

Playing and pausing




When the light on your Toniebox turns green, place a Tonie on top. Want to pause the story or song? Just remove the Tonie from the Toniebox. When you place your Tonie back on, it will pick back up from the same spot as long as another Tonie hasn't been played in between.

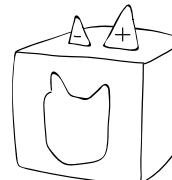

How to turn the volume up and down


Pinch the big ear to turn up the volume of the Toniebox. Use the little ear to turn it down.

YOU CAN SET THE
MAXIMUM VOLUME
AND MUCH MORE
IN YOUR
TONIE-ACCOUNT!

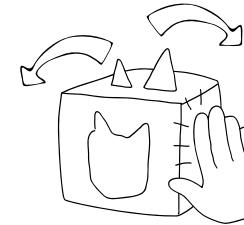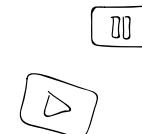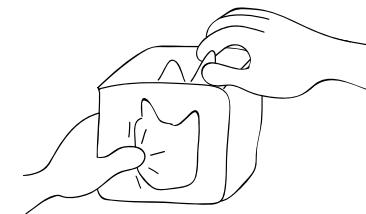

Skip back and forth

To skip back and forth between chapters, hold your Toniebox with one hand and tap on its side with the other. To fast-forward or rewind, tilt the box to one side.

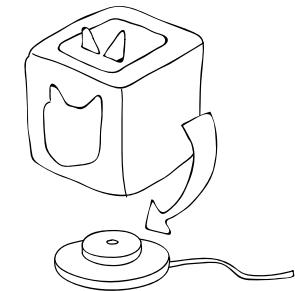


How to charge your Toniebox

Even a Toniebox needs a little rest and relaxation sometimes. The LED will glow green when the battery is sufficiently charged. The LED lights up orange when the battery is low.

LED display overview

The Toniebox has different LED indicators. Here's a brief overview:

Color	LED Display Meaning
Flashing green	Factory setting: Please install
Green light	Everything's good to go. The battery is sufficiently charged and the Toniebox is ready to play.
Pulsing blue	The Toniebox is in connection mode and can now look for new wireless internet connections. This may mean the following: a. The Toniebox is connected to the internet and is downloading new Tonie content. b. The Toniebox is looking for available wireless internet connections before it switches into connection mode (lasts approximately 20 seconds).
Flashing blue	Warning – low battery! Place your Toniebox on the charging station to recharge the battery.
Orange light	Oops! An error has occurred. Your Toniebox will tell you which error it is in a voice message.
Red light	
White light	Offline mode

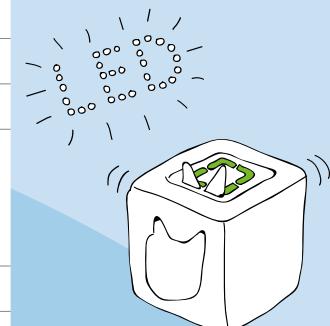

Welcome to the Tonie-Univers




Need help?

Here are a few tips to get you started.

For additional help visit:

support.tonies.com

Quick troubleshooting tips

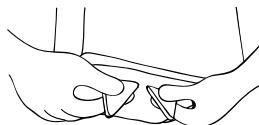

Tip 1: The classic restart

Tip 1: The classic restart

If your Toniebox is having a hard time, sometimes a restart will do the trick. To restart, remove your Toniebox from the charging station, turn it on its head and press both ears until you hear a sound (approximately 10 seconds).

Tip 2: Reset the Toniebox to its factory settings

As a last resort, you can reset your Toniebox to its factory settings.

To do this, turn both the Toniebox and its connected charging station upside down. Press both ears of the Toniebox until you hear a sound (approximately 10 seconds).

Warning: By resetting your Toniebox to factory settings, all network connections, contents and settings will be deleted.

Tip 3: Check the support code word

In the event of a more complex problem, your Toniebox will provide a code word. You can find out what it means and how to resolve the problem by calling our support line at **877-MY-TONIES** (877-698-6643) or by visiting support.tonies.com

