

WIRELESS SPEAKER USER GUIDE

Dear Guest

Thank you for purchasing our Disney Adventure Wireless Speaker. To make your experience more enjoyable, we recommend you read and follow the instructions before using. Also please keep the volume at a moderate level when playing music in common areas. This way, we can all have a pleasant and Magical Voyage!

With much Appreciation,
Disney Cruise Line

Safety Warnings

To ensure safe and optimal performance, please follow these precautions:

- Do not subject the speaker to strong impact.
- Keep away from chemicals.
- Avoid exposure to strong magnetic and electric fields.
- Do not place near direct sunlight or heat sources.
- Do not disassemble, repair, or modify the product yourself.
- Properly dispose of packaging, batteries, and electronic products.
- Avoid exposing the speaker to moisture or high levels of humidity.
- Do not submerge or drop the Speaker in water.

Product Features

- Bluetooth Audio: Bluetooth 5.4, range of 10–15 meters.
- Bluetooth Call: Clear voice quality with no echo.
- MP3 Playback: Plays MP3 files from TF card.
- Audio Input: Connects to computers, music players, phones, etc.
- Breakpoint Memory: Remembers last track and volume on exit.
- Built-in Battery: Rechargeable lithium battery; energy-saving and eco-friendly.

Music Playback Operation

- Upon power-on, the device defaults to Bluetooth mode.
- Inserting a TF card switches to TF mode automatically.
- Inserting an AUX cable switches to AUX mode automatically.
- You can switch modes manually using the Power/Mode button.
- For more details, refer to the Button and Port Functions section.

Button and Port Functions



Buttons:

1 - Power Button:

- Long Press: Power ON/OFF.
- Short Press: Switch playback modes.
- In Call Mode: Answer/End call.

2 - Next Song Button:


- Short Press: Next track.
- Long Press: Volume up.

3 - Play/Pause Button:

- Short Press: Play/Pause.
- Long Press: Disconnect/Reconnect Bluetooth.
- Double press: TWS pairing

4 - Previous Song Button:

- Short Press: Previous track.
- Long Press: Volume down.

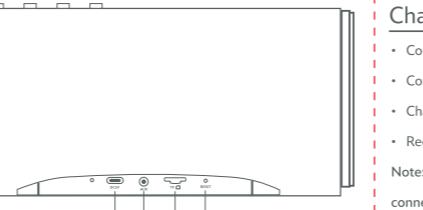

Ports:

5 - TYPE-C Interface:

- Charging port (DC 5V).

7 - TF Card Slot:

- Insert TF card for MP3 playback.

6 - AUX Interface:

- 3.5 mm external audio input.

8 - RESET Hole:

- Press with a pin for 8 seconds to reset device.

Indicator Light

- Charging: Red light ON while charging; turns OFF when fully charged.

Bluetooth Connection Instructions

- Long press Play/Pause button to enter Bluetooth mode. You'll hear a prompt, and the Bluetooth icon will flash.
 - Enable Bluetooth on your mobile device and search for "Disney Adventure Speaker".
 - Select "Disney Adventure Speaker" from the list. A prompt will confirm a successful connection.
- (If prompted for a password, enter 0000.)
- Previously paired devices will connect automatically when Bluetooth is enabled within 10 seconds of power-on.

Playing Time

Battery	Volume	Playing Time
7.4V/2000 mAH	100%	4H20
	70%	7H
	50%	8H50

Charging Instructions

- Connect the included charging cable to the TYPE-C port.
- Connect the other end to a USB port or 5V/1.5A charger.
- Charging time: Approx. 3–4 Hours
- Red light indicates charging; turns off when fully charged.

Note: The device includes overcharge protection and can stay connected to the charger without issue.

Low Battery Notice

- A voice prompt will alert you when the battery is low.
- The speaker will shut down automatically if not charged.
- If unused for long periods, charge the device at least once a month to prolong battery life.

Frequently Asked Questions

- Q: Does it shut down automatically after turning on?**
- A: Yes, if the battery is low. Charge speaker for at least 2 hours before use.

- Q: Blue light flashes then device shuts down?**
- A: Yes, that indicates battery is low.

- Q: Device won't charge?**

- A: Use the original charging cable. Ensure the USB port or charger is functioning properly.

- Q: Red charging light is off or dim?**

- A: This is normal. The light dims or turns off when the battery is nearly or fully charged.

- Q: No sound?**

- A: Make sure the correct mode is selected, and volume is adjusted appropriately.

- Q: No sound in AUX mode?**

- A: Use the provided audio cable. Switch to AUX mode manually using the power button. Check the volume on the external device.

- Q: Bluetooth does not auto-connect?**

- A: Only paired devices auto-connect. If more than 10 seconds have passed after entering Bluetooth mode, connection must be manual.

- Q: No sound from Bluetooth?**

- A: Ensure Bluetooth is connected. Check volume on the connected device.

- Q: Buttons not working?**

- A: Restart the device by turning it off and on again or use reset hole to reset the device.

Packaging Content

- Bluetooth Speaker x 1
- Charging Cable x 1
- User Manual x 1

Technical Specifications

Output Power	10W × 2
Speaker Impedance	4 Ohm
Working Voltage	7.4V
Frequency Range	90Hz – 20KHz
Signal-to-Noise Ratio	≥85dB
Distortion	<1%
Supported Functions	Bluetooth, TF Card, AUX, TWS
Power Supply	7.4V lithium battery / DC 5V
Control Mode	Button control
Input Sensitivity	500 ± 50mV

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to operate with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Designed Exclusively for:
Disney CRUISE LINE
© DISNEY



FCC ID: 2AU4F-L58A
Printed in China