



# WIRELESS SPEAKER USER GUIDE



Dear Guest

Thank you for purchasing our Disney Destiny Wireless Speaker. To make your experience more enjoyable, we recommend you read and follow the instructions before using. Also please keep the volume at a moderate level when playing music in common areas. This way, we can all have a pleasant and Magical Voyage!


With much Appreciation,  
Disney Cruise Line

## Introduction Notes

### Important Notes

1. Read this manual carefully and keep it for reference.
2. Avoid exposing the speaker to moisture or high levels of humidity.
3. Do not submerge or drop the Speaker in water.
4. Loud music for long periods can damage the speaker; avoid high volumes.
5. Follow the warnings contained in these instructions.
6. Clean the Speaker only with a dry cloth or towel.
7. Unplug the charger when it's not in use and is fully charged.
8. When unplugging cords, grab the plug and pull it straight out.
9. Keep the speaker away from extreme heat and direct sunlight to prevent battery damage.

## Product Description & Operating Instructions

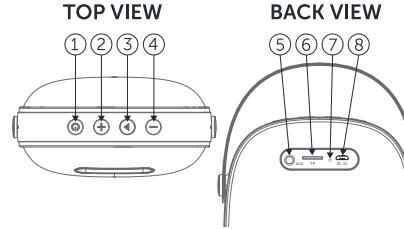

1. **Power Button:** Long-press for 3 seconds to turn the Speaker on. After a voice alert, the status light will flash blue, indicating it's ready to pair. Activate Bluetooth on your device, search for "Disney Destiny Speaker," and select it. A solid blue light means a successful pairing.
2. **Volume Up Button**
3. **Play/Pause Button**
4. **Volume Down Button**
5. **AUX (3.5-LINE-IN input):** Connect the AUX cable to the Speaker and your device, and the Speaker will switch to AUX mode.
6. **TransFlash/Micro SD card slot:** Insert a card with MP3 or WAV files, and the Speaker will switch to TF/Micro SD mode and automatically play the audio files.
7. **Status Light Indicator**
8. **DC-5V USB port:** A voice alert will prompt that the battery is low. To charge the Speaker, connect the USB micro B end of the included cable to the DC-5V port on the Speaker and the USB Type A end to the power supply. The red status light will turn on while charging, and off when fully charged.

## Buttons & Controls

	BLUETOOTH MODE			AUX MODE		TRANSFLASH/MICRO SD CARD		HANDS FREE MODE	
	LONG PRESS	SHORT PRESS	DOUBLE PRESS	LONG PRESS	SHORT PRESS	LONG PRESS	SHORT PRESS	LONG PRESS	SHORT PRESS
①	Turn on/off	Switch Mode		Turn on/off	Switch Mode	Turn on/off	Switch Mode		Switch Between Speaker and Phone
②	Reset to Pairing Mode	Play/Pause or Auto-Pair	Re-dial Last Number		Mute / Un-Mute		Play/Pause	Reject Call	Answer/Hang-Up
③	Decrease Volume	Previous Track		Decrease Volume	Decrease Volume	Decrease Volume	Previous Track	Decrease Volume	Decrease Volume
④	Increase Volume	Next Track		Increase Volume	Increase Volume	Increase Volume	Next Track	Increase Volume	Increase Volume

## Troubleshooting

### Unsuccessful pairing:

- If your device asks for a password, please type in **0000**.
- Shutdown and reboot the Speaker.
- Reset the Speaker by pressing the **–** & **▶** buttons simultaneously.
- Check if the Speaker has been muted or paused by pressing the **▶** button.

### Staccato occurs when playing music:

- Check if your device is within the Speaker's Bluetooth range (approximately 10m), and check for any objects that may cause interference.

### No audio on playback:

- Check and adjust the volume of the Speaker.
- Check if the Speaker has been muted or paused by pressing the **▶** button.

### No audio on playback in AUX mode:

- Check that the audio input cord is connected correctly to your device and the Speaker, and that the connectors are entirely on both ends.
- Check if the Speaker has been muted or paused by pressing the **▶** button.

### The Speaker fails to power on:

- Verify that the built-in battery is charged by connecting the USB micro B end of the provided cable to the DC-5V port on the Speaker and the USB Type A end to a power source. The red status light will illuminate during charging and turn off once the Speaker is fully charged.

## Technical Specifications

Bluetooth version:	V5.0 up to 10m range
Pairing mechanism:	Manual
Capacity of integrated battery:	1200 mAh
Loudspeaker system:	Stereo, 1.5in. with Bass Boost
Maximum playtime:	3-5 hrs of music at med. vol
Frequency response:	100HZ-20KHZ
Sensitivity:	83 db. ± 2 db
Supported audio formats:	MP3, WAV
Supported memory cards:	TF/ Micro SD up to 32 GB
Power supply:	USB 5V / 500 mA
Size in mm:	1.9(l) x 5.72(w) x 14.8(h)
Weight:	420 g

### FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Designed Exclusively for:  
**Disney CRUISE LINE**  
© DISNEY

 FCC ID: 2AU4F-M2  
Printed in China