

Energizer

3 DEVICE WIRELESS CHARGING STAND

PACKAGE CONTENTS

- (1) 3 IN 1 CHARGER
- (2) USB-C CABLE
- (3) USER MANUAL



Wireless Charging Stand




USB Cable



User Manual

model#: WCP309

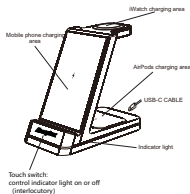

1. Using the usb-c cable provided, connect the wireless charger to the provided usb-c wall charger.
2. Once the white led light turns on. The device is ready to use.
Lay the charger flat and place the cell phone/Watch/headphone on the corresponding charging area to start charging. The white light indicates charging in progress.
3. Once devices are fully charged.
Simply remove the devices from the charging pad.
If you need to interrupt. Please remove it directly.

SAFETY INFORMATION

- Please place the device in a ventilated place and avoid high temperature or direct sunlight.
- Keep the device away from water.
- Do not put metal debris or magnetic items on it as it may damage the device.
- It is not recommended to charge the watch at a 30° tilt, preferably charge it at a 90° tilt.
- Do not expose the device to extreme temperatures.
- It is recommended to use only the cable that comes with the device.

This appliance is not intended for use by persons (including children) whose physical, sensory, or mental capabilities are different or reduced. Lack of experience or knowledge unless such persons receive supervision or training in the operation of the appliance. Children must be supervised to ensure that they do not use the appliance as a toy.

PLEASE READ THE INSTRUCTIONS
CAREFULLY BEFORE USING THIS PRODUCT

SPECIFICATIONS

| | |
|----------------------|----------------------|
| Model Name | WCP309 |
| Rated Input: USB-C | 5V=3A 9V=2A 12V=2.5A |
| Mobile Phone Output | 15W/10W/7.5W/5W |
| Earbuds Output | 3W(Max.) |
| Watch Output | 3W(Max.) |
| Product measurements | 120x67x117(mm) |

INDICATOR LIGHT

| LED Indicator | | | |
|--------------------|--------------------------------------------------------------|--------------------------------------|------------|
| Working condition | Phones | Watch | Earphone |
| At first charge | Blue and green lights flash once and go out at the same time | | |
| Stand by | Blue light | | |
| Charging | Green light | Blue light | Blue light |
| Charging Completed | Green light | Green light | Blue light |
| Full/Over | Green light blink | No LED indicator. No light indicator | |

Key Definition: Touch Keys

5. Attention

1. Please keep the charger away from water or other liquid.
2. If you need to clean the charger, please make sure it is not connected with power supply.
3. Do not place too close to magnetic stripe or clip card (ID card, bank cards, etc) to avoid magnetic failure.

6. Wireless Charging-Questions & Tips

What to do when the phone is not charging properly using the wireless charging pad or charging yet slow?

1. Ensure to properly place the center of the phone's back on the center of the charging pad.
2. Remove any foreign materials between the wireless charger and the phone as they may cause the device not to charge properly.
3. Some kinds of back covers may also halt the wireless charging. Please check the back cover of your phone, or remove the back cover and then try to charge again.
4. When installing 3rd party wireless charging cards, ensure that it is installed correctly, and won't create a bug to the cover to interfere with wireless charging.

How long will it normally take to complete a full charge using the wireless charger?

Normally, it would take three hours for the battery to be fully charged using the wireless charger. However, the actual charging time may vary depending on the device status and charging conditions as mentioned above.

Can I use a third-party back cover during wireless charging?

If your phone can charge normally with the case, then that will not be a problem. Please place your phone very close to the charging pad in case that the protective phone case is too thick to prevent your phone from charging. If it still doesn't work, please remove your phone case then charge again.

What to do when the wireless charging pad gets warmer while charging?

It's normal for the wireless charging pad to become warmer while charging. That said, it's not a device fault. According to the charging environment or device status, the wireless charging pad or device itself may heat up while charging. Normal as it's deemed, this should not affect the device's performance or life span.



Safety Instruction

- Avoid water, heat, fire, penetration of the battery, and severe drops at all times.
- Do not insert other objects into the USB ports other than the USB connectors.
- Once the product is fully charged, your power pack automatically shuts off to save power.
- During charge & recharge, battery may feel slightly warm.
- Do not clean the battery with water or other cleaning products, clean the exterior with a lightly wetted cloth or napkin.
- Normally the battery performance will decline after 2 years
- Any intentional and physical damage to the battery will not be under the warranty conditions.
- Battery storage temperature is between -10°C~+60°C , operating temperature is 0°C~45°C.
- Fully charge the battery before first use to maximize the battery life.
- Do not place any metal or flammable object on top of this product.

Instrucciones de seguridad

- Evite el contacto con agua, calor, fuego, perforación de la batería y caídas fuertes en todo momento.
- No inserte otros objetos en los puertos USB aparte de los conectores USB.
- Una vez que el producto esté completamente cargado, se apagará automáticamente para ahorrar energía.
- Durante la carga o recarga, la batería puede sentirse ligeramente caliente.
- No limpie la batería con agua u otros productos de limpieza; limpie el exterior con un paño o servilleta ligeramente humedecidos.
- Normalmente, el rendimiento de la batería disminuirá después de 2 años.
- Cualquier daño intencional o físico a la batería no estará cubierto por la garantía.
- La temperatura de almacenamiento de la batería es entre -10°C y +60°C, la temperatura de funcionamiento es de 0°C a 45°C.
- Cargue completamente la batería antes del primer uso para maximizar su vida útil.
- No coloque ningún objeto metálico o inflamable sobre este producto.

Warning:

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.