



This product is a connected accessory which requires you to buy and install one of these first:

- ... with Netatmo » connected starter pack and «... with Netatmo » connected power outlets, switches (with dimmer option).
- Connected lighting micromodules.
- radiant with Netatmo Gateway and radiant with Netatmo Switch, Dimmer or Receptacle.
- adorne with Netatmo Gateway and adorne with Netatmo Switch Dimmer or Receptacle.

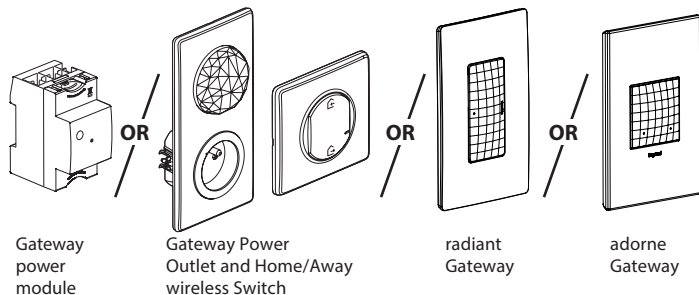

Contents:

Pocket remote control with 4 scenes

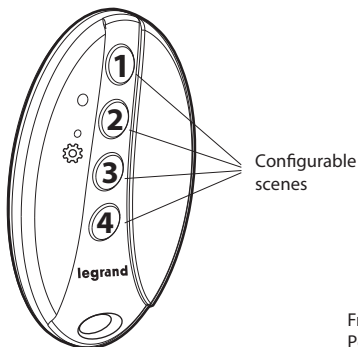


Frequency band: 2.4 - 2.4835 GHz
Power level : < 100 mW


LE11416AB

① Start configuration of the 4-scene pocket remote control



Press the **gateway power module** configuration button or the middle of the Home/Away **wireless master switch** until the LED briefly lights up green, then **release**. All the LEDs on the wired products light up with a steady green light.

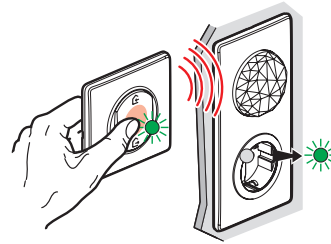

Press the **gateway EZ button** for 5 seconds and let go. The LED will turn solid green.

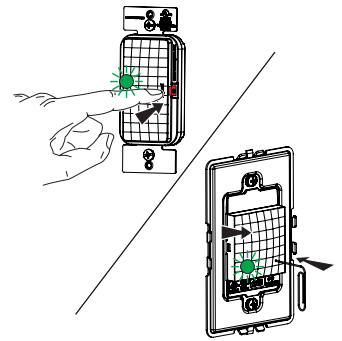

② Prepare the 4-scene pocket remote control

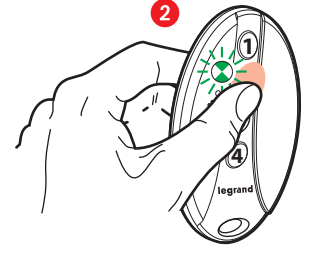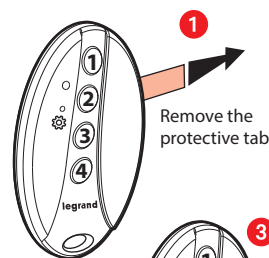

Briefly press **one of the buttons** on the 4-scene pocket remote control to activate it, the LED flashes green.



The LED on the 4-scene pocket remote control will flash green and then switch off.
Your 4-scene pocket remote control is ready to use.

2

③ Complete the configuration


To complete your installation, **briefly** press the **gateway power module** configuration button or briefly press the middle of the wireless master switch.

All the LEDs on the products will switch off.

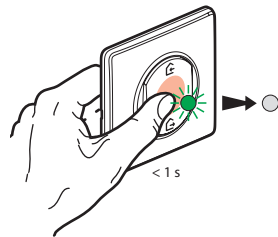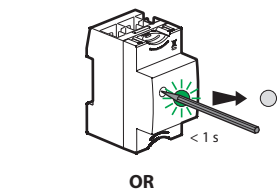


To complete your installation, briefly press the gateway EZ button.

All the LEDs on the products will switch off.

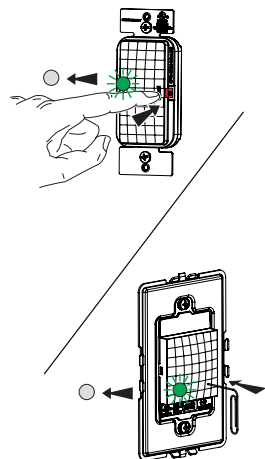

Replacing the battery

If the LED flashes red 3 times when you press the 4-scene pocket remote control → **low battery**

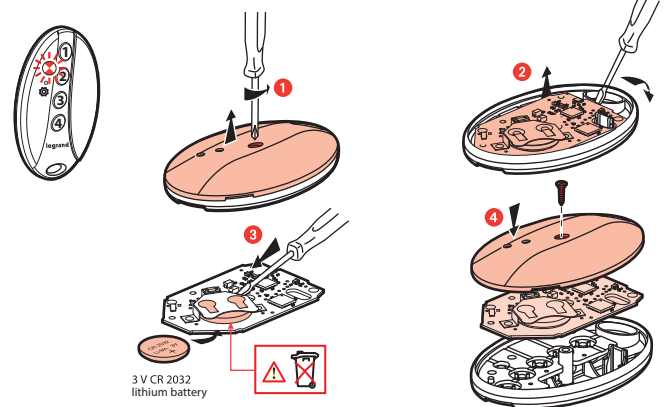

SIMPLIFIED EU DECLARATION OF CONFORMITY

The undersigned,
Legrand

declares that the radio-electric equipment referred to in these instructions complies with directive 2014/53/EU.

The full text of the EU declaration of conformity is available on the following website:
www.legrandoc.com

Customise your scene

From the **Legrand Home + Control application** (Settings/Scene section)
Follow the instructions in the guide

Reset To Factory Default:


To manually reset the device to factory defaults, press and hold the EZ Button for 10 seconds until you see the LED blink red, then release. The LED will turn off when the reset is complete.



Outside US:
www.legrandoc.com/064875
Legrand – Pro and Consumer Service
BP 30076 87002 Limoges CEDEX FRANCE
www.legrand.com


US:
Question? We're here to help.
Phone: 1-877-833-3303 8:00 a.m. to 8:00 p.m. EST (M-F)
Email: smartlighting@legrand.us
Chat: <https://www.legrand.us/radiant/smart-lighting.aspx>
(Click on the chat icon to open a dialogue box)

Nécessite l'installation préalable d'un pack de démarrage connecté "... with Netatmo".

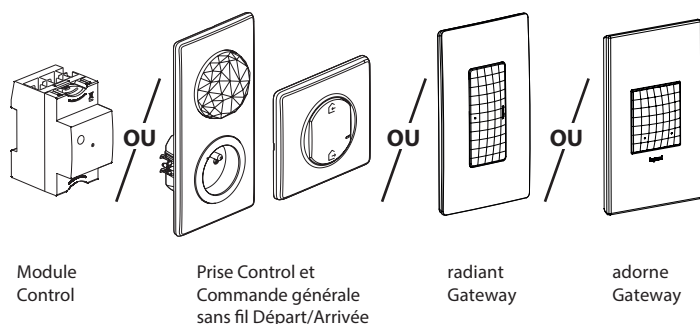

Composition du pack :

Télécommande de poche
4 scénarios

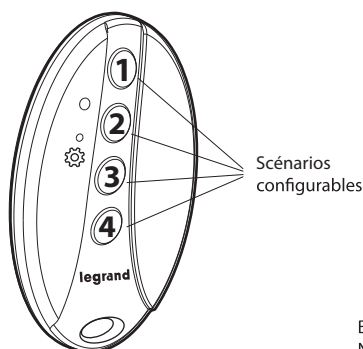



Bande de fréquences : 2,4 à 2,4835 GHz
Niveau de puissance : < 100 mW

5


① Démarrez la configuration de la télécommande de poche 4 scénarios

Appuyez au centre de la commande générale Départ/Arrivée **jusqu'à** ce que le voyant de celle-ci s'allume brièvement en vert, **puis relâchez l'appui**. Tous les voyants des produits câblés s'allument en vert fixe.

Appuyez sur le bouton de la Gateway pendant 5 secondes **puis relâchez l'appui**. Le voyant devient vert fixe ou suivez l'application pour ajouter un appareil.

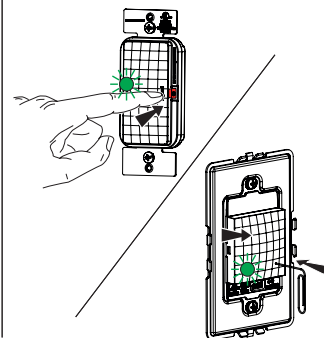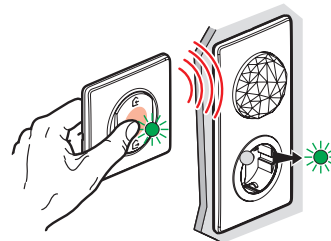


② Préparez la télécommande de poche 4 scénarios

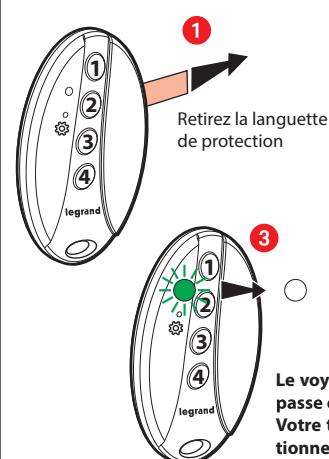

6

③ Finalisez la configuration

Pour terminer votre installation, appuyez brièvement au centre de la générale sans fil, ou le bouton de la Gateway.

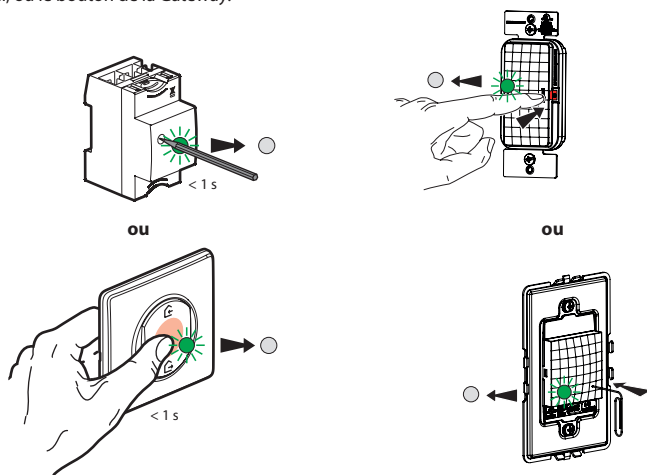

Tous les voyants des produits s'éteignent.

Personnalisez vos scénarios

depuis l'application **Legrand Home + Control** (section **Paramètres/Scénarios**)
Laissez-vous guider




www.legrandoc.com/064875
Legrand - Pro and Consumer Service
BP 30076 87002 Limoges CEDEX FRANCE
www.legrand.com

7

Remplacement de la pile

Si la LED clignote 3 fois en rouge quand vous appuyez sur la télécommande de poche 4 scénarios → **pile faible**

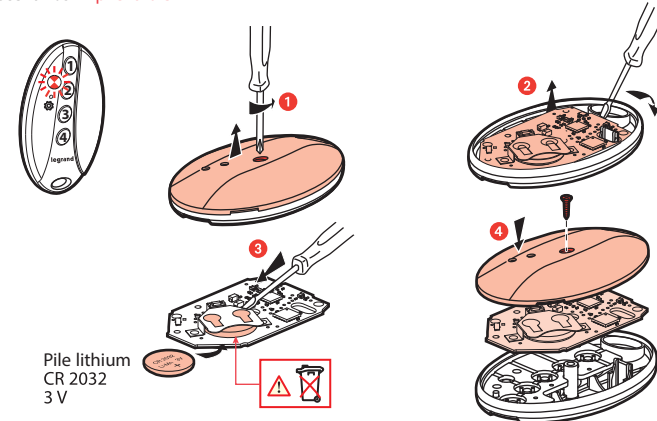

DÉCLARATION UE DE CONFORMITÉ SIMPLIFIÉE

Le soussigné,

Legrand

déclare que les équipements radioélectriques cités sur cette notice
sont conformes à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante :

www.legrandoc.com

8