


P R I T O M

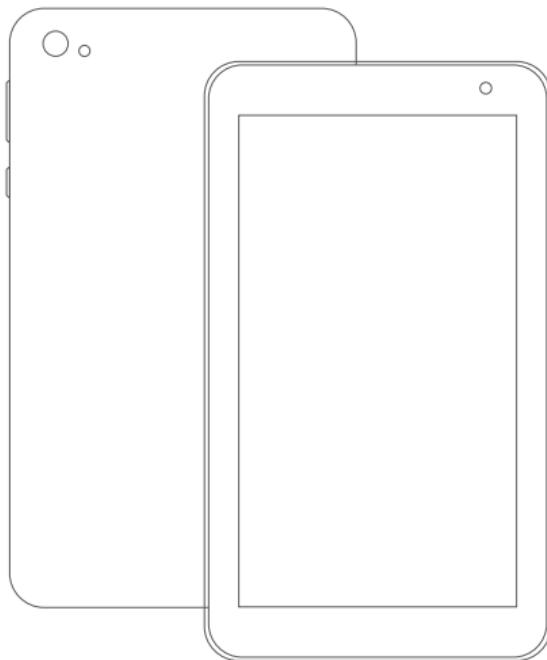

TRONPAD P7


USER GUIDE

Please read this instruction throughly before using this product and keep it for future reference.

P R I T O M

FUNCTION OVERVIEW	01
GETTING STARTED	01
HOME SCREEN	02
SETTING BASICS	03
APP MANAGEMENT	06
INTERNET NAVIGATION	07
MULTIMEDIA	09
SPECIFICATION	09
TROUBLESHOOTING	10

FUNCTION OVERVIEW

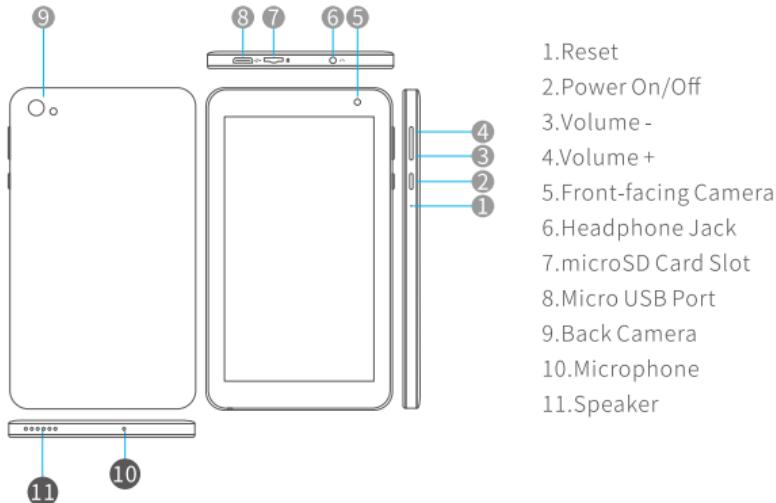

- 1.Reset
- 2.Power On/Off
- 3.Volume -
- 4.Volume +
- 5.Front-facing Camera
- 6.Headphone Jack
- 7.microSD Card Slot
- 8.Micro USB Port
- 9.Back Camera
- 10.Microphone
- 11.Speaker

GETTING STARTED

Power On/Off

Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.

Press and hold the power button for 2s, then release it. It will show **Power Off** and **Restart** on the screen. Tap **Power Off** to turn off the tablet.

Press and hold the power button for 5s to do a forced shutdown when it's frozen.

Battery

A rechargeable Li-ion battery is installed in the tablet.

We suggest you drain the battery completely once a month if only use your tablet occasionally.

DO NOT dispose of tablet in a fire.

Sleep Mode

Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is ON; press again to wake it up.

Tip:

Go to **Settings > Display > Sleep** to set the time of entering the **Sleep Mode**.


HOME SCREEN

Icons on the Bottom Menu



1. Volume Down
2. Back
3. Home Screen
4. Recent Activities
5. Volume Up
6. Apps Collection

Wallpapers, Widgets and Home Settings

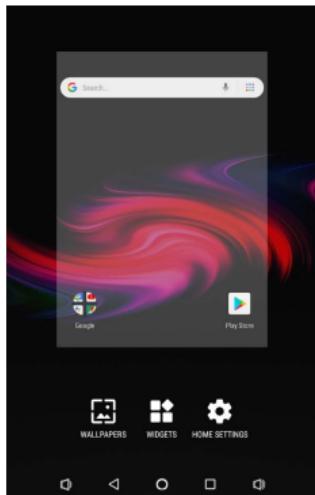

Tap and hold the empty section of a Home screen, **WALLPAPERS**, **WIDGETS** and **HOME SETTINGS** will be displayed.


Tap **WALLPAPERS** icon to change the current wallpaper of the tablet from the default wallpapers or your photos.

Tap **WIDGETS**, touch and hold any widget (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding to X.

Tap **HOME SETTINGS** to enable/disable Add icon to Home screen. This is applicable to the new Apps installed from Play Store.

SETTING BASICS

Quick Settings

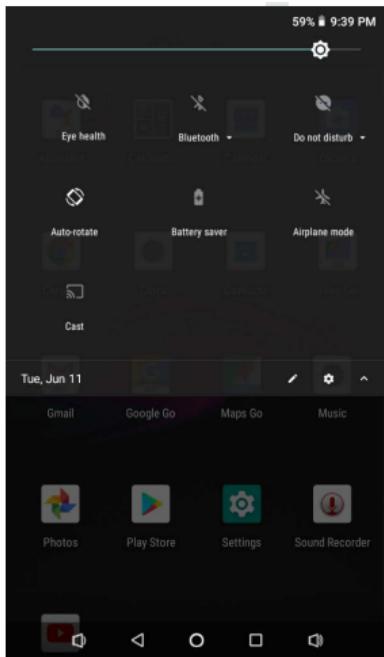

Swipe down from the top of the screen to access Quick Settings.

- ✖ : Eye protection mode reduces eye damage in different environments
- Bluetooth : Bluetooth. Enable/disable the Bluetooth on the tablet; pair with other Bluetooth devices or view paired devices
- ✖ : Do Not Disturb. Block sounds or vibrations according to the different modes (Total silence, Alarms only and Priority only)
- Portrait/Auto-rotate/Landscape
- Battery Saver : Battery Saver. Enable/disable the low power mode
- ✖ : Airplane Mode. Turn on/off all the network connectivity
- Cast : Cast. Mirror the display of the tablet to compatible devices, e.g. TV box or Fire TV Stick

Tap the icon to change the options in the Quick Settings.

More Settings

Swipe down from the top of the screen, then tap the icon to enter the detailed Setting interface. Or, tap the **Settings** icon on the Home screen to enter.

Network & Internet

- *Connect to any working Wi-Fi
- *Enable/disable the Airplane Mode
- *Monitor the data usage

Connected devices

- *Turn on/off Bluetooth
- *Pair with Bluetooth devices and check the paired devices
- *Cast device and check the cast device
- *Add and check printers

Apps & notifications

- *Check the Apps recently opened
- *Check all the Apps on the tablet
- *Set the App permissions
- *Uninstall the third-party Apps
- *Adjust App notification settings
- *Clear the cache of the Apps

Battery

- *Display the remaining battery power as a percentage
- *Enable/disable the **Battery Saver**
- *Adjust the time of entering the **Sleep Mode**

Display

- *Adjust the screen brightness
- *Adjust the font size and display size
- *Set a screen saver
- *Change the wallpaper
- *Adjust the time of entering the **Sleep Mode**

Sound

- *Set volume levels for media, alarms, and notifications
- *Set preferences of **Do Not Disturb**
- *Set the tunes for notifications and alarms
- *Turn on/off the sound for screen lock, charging and touch

Screenshot

- *Set the delay time for a screenshot
- *Set the location folder of screenshots
- *Switch on/off **Show the screenshot button in the statusbar**

Tip:

Press the volume down button and the power button together to capture a screenshot. Or, switch on **Show the screenshot button in the statusbar**, then tap the  icon on the bottom menu to capture a screenshot.

Storage

*View and manage your storage space


Security & location

*Set screen lock pattern, e.g. password, PIN, Swipe etc.

*Enable/disable all the notifications while the screen is locked

*Turn on/off the location services for specific Apps

*Set to show/hide the password when input a password

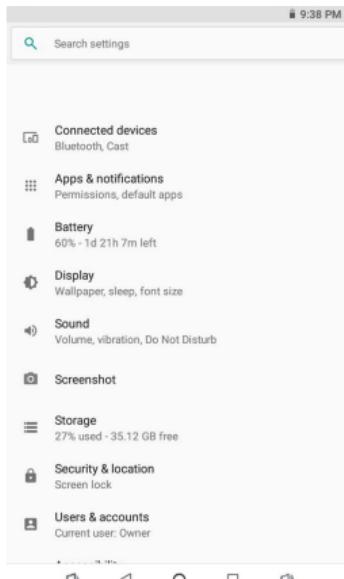

Users & accounts

*Add and manage the user accounts on your tablet

Accessibility

*For vision and hearing impaired users, manage settings for **Screen readers**, **Subtitle**, and more

Google™

*Set the preferences for Google related services

System

* Set Language

Tap **Languages & input > Languages > +add a language** to add your language. After adding, hold and slide the **≡** to the top to change the language.


* Restore factory setting

Tap **Reset options > Erase all data (factory reset)** to restore the factory setting.

*Set the date and time

*Turn on/off the **Backup**

*Check the detailed information about the tablet

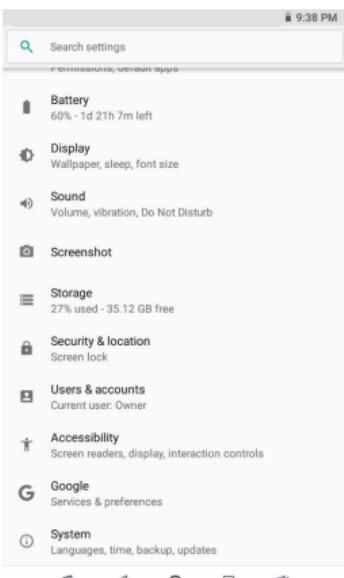

● APP MANAGEMENT

App Download and Installation

1. Tap and open Play Store on the Home screen;
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen


Tap and hold the App, then slide to X to remove it from your Home screen.


Uninstall the App

Tap and hold the App, then slide to the trash bin to uninstall the App.

Clear the Cache of the App

1. Go to Settings > Apps & notifications;
2. Select an App > Storage > CLEAR CACHE.

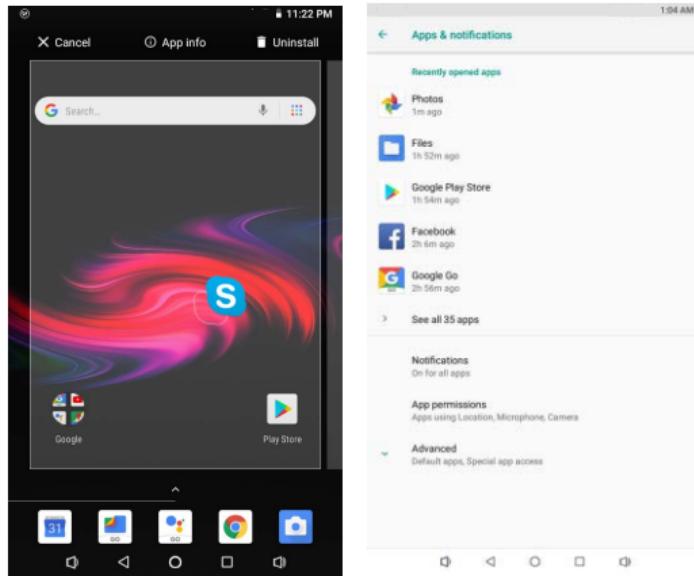

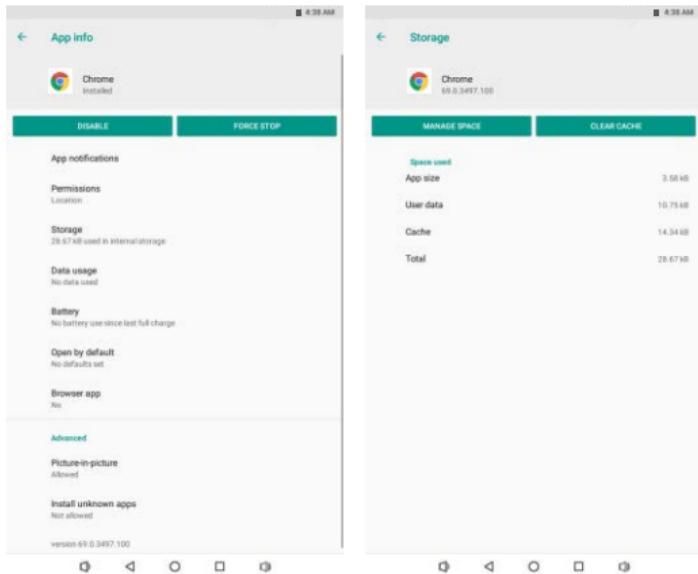

● INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet.

You may use the **Chrome** browser pre-installed or use another browser downloaded from Play Store.

● MULTIMEDIA



Connecting to the Computer

1. Connect your tablet to the computer with USB cable and go to **Quick Settings**;
2. Tap **Android™ Systems**. **USB charging** this device > **Tap for more options** > **Use USB to**;
3. Select **Transfer files**;
4. Go to your computer and find your tablet Z1 to transfer files between your tablet and computer.

Tip:


Select **Charging this device** to charge your tablet;

Select **Transfer photos (PTP)** to transfer photos between the devices.

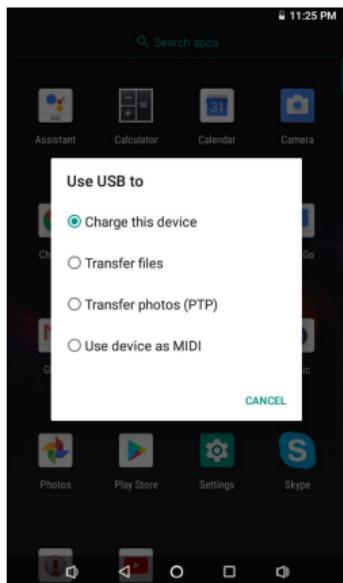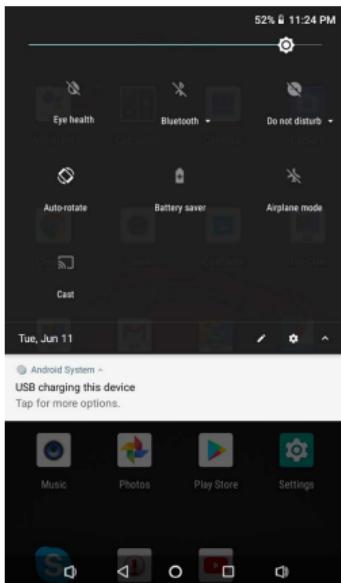

Connecting to an External Device

1. Install a microSD card into the microSD card slot and go to Quick Settings;
2. Tap **New SD card detected** or **Set Up** prompt;
3. Set the microSD card as a portable storage by selecting **Use as portable storage**.
Enter microSD Card storage to move files between the card and tablet.

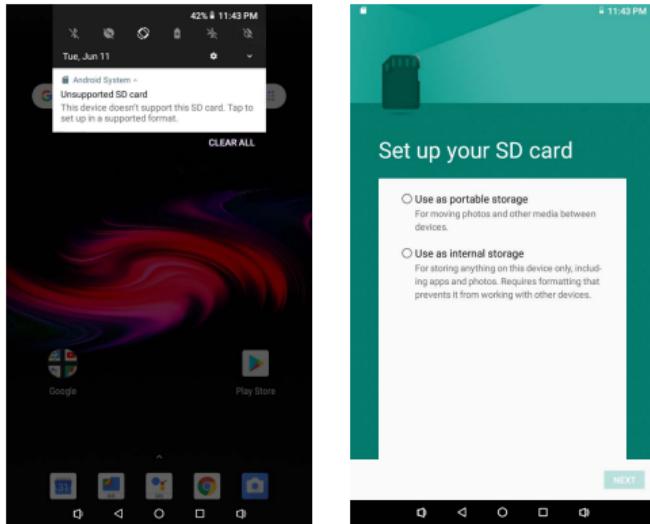

● SPECIFICATION

Size	7"	CPU	64-bit Quad-Core Cortex A35
Chipset	RK3326	RAM	1GB
GPU	Mali-G31	Display	IPS/1024*600
ROM	32GB	Power Supply	DC 5V 2A
Front-facing Camera	2MP	Touch	Multi-touch
Back Camera	2MP	Ports	Micro USB Port/ microSD Card Slot
Battery	3000mAh	Operating System	Android 8.1

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- *Reboot your tablet after charging for 30 minutes;
- *Press the power button to check if the tablet is in the **Sleep Mode**;
- *Press and hold the power button for 5s to turn off the tablet, then reboot it;
- *Press the **Reset** button with a pin to reboot the tablet.

Q2. The tablet doesn't charge.

- *Make sure the USB cable is properly plugged into the charging port;
- *Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- *Uninstall the App with the error message, then download and install again;
- *Press the **Reset** button with a pin to reboot the tablet.

Q4. The tablet cannot be detected by the computer.

- *Make sure the tablet is powered on;
- *Try another USB cable;
- *Try another USB port on the computer;
- *Instead of **Charge this device**, choose **Transfer files** or **Transfer photos (PTP)** when connecting the tablet to the computer.

Q5 The storage space of the tablet is not enough.

- *Delete the Apps you don't use;
- *Clear the cache of the Apps regularly;
- *Install a microSD card to expand the storage.



User File

User name		Sex		Age	
Address					
Telephone			Zip		
Purchasing address					
Retail Price		Odd Numbers			
commodity name and specification		Model No			
Dealer signature		User signature			

Guarantee Item

- 1 months upon date of purchase, if there is function problem, We should offer the Same item subject to goods and packing maintain perfect.
- 1 year upon date of purchase, we will guarantee to keep the goods in repair.(not including fittings)
- Guarantee service is subject to normally using.
- All of damage by man-made(tear open the housing, tear off the sticker,unnormally using), or losing this card, we will not guarantee.

• FCC Statement

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- The device has been evaluated to meet general RF exposure requirement . The device can be used in portable exposure condition without restriction.

CUSTOMER SUPPORT

US/CA: support@pritom-tech.com UK: support.uk@pritom-tech.com

FR: support.fr@pritom-tech.com DE: support.de@pritom-tech.com

IT: support.it@pritom-tech.com ES: support.es@pritom-tech.com

JP: support.jp@pritom-tech.com IN: support.in@pritom-tech.com