





Vaxhub2 User Manual

Contents

Foreword

| Getting Sta | rted |
|--------------------|------|
|--------------------|------|

| Initial setup | 3 |
|--------------------------------------|-----|
| Connecting to the Internet | 3 |
| Connecting using Mobile Data | 4 |
| Charging your device | 4 |
| Safety Information | 4-7 |
| Screen and Display | |
| Home screen | 8 |
| Split-screen mode | 8 |
| Security and Backup | |
| Backing up and restoring data | 8 |
| File management | 9 |
| Personal Information & Data Security | |
| Third Party Applications | 10 |
| Legal Notice | 11 |

Foreword

Read this guide carefully before using your device.

All pictures and illustrations in this document are for your reference only and may differ from the final product.

Some features in this guide may not be supported by certain devices or carriers.

Symbols and definitions

| Description Reminder | Description | Highlights important information and tips, and provides | |
|-----------------------|--|---|--|
| | Description | additional information. | |
| | Reminder | Indicates potential problems that may arise if proper care or | |
| Keininder | | attention is not given, such as device damage or data loss. Warns | |
| Wamina | you about potential hazards that could cause serious | | |
| Warning | | injury. | |

Getting Started

Initial setup

Ensure that the SIM card is inserted correctly before using your tablet for the first time. Read the Quick Start Guide for more information on how to set up your tablet. SIM cards are not supported on Wi-Fi only tablets.

Press and hold the power button to turn on your device. Follow the onscreen instructions to complete the initial setup.


- 1. Select your language and region and touch NEXT.
- 2. Read the content carefully, accept the user terms and conditions, and then touch AGREE > AGREE.
- 3. Read the service policy. Select AGREE and touch NEXT.
- 4. Your device will automatically search for available Wi-Fi networks. Follow the onscreen instructions to connect to a network.
- 5. Read the Google terms and conditions and touch NEXT.
- 6. You can configure your device in two ways:
 - Follow the onscreen instructions to restore a backup.
 - Follow the onscreen instructions to copy data from another device, or touch SET UP AS NEW PHONE > OK to skip this step.
 - If you choose to skip this step, you can still import data from another device later by touching Settings > Advanced settings > Data transmission.
- 7 Touch **GET STARTED** to complete the settings. Your device is now ready to use.

Connecting to the Internet

Connect to Wi-Fi networks effortlessly with your device.

Connecting to a Wi-Fi network

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch and hold $\widehat{\,\widehat{\,\widehat{\,}\,}}$ to open the Wi-Fi settings screen.
- 3 Switch on Wi-Fi. Your device will list all available Wi-Fi networks at your location.
- 4 Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.

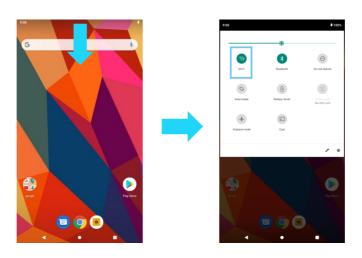

Connecting using mobile data

- Before using mobile data, ensure that you have a data plan with your network provider to avoid incurring excessive data charges. Mobile data is not supported on Wi-Fi only tablets.
- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch (1) to enable mobile data.
 - Disable mobile data when not required so as to save battery power and reduce data usage.

Charging your device

Your device displays a low battery warning when the battery is nearly empty. Charge your device immediately to prevent it from switching off automatically.

Using a charger to charge your device

Connect your device to a socket using the factory-provided charger and USB cable.

- 1 If your device does not respond when you press the power button, the battery is probably empty. Charge your battery for at least 10 minutes (use the charger that came with your device), and then restart your device.
 - 1 Your device automatically conducts a safety check when you connect it to a charger or other devices. If your device detects that the USB port is wet, it will automatically stop charging and display a safety message. If this message is displayed, unplug the USB cable from your device and allow the USB port to dry out completely to avoid damaging your device or battery.

Using a USB port to charge your device

If you do not have access to a charger, you can charge your device by connecting it to a computer with a USB cable.

- 1. When you use a USB cable to connect your device to a computer or another device, allow access to device data? will be displayed in a popup dialog.
- 2. Touch No, charge only.

If another USB connection mode has been selected, swipe down from the status bar to open the notification panel. Touch **File transfer via USB**, and then select **Charge only**.

Safety information

- Only use genuine Rhino batteries, chargers, and USB cables to charge your device. Third-party accessories are a potential safety hazard and may impair your device's performance.
- You can recharge your battery many times, but all batteries have a limited lifespan. If you notice a significant deterioration in your device's battery life, purchase a genuine Rhino replacement battery. Do not attempt to remove built-in batteries. If your device has a built-in battery, contact an authorized Rhino service center for a replacement. If the battery is removable, replace it with a genuine Rhino battery.

- Your device may become warm after prolonged use or when exposed to high ambient temperatures. If your device becomes hot to the touch, stop charging it and disable unnecessary features. Place your device in a cool location and allow it to cool down to room temperature.
 Avoid touching the surface of your device for prolonged periods when it becomes hot.
- Charging times may vary depending on the ambient temperature and the remaining battery level.
- Avoid using your device when it is charging. Do not cover your device or the charger.
- For more information on charging and battery care, visit http://Rhino.com/ and search for your device's user guide.

Battery status information

The battery status is indicated by your device's indicator light and the battery icon in the status bar.


| Status indicator | Battery icon | Battery status |
|------------------------|--------------|--|
| Blinking or steady red | | Less than 4% remaining |
| Red | | Charging, less than 10% remaining |
| Orange | | Charging, 10–90% remaining |
| Green | | Charging, at least 90% remaining. If 100% is displayed next to the battery icon in the status bar, or a charging complete message is displayed on the lock screen, this indicates that charging is complete. |

Screen and Display

Home screen

About the home screen

Use the home screen to access your apps and widgets.

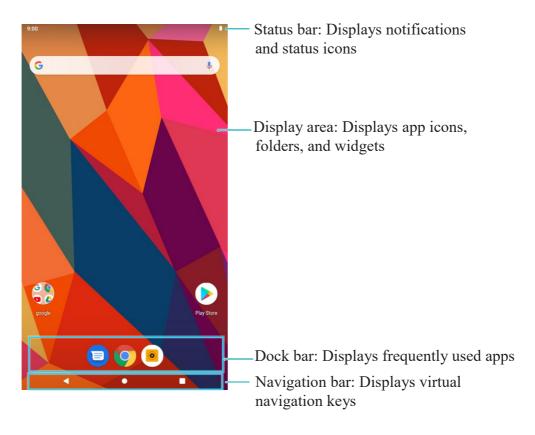

Basic screen gestures

Use simple touchscreen gestures to perform a variety of tasks, such as launch apps, scroll through lists, and enlarge images.



Touch: Touch an item once. For example, touch to select an option or open an app.



Double touch: Touch the target area of the screen twice in quick succession. For example, double touch an image in full screen mode to zoom in or out.



Touch and hold: Touch and hold the target area of the screen for at least 2 seconds. For example, touch and hold a blank area on the home screen to access the home screen editor.



Swipe: Swipe your fingers on the screen. Swipe vertically or horizontally to browse other home screens, scroll through a document, and more.



Drag: Touch and hold an item, and then move it to another position. For example, use this gesture to rearrange apps and widgets on the home screen.



Spread fingers apart: Spread two fingers apart on the screen. For example, spread two fingers apart to zoom in on a picture or web page.



Pinch fingers together: Pinch two fingers together on the screen. For example, pinch two fingers together to zoom out on an image.

Backing up and restoring data

Back up data on your old device to a microSD to avoid losing your files.

- 1. Open **Backup** on your old phone.
- 2. Select Back up > SD card > Next.

Select the data you want to back up and touch **Back up**. When prompted, enter a backup password. No backup password is required for photos, audio files, videos, or documents.

Set a password reminder to help you remember your password and prevent you from losing access to your files.

Backing up data to your phone's internal storage

Back up data to your phone's internal storage to avoid losing your files. Only back up smaller files.

- 1. Open Backup
- 2. Select Back up > Internal Storage > Next.
- 3. Select the data you want to back up and touch **Back up**. When prompted, enter a backup password. No backup password is required for photos, audio files, videos, or documents.
 - Set a password reminder to ensure you don't lose access to your files.
 - By default, backup files are saved to the **RhinoBackup** folder in **Files**.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorized use.
- Set your device screen to lock and set a password or unlock pattern.
- Periodically back up personal information stored on your SIM card, memory card or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Periodically back up personal information stored on your memory card or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorized access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Rhino or authorized third-party application providers.
- Using unauthorized third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Rhino.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

FCC Caution.

Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to the user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 7.9 inches between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Legal Notice

Copyright © VaxCare Corporation, Ltd. 2017. All rights reserved.

This document, whether in part or whole, shall not be reproduced or transmitted in any way, shape, or form without the prior written consent of VaxCare Corporation and its affiliates.

The product described in this document may include software that is the copyright of Rhino or its licensors. Such software shall not be reproduced, distributed, modified, decompiled, disassembled, decrypted, extracted, reverse engineered, leased, assigned, or sublicensed unless such restrictions are prohibited by law or such actions are approved by the copyright holder.

company names mentioned herein may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed or the capacities and settings of the local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Therefore, the descriptions herein may not exactly match the purchased product or its accessories.

Rhino reserves the right to change or modify any information or specifications contained in this document at any time without prior notice and without any liability.

Third-Party Software Statement

Rhino does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Rhino will not provide any warranty of any kind for third-party software and applications. Neither will Rhino provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Rhino does not guarantee the availability of any content or service. Third-party service providers provide content and services through network or transmission tools outside of the control of Rhino. To the greatest extent permitted by applicable law, it is explicitly stated that

Rhino shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Rhino shall not be responsible for the legality, quality, or any other aspects of any third-party software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source AndroidTM platform. Rhino has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Rhino does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL RHINO BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF RHINO ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

All applicable export or import laws and regulations must be complied with and all necessary governmental permits and licenses must be obtained before exporting or importing the product, including the software and technical data, described in this document.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.



